

# HARDI ENDURANCE X-BASE TABLE INSTALLATION INSTRUCTIONS

## Spec × CORTECH

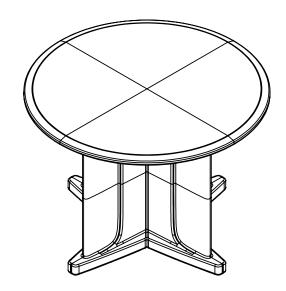


#### You will need:

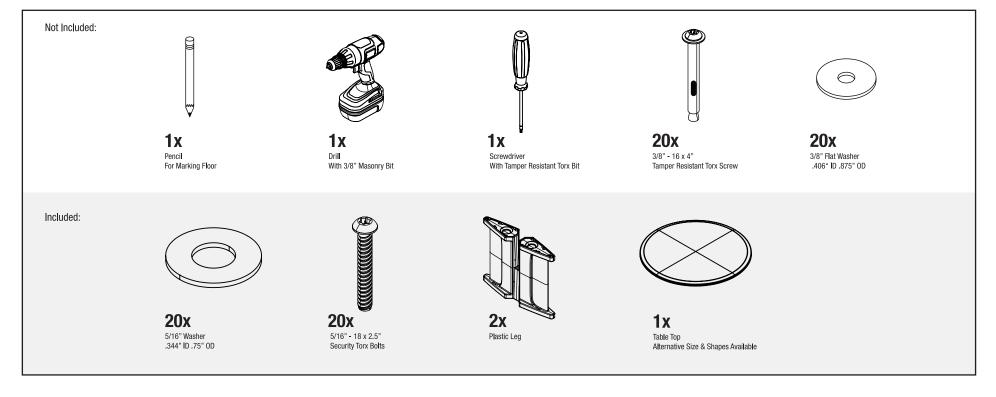


#### HARDI ENDURANCE X-BASE TABLE

## Spec x CORTECH


#### INSTALLATION INSTRUCTIONS

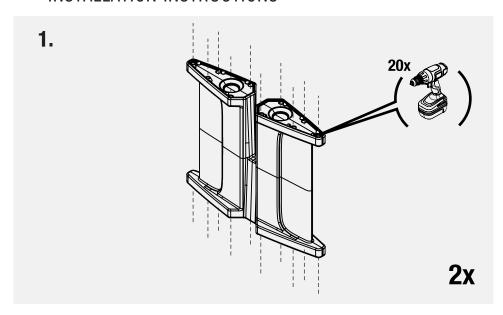


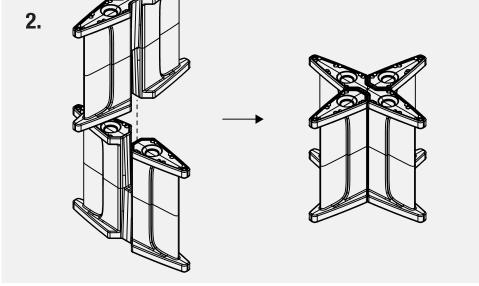

Drill through holes into the 10 bolt locations on the top of one of the leg pieces. Flip the leg over and drill through holes into the 10 bolt locations on the bottom of the leg. Repeat this process for the second leg.

Slide the two leg pieces together using center slots.

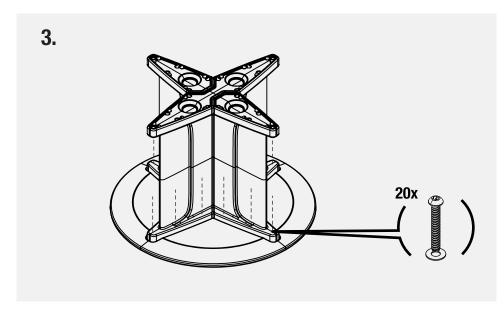

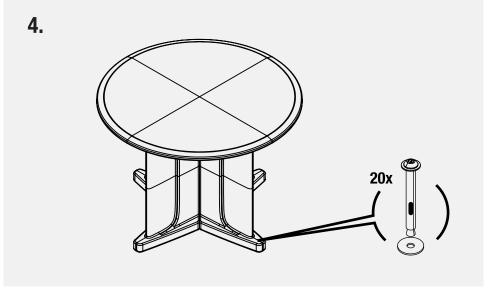


Flip table top over. Place assembled legs into pocket on bottom side of table top. Insert and tighten each table top screw 3-5 turns past finger tight.


Turn over table, Position table in desired location. Using a pen or pencil, mark the leg mounting location onto the floor. Drill holes in the locations where you marked the center of the floor mount hole. Hole depth should be 2.0" deep MINIMUM. Install concrete anchor and bolt to table to floor.



## Spec<sup>™</sup> × CORTECH


#### BALLASTING INSTRUCTIONS

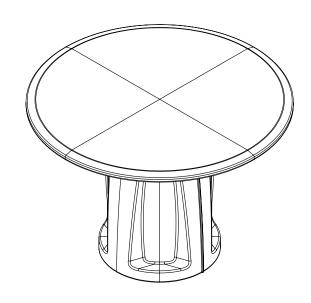


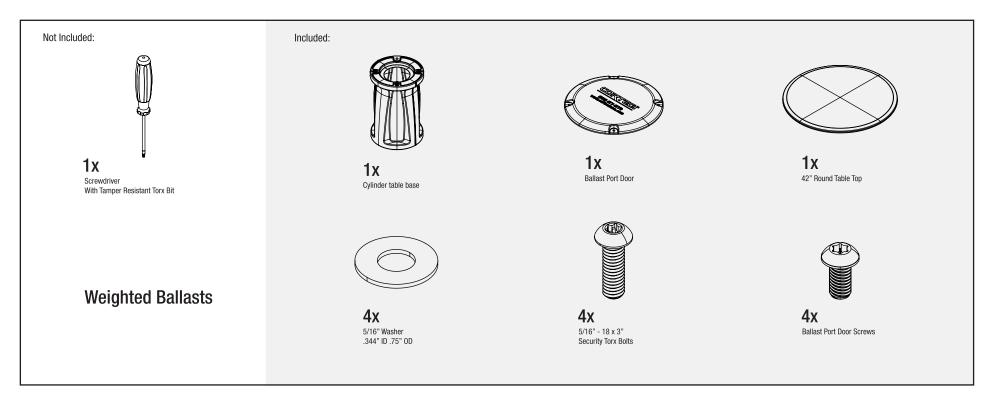


### Spec<sup>™</sup> × CORTECH


# HARDI ENDURANCE CYLINDER-BASE TABLE BALLASTING INSTRUCTIONS

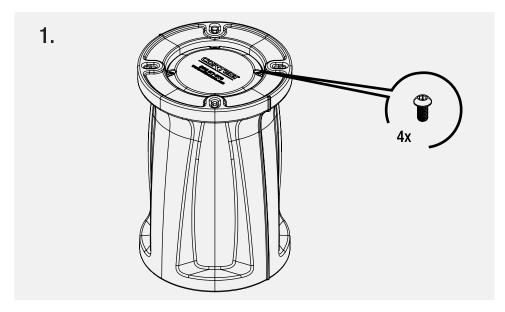




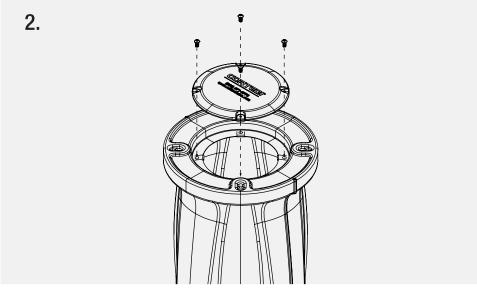

Add weighted ballasts into cavity and replace and ballast door and panel screws. Tighten panel screws 3-5 turns past finger tight.

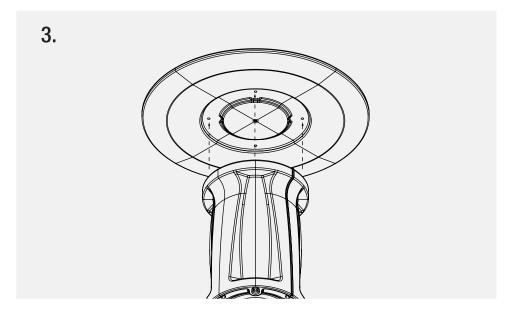


Align the table base to the center of the table top. Check fitment and make any necessary adjustments.

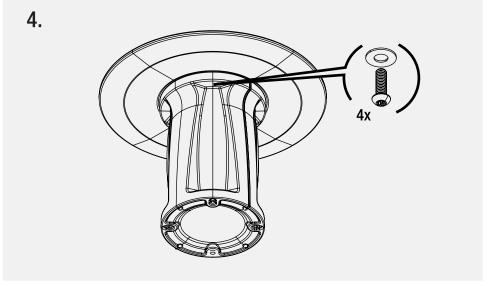


Insert and tighten each table top screw and washer 3-5 turns past finger tight.






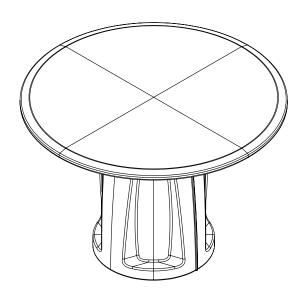


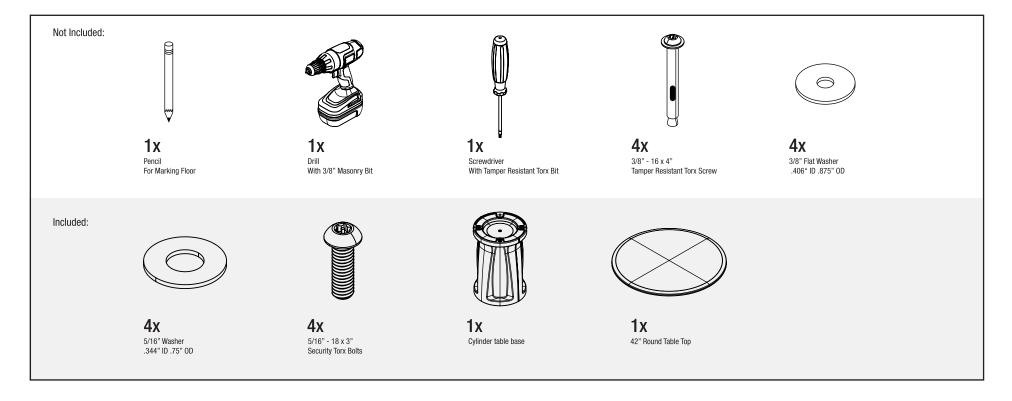



## HARDI ENDURANCE CYLINDER-BASE TABLE INSTALLATION INSTRUCTIONS

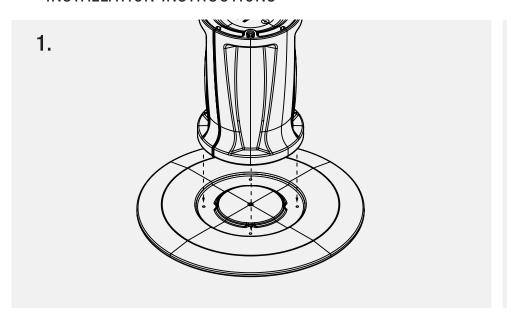


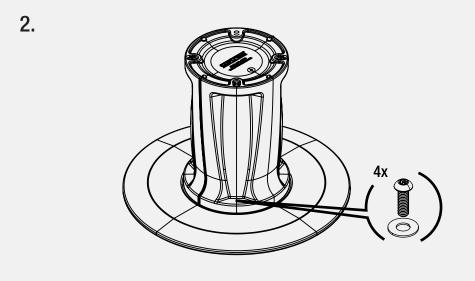

Insert and tighten each table top screw and washer 3-5 turns past finger tight.

Place table top face down on the floor. Align the table base to the center of the table top. Check fitment and make any necessary adjustments.



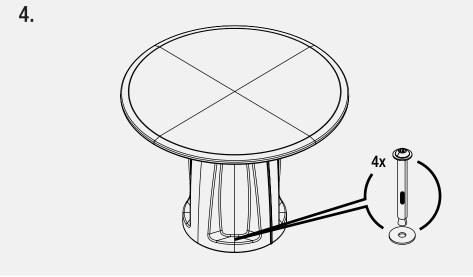

3.

Turn over table and position table in desired location. Using a pen or pencil, mark the base mounting location onto the floor.

Drill holes in the locations where you marked the center of the floor mount hole. Hole depth should be 2.0" deep MINIMUM. Install concrete anchor and washer. Bolt the table to floor.