

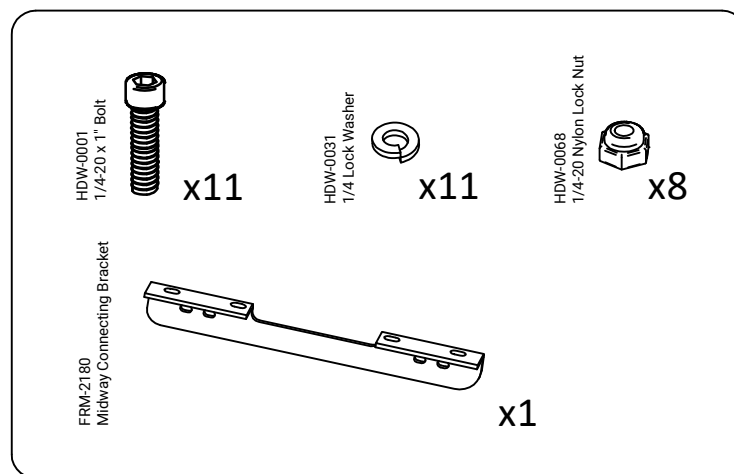
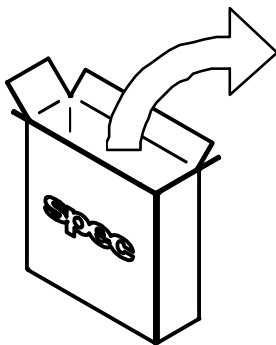
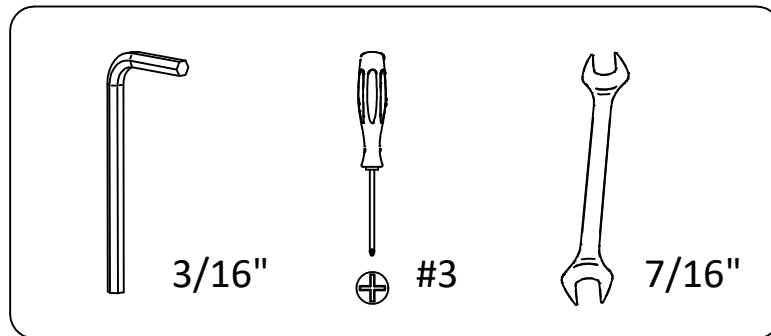


# MIDWAY




## Configured Seating

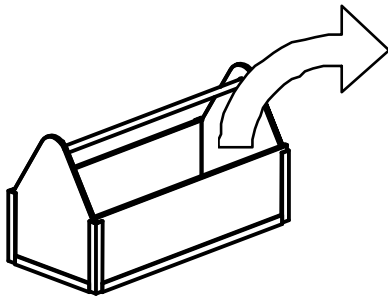


# 1

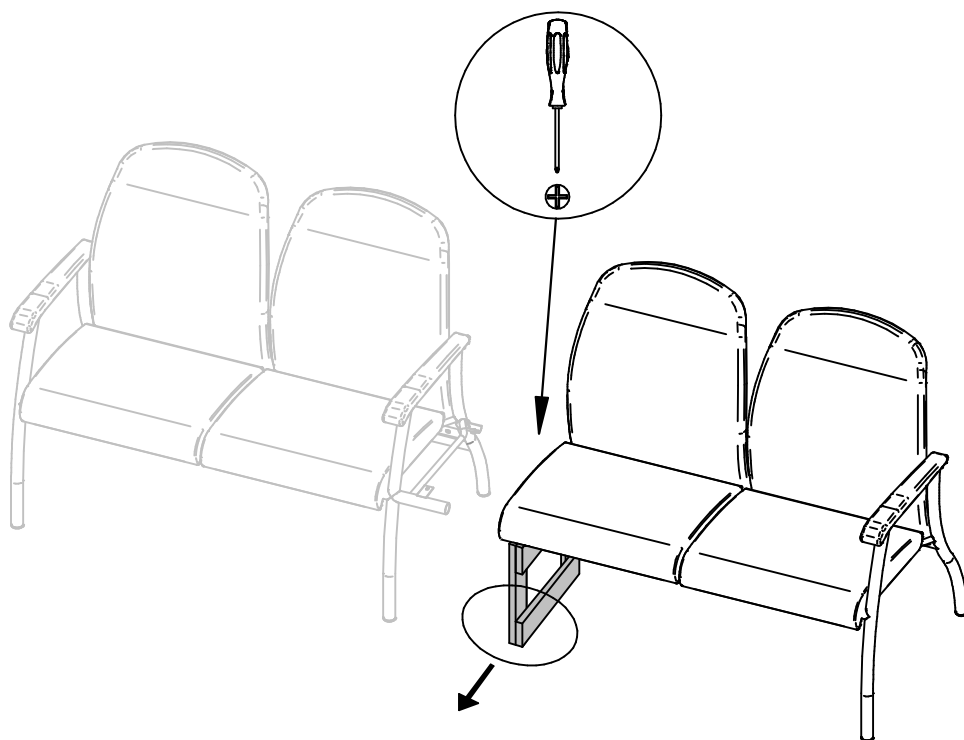

# 2

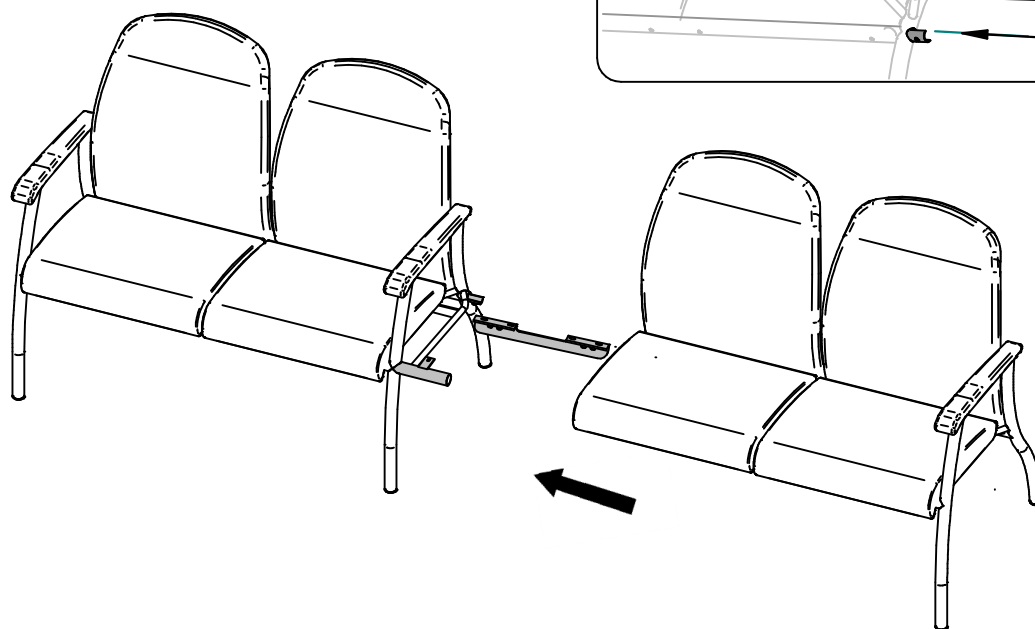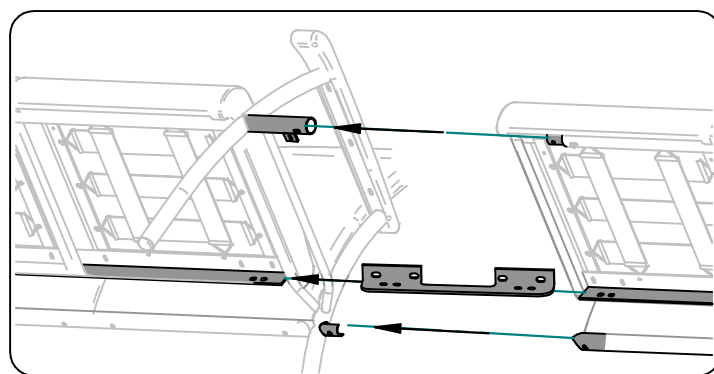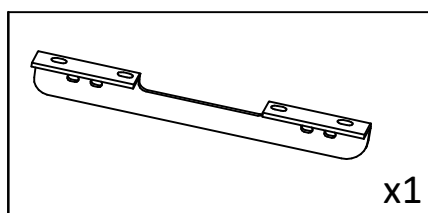

# 3

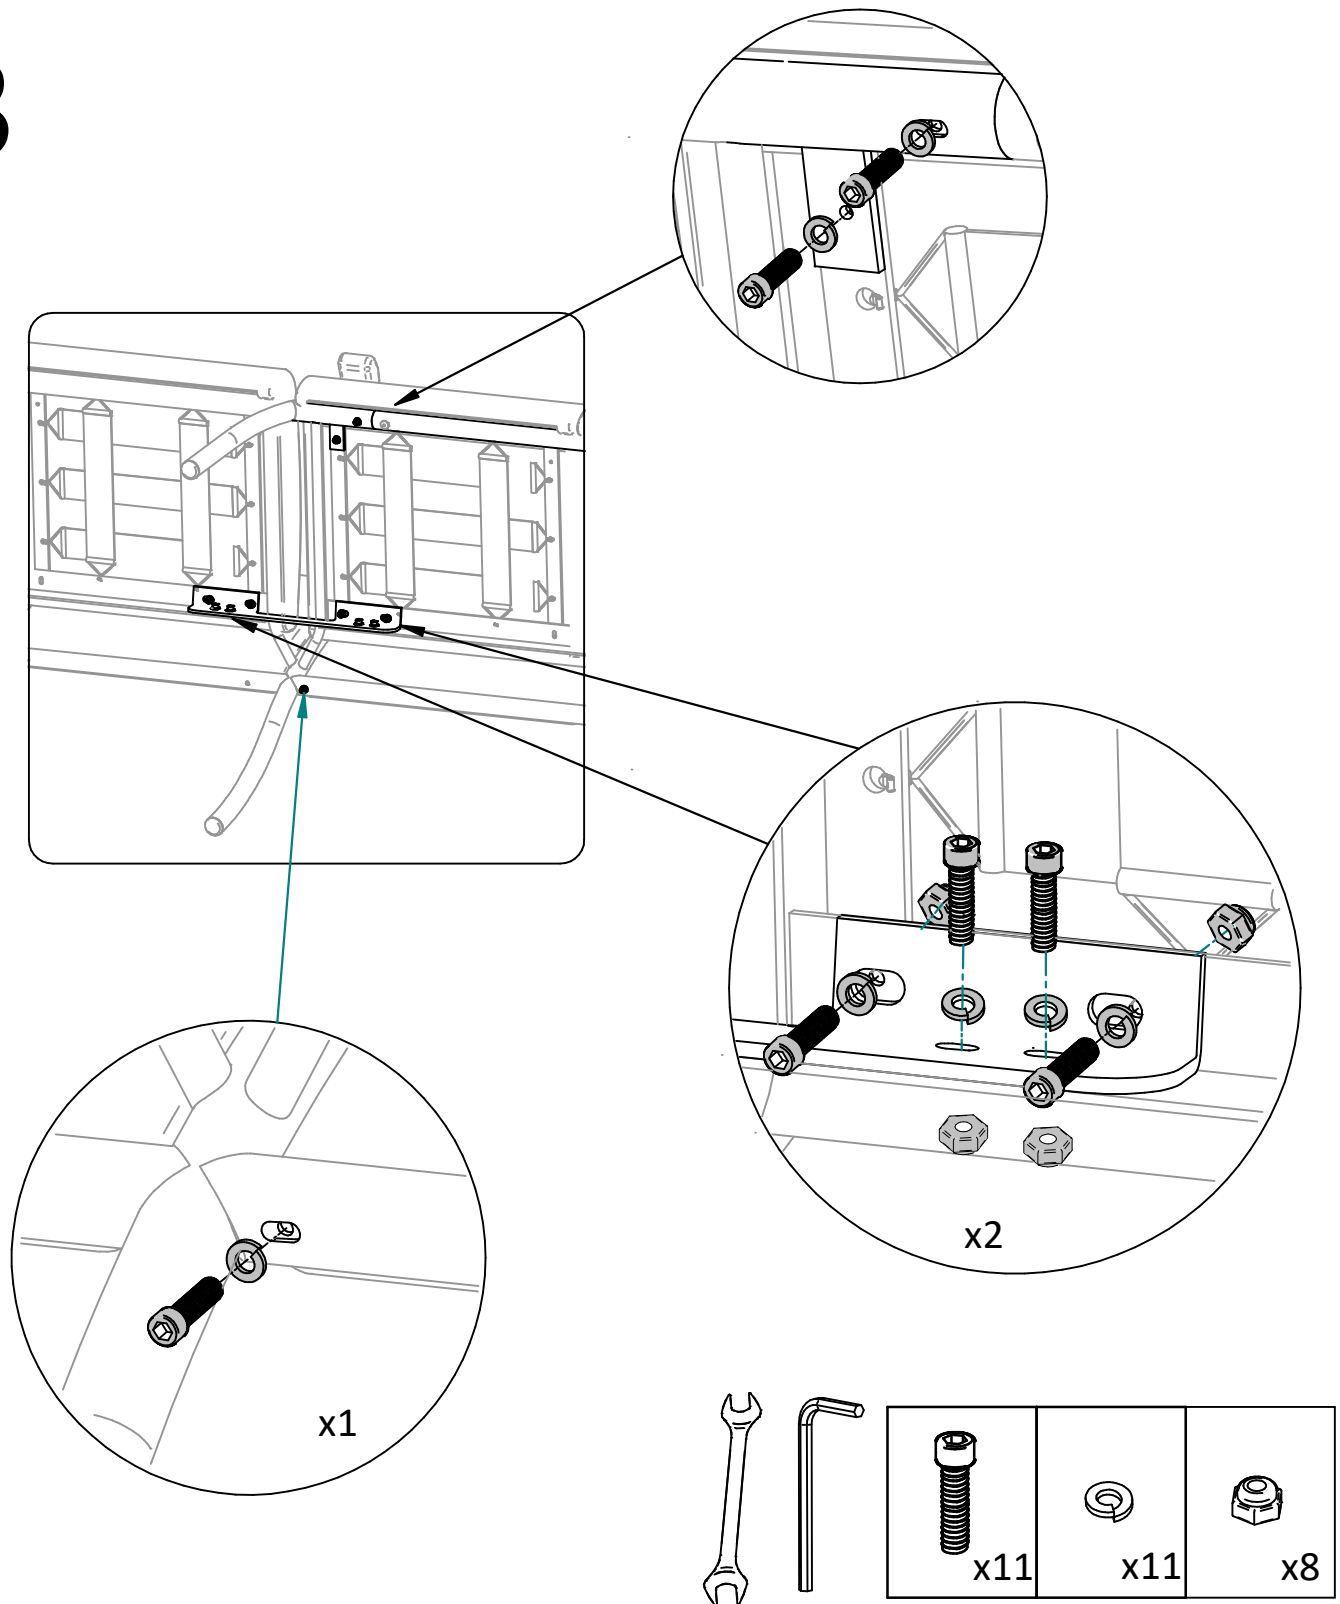


**Spec Furniture Inc.**

165 City View Drive, Toronto ON, M9W 5B1


P: 416.246.5540 | F: 416.246.5547

E: [specit@specfurniture.com](mailto:specit@specfurniture.com) | [specfurniture.com](http://specfurniture.com)

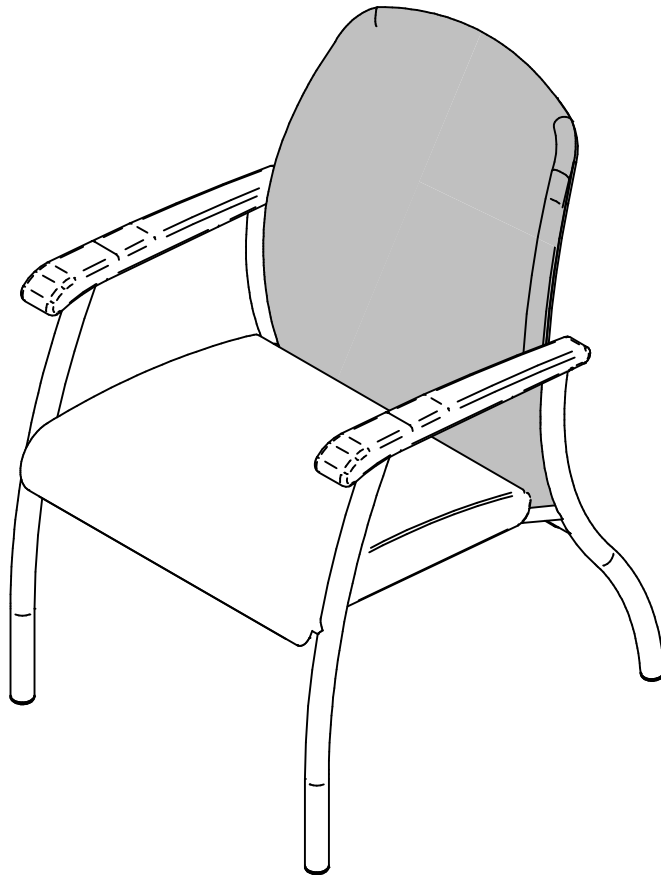


# MIDWAY

## Replacement Covers

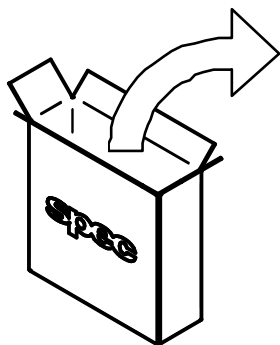

**x1**  
Mesh Back

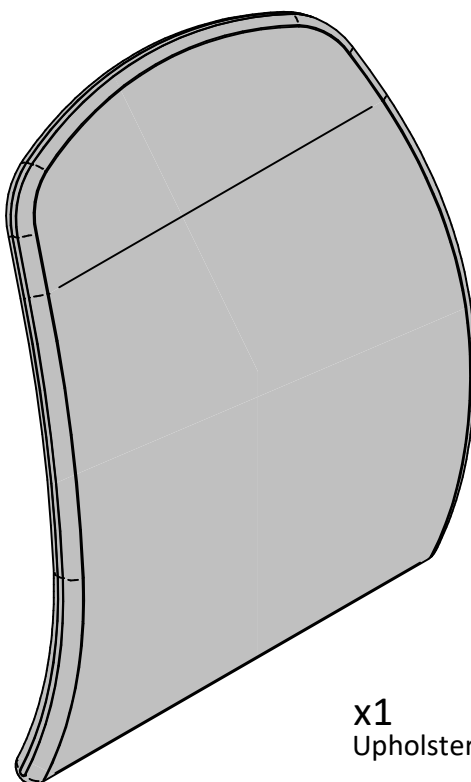

**x1**  
Upholstered Cover

# 1

Pull the mesh on with the furry side on the front.



---


# 2

Pull the front of the cover around the back and fasten on the velcro, exposing the furry side up.



# 3

Fasten the loop velcro on the mesh to the furry sde, already fixed to the chair.

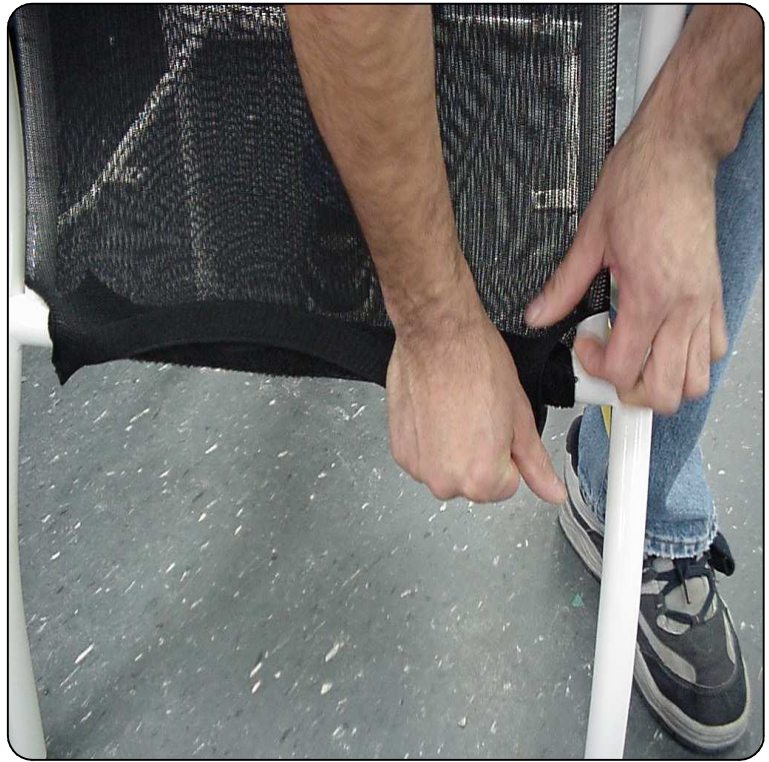

# 4

Pull the upholstered cover over the mesh, the padded side to the front, working form the top.





# 5

Pull the cover down.



---

# 6

Close the velcro.



**Spec Furniture Inc.**

165 City View Drive, Toronto ON, M9W 5B1

**P:** 416.246.5540 | **F:** 416.246.5547

**E:** [specit@specfurniture.com](mailto:specit@specfurniture.com) | [specfurniture.com](http://specfurniture.com)