

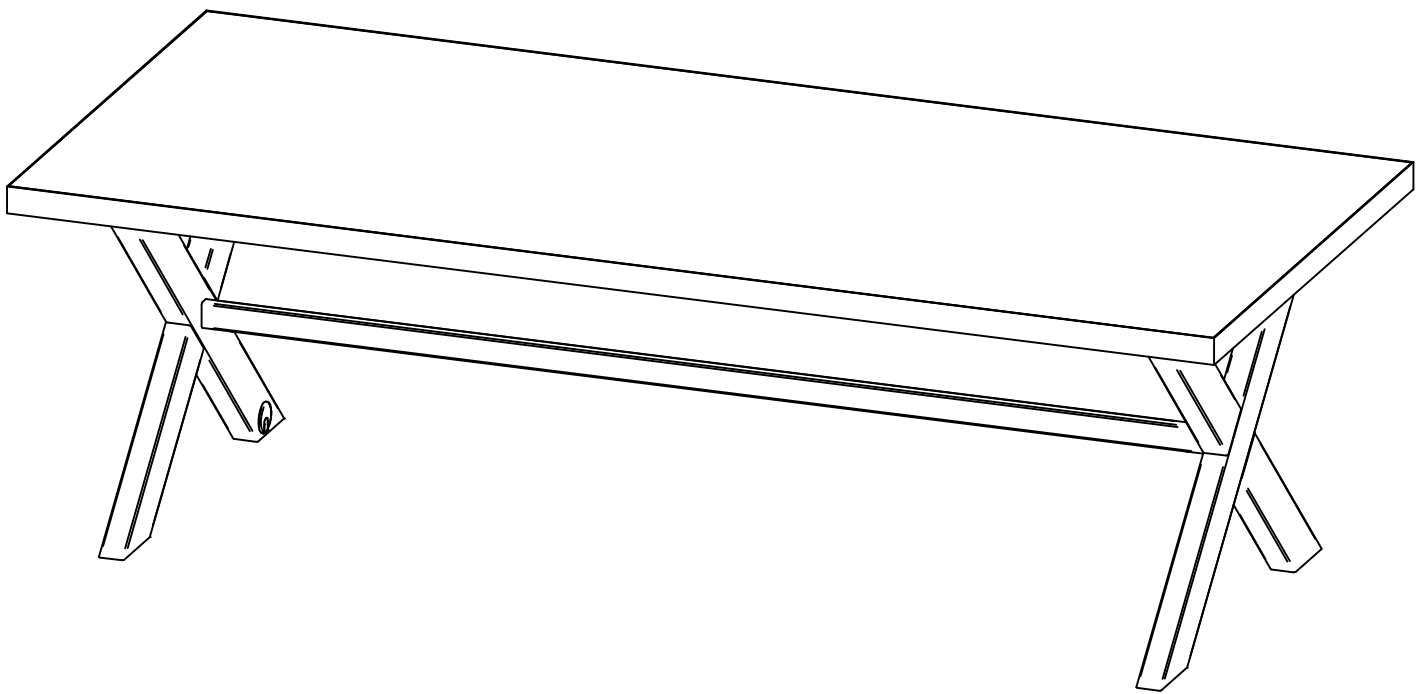
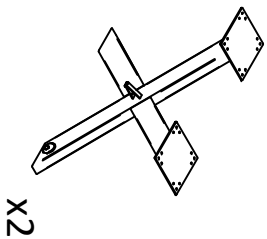
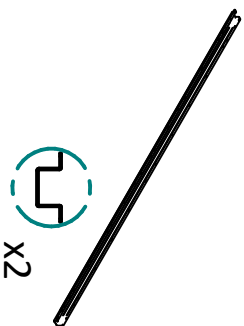
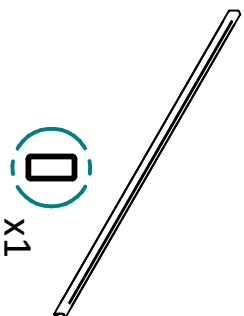
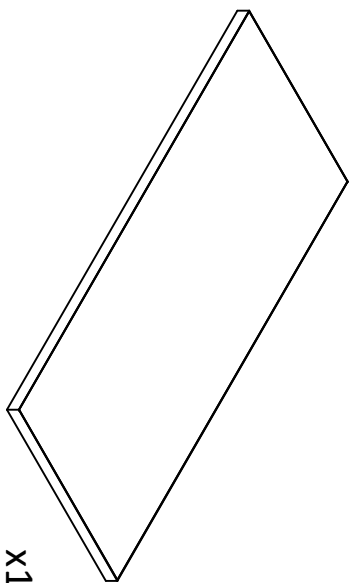
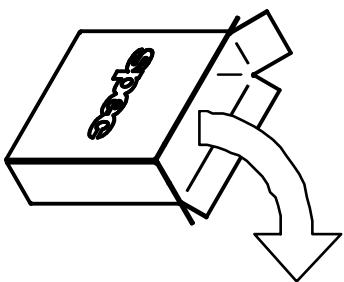




ANNEX

Installation Instructions

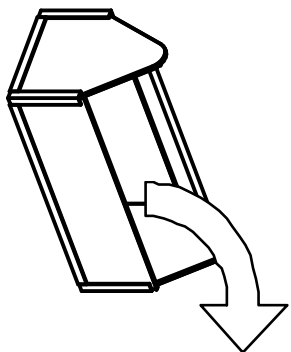

HDW-0028
#12 x 7/8" Wood Screw



x96




HDW-0009
1/4-20 x 5/8" Bolt






x4

Note: Do not over-tighten fasteners.


1

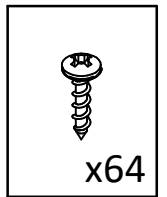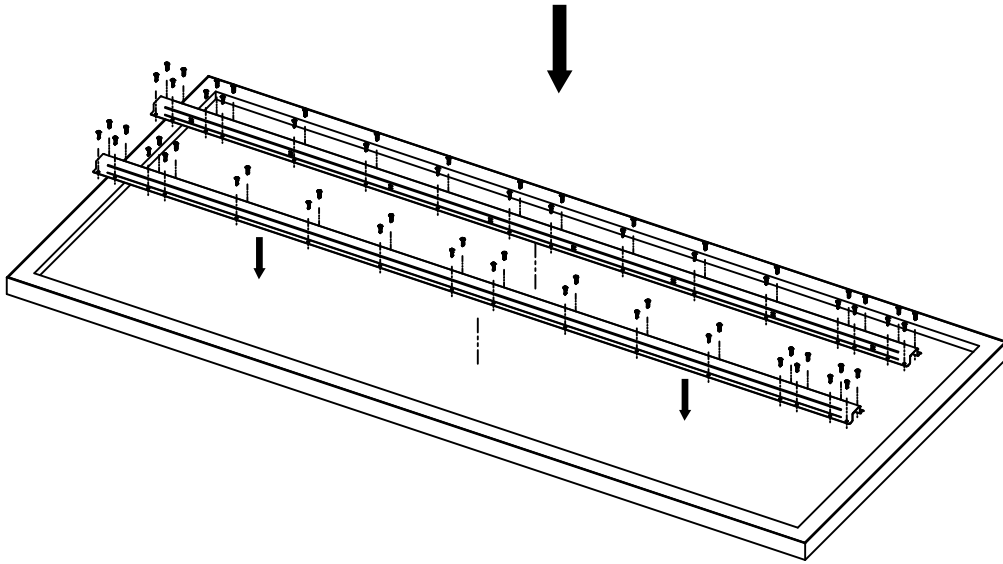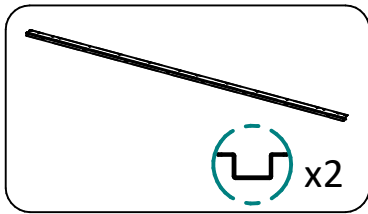


2

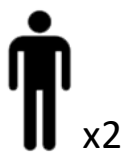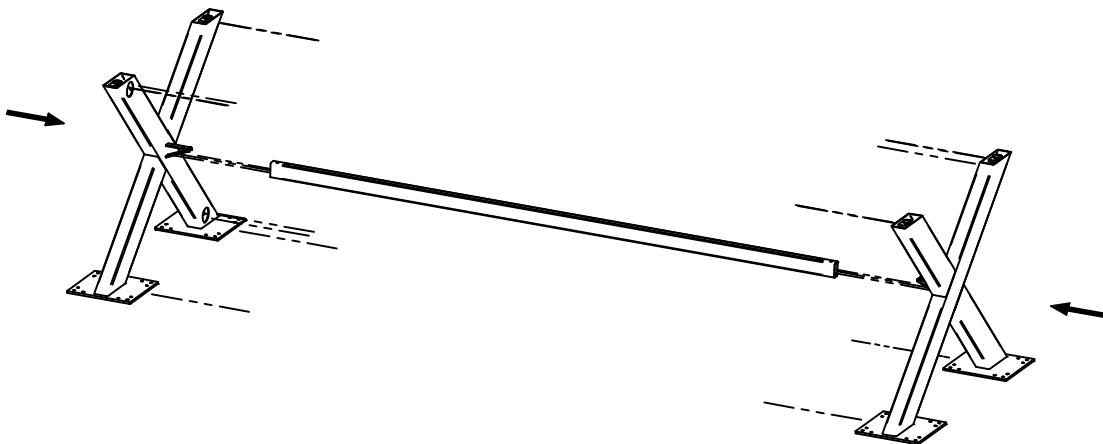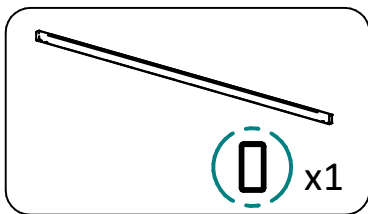



3

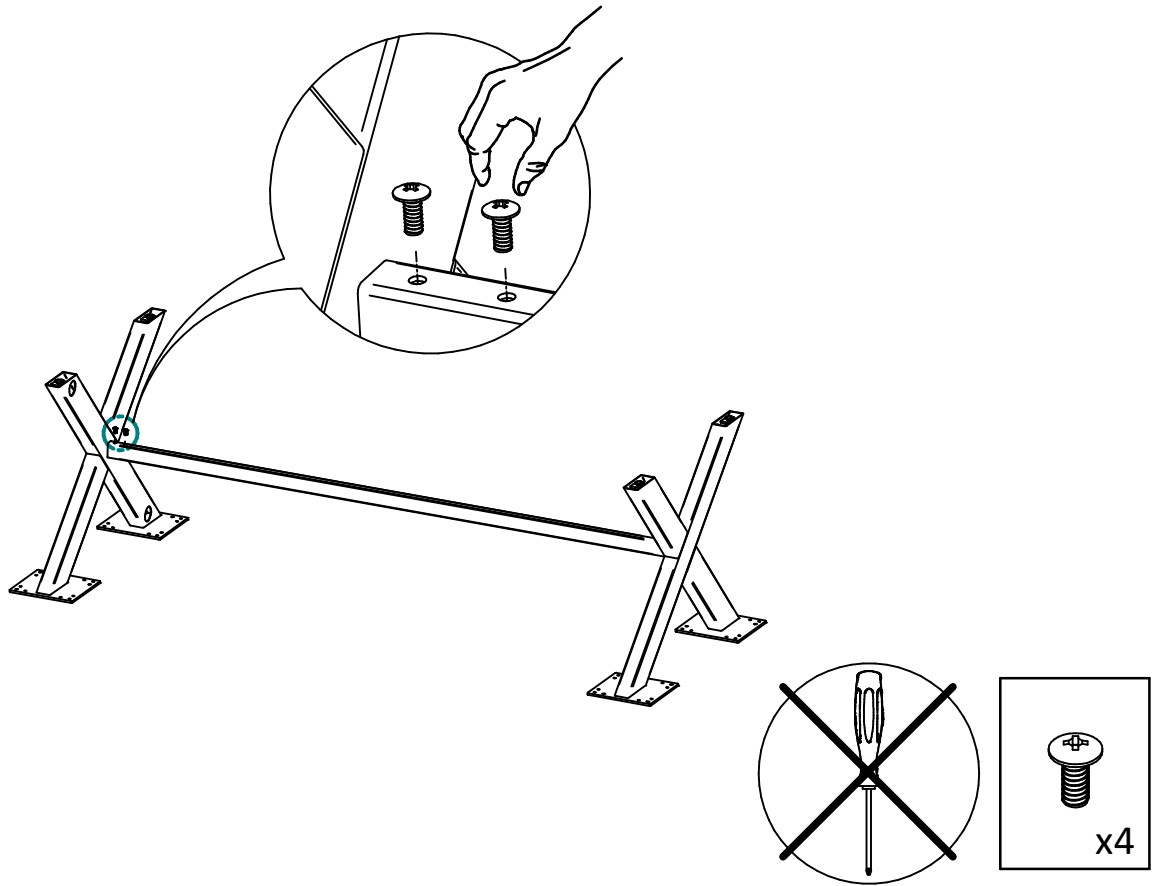


4

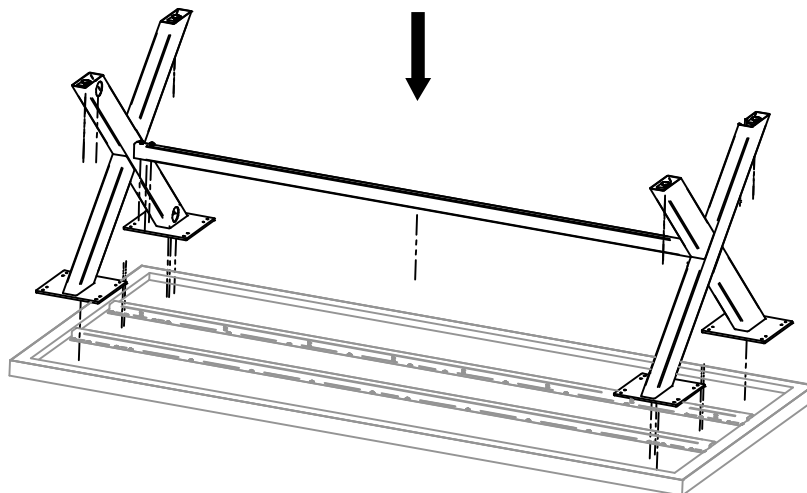




5

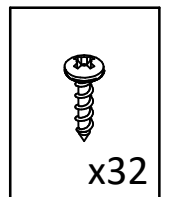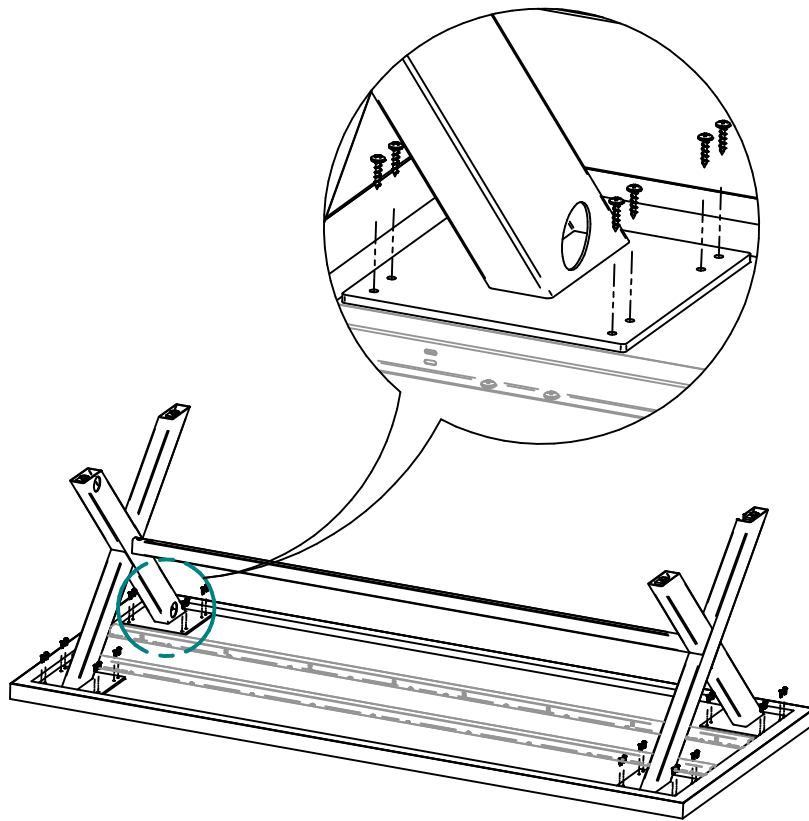

6

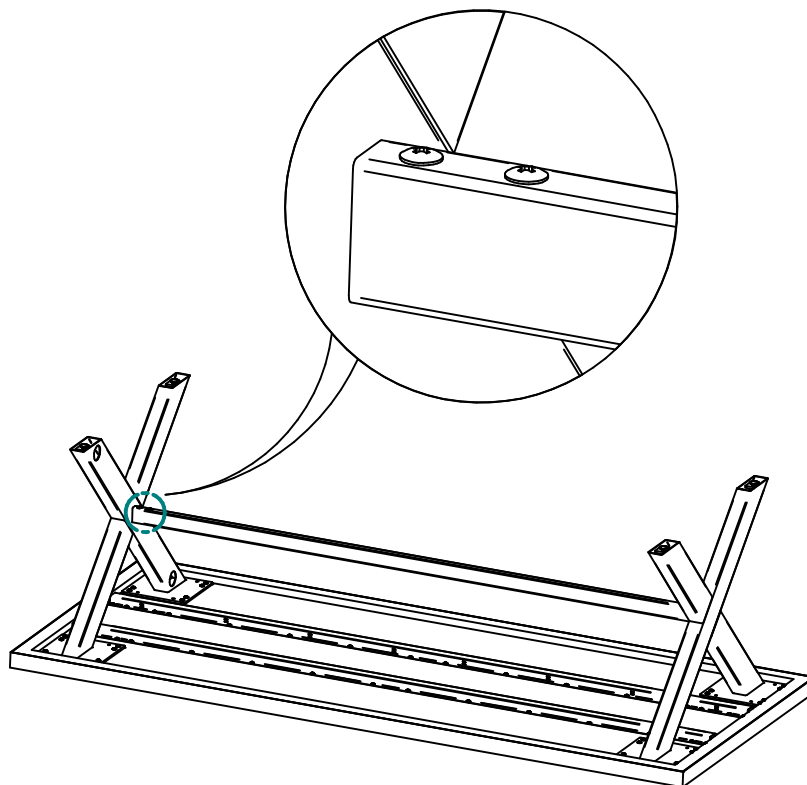

7

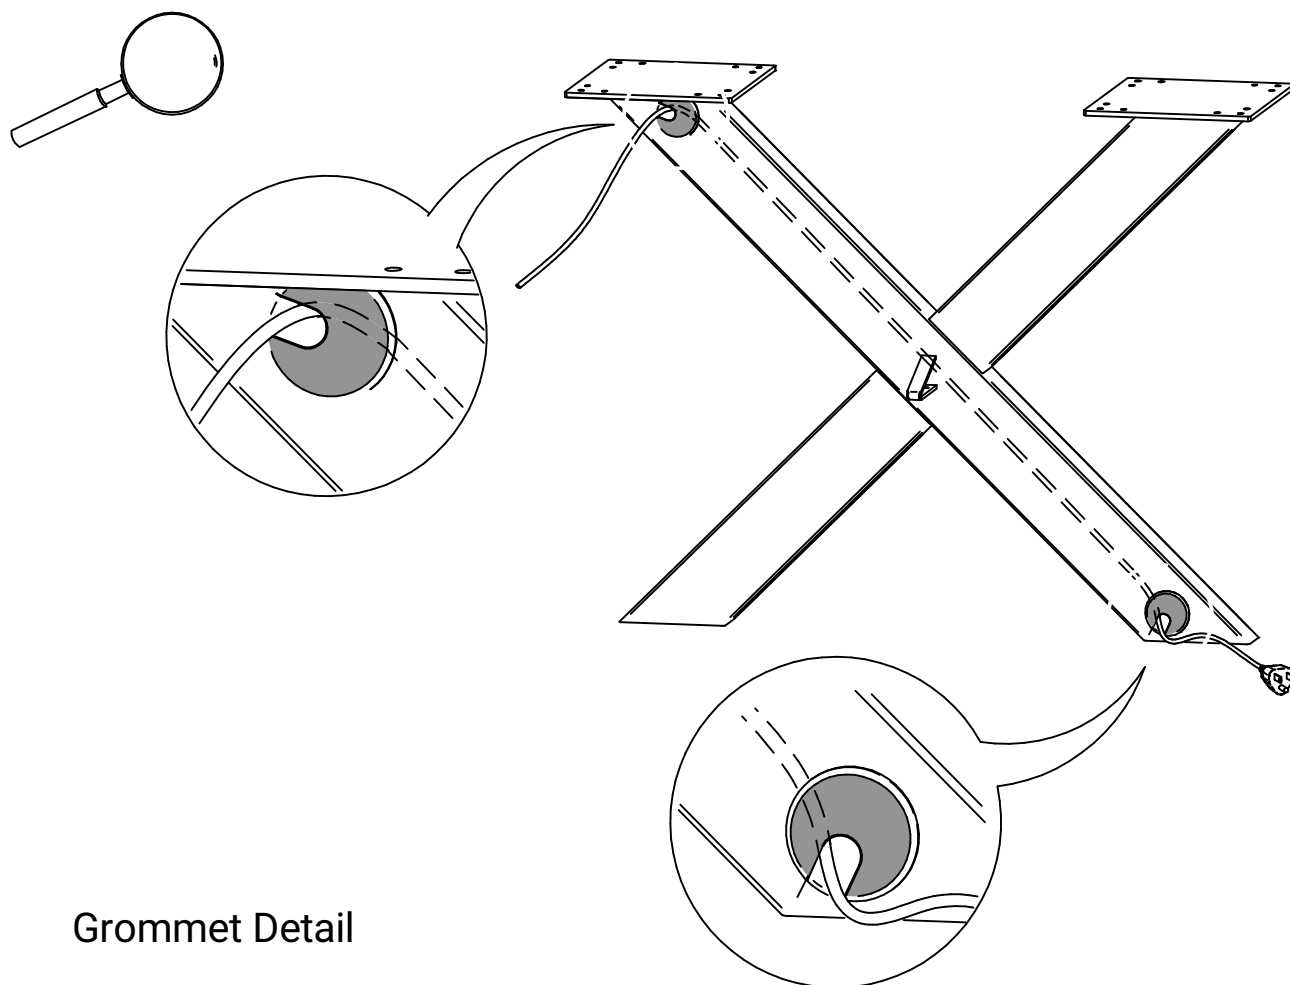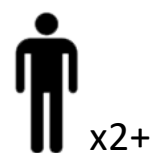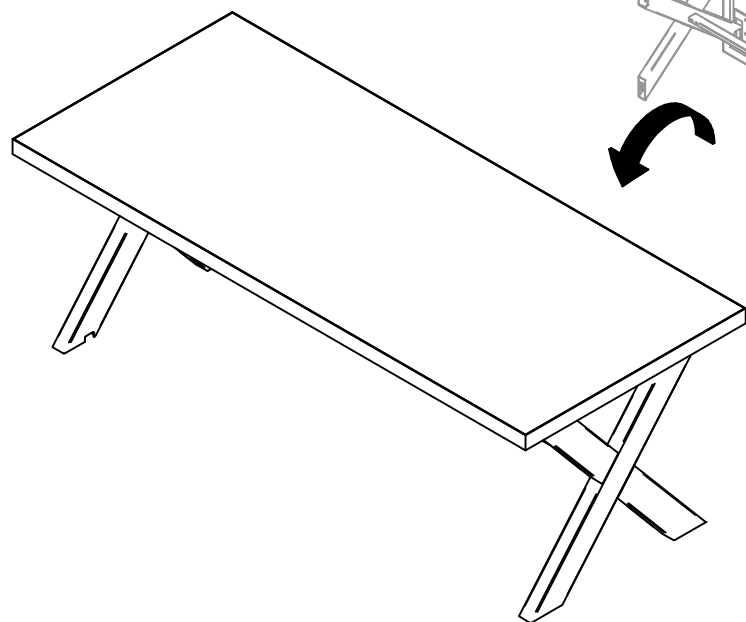

Grommet Detail

Spec Furniture Inc.

165 City View Drive, Toronto ON, M9W 5B1

P: 416.246.5540 | **F:** 416.246.5547

E: specit@specfurniture.com | specfurniture.com