

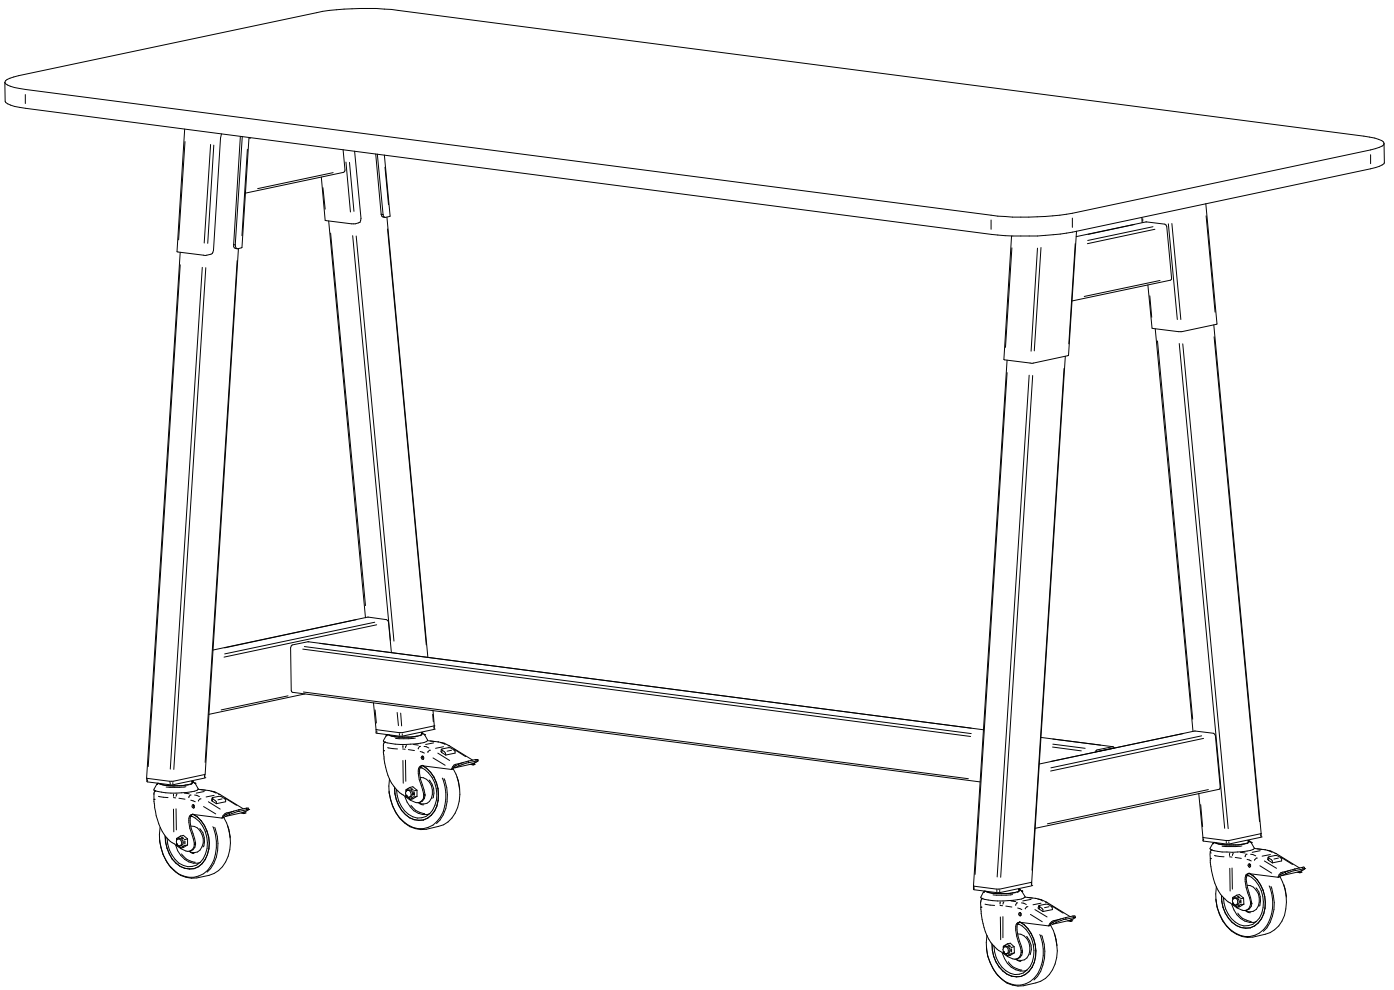





DOCKER



Installation Instructions

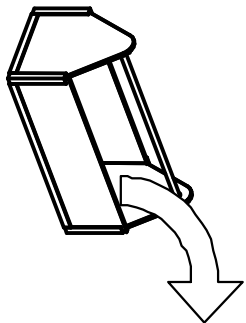

#3




1/4"

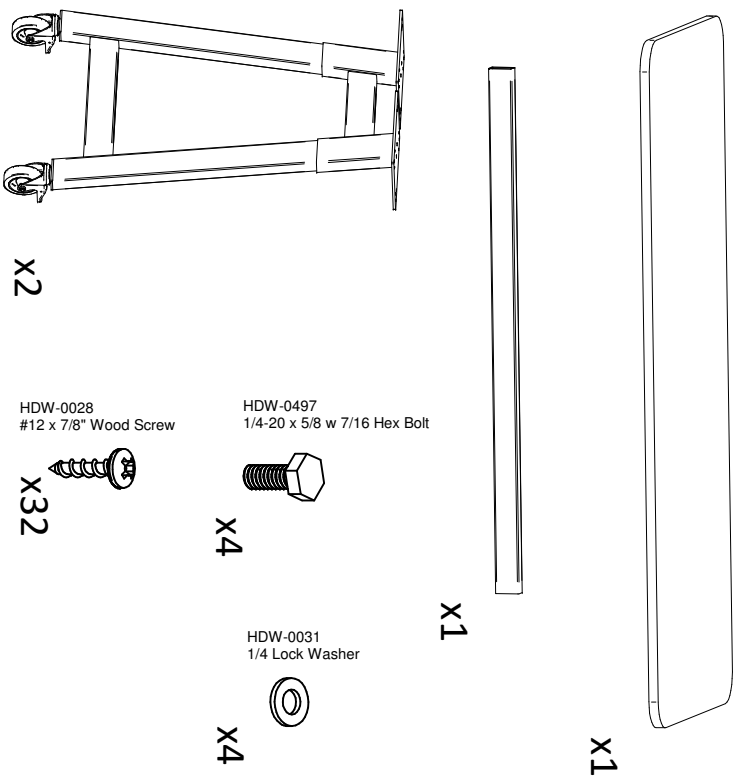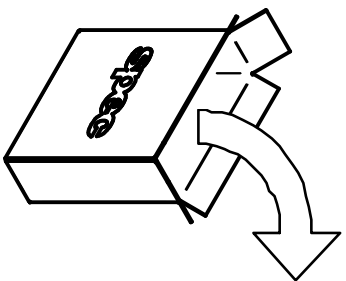


Note: Do not over-tighten fasteners.

1

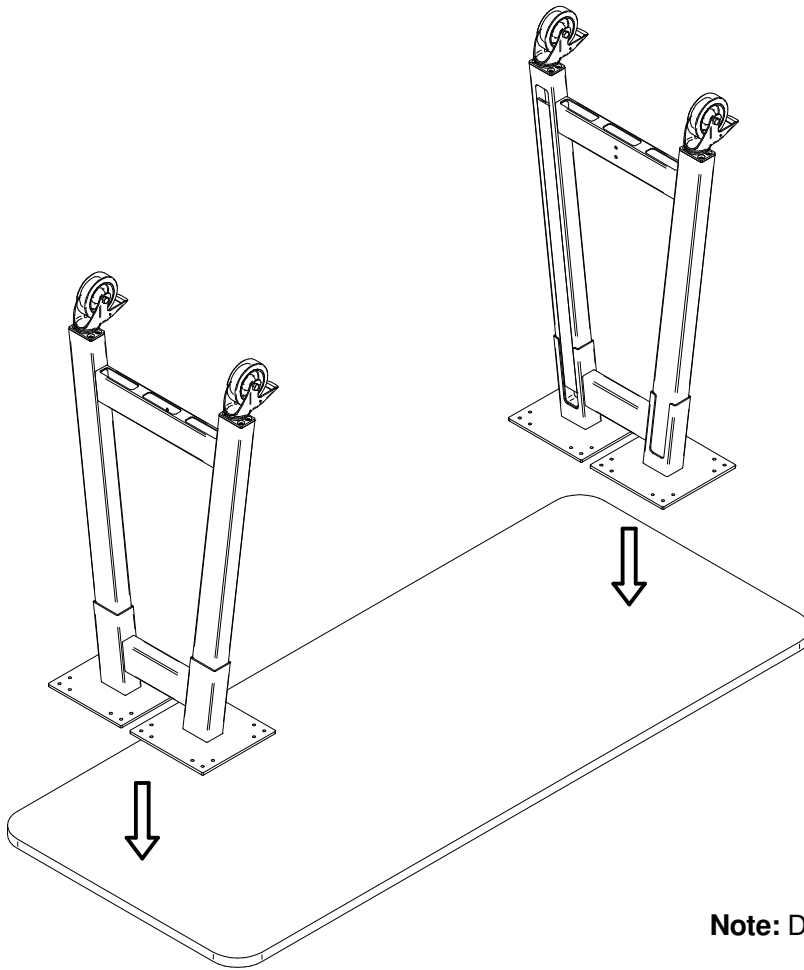


Note: Do not insert screw at this step.


2

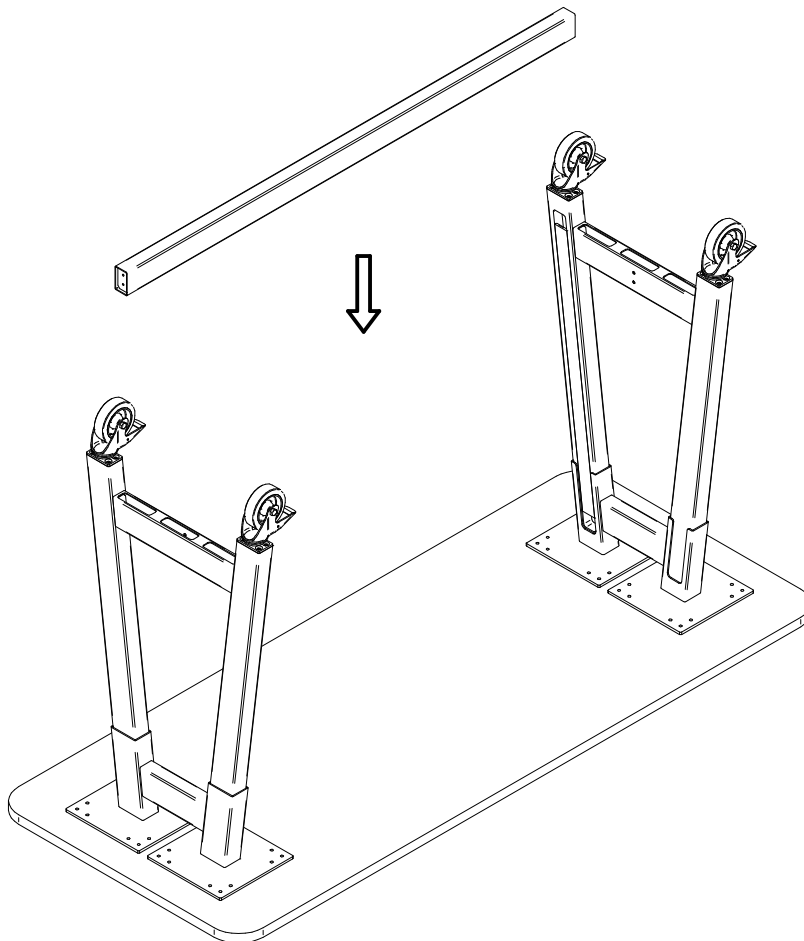


3

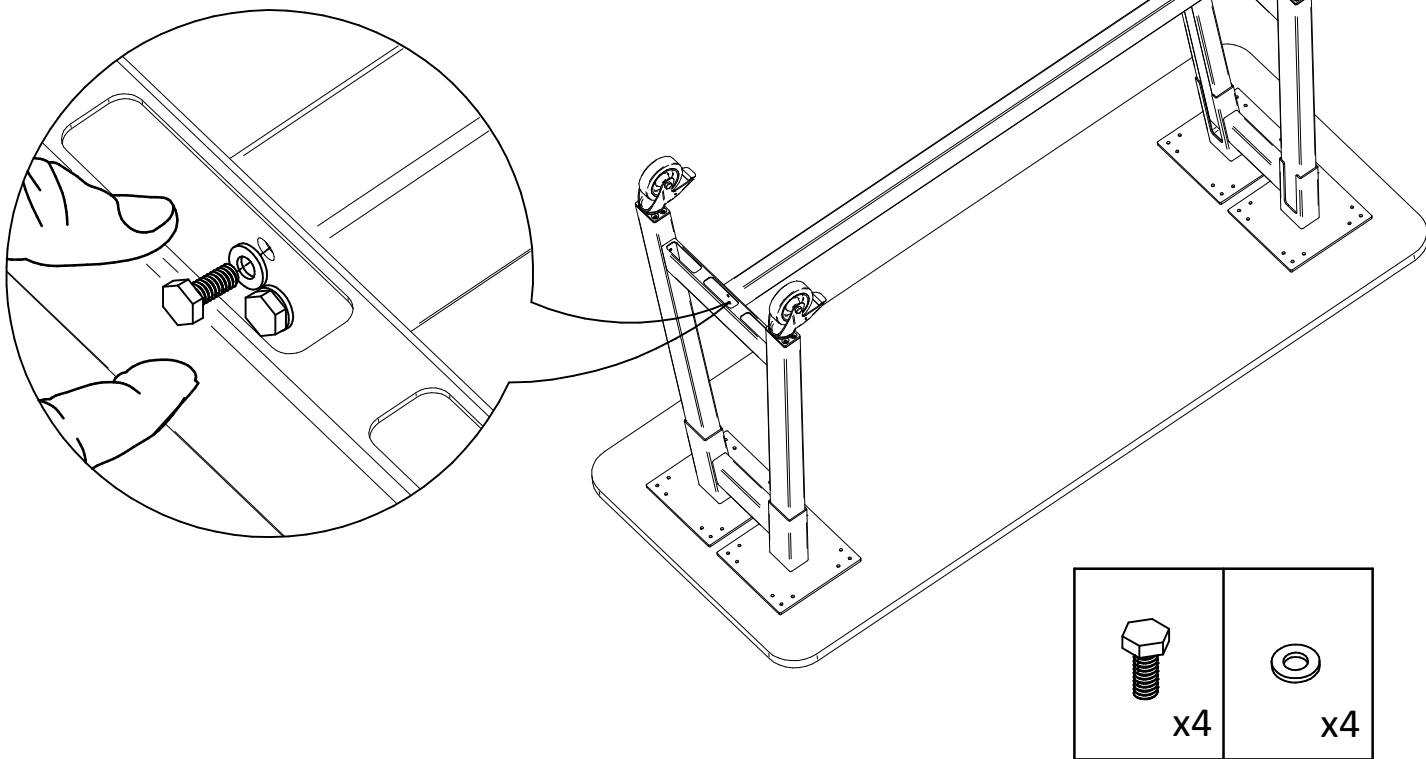


4

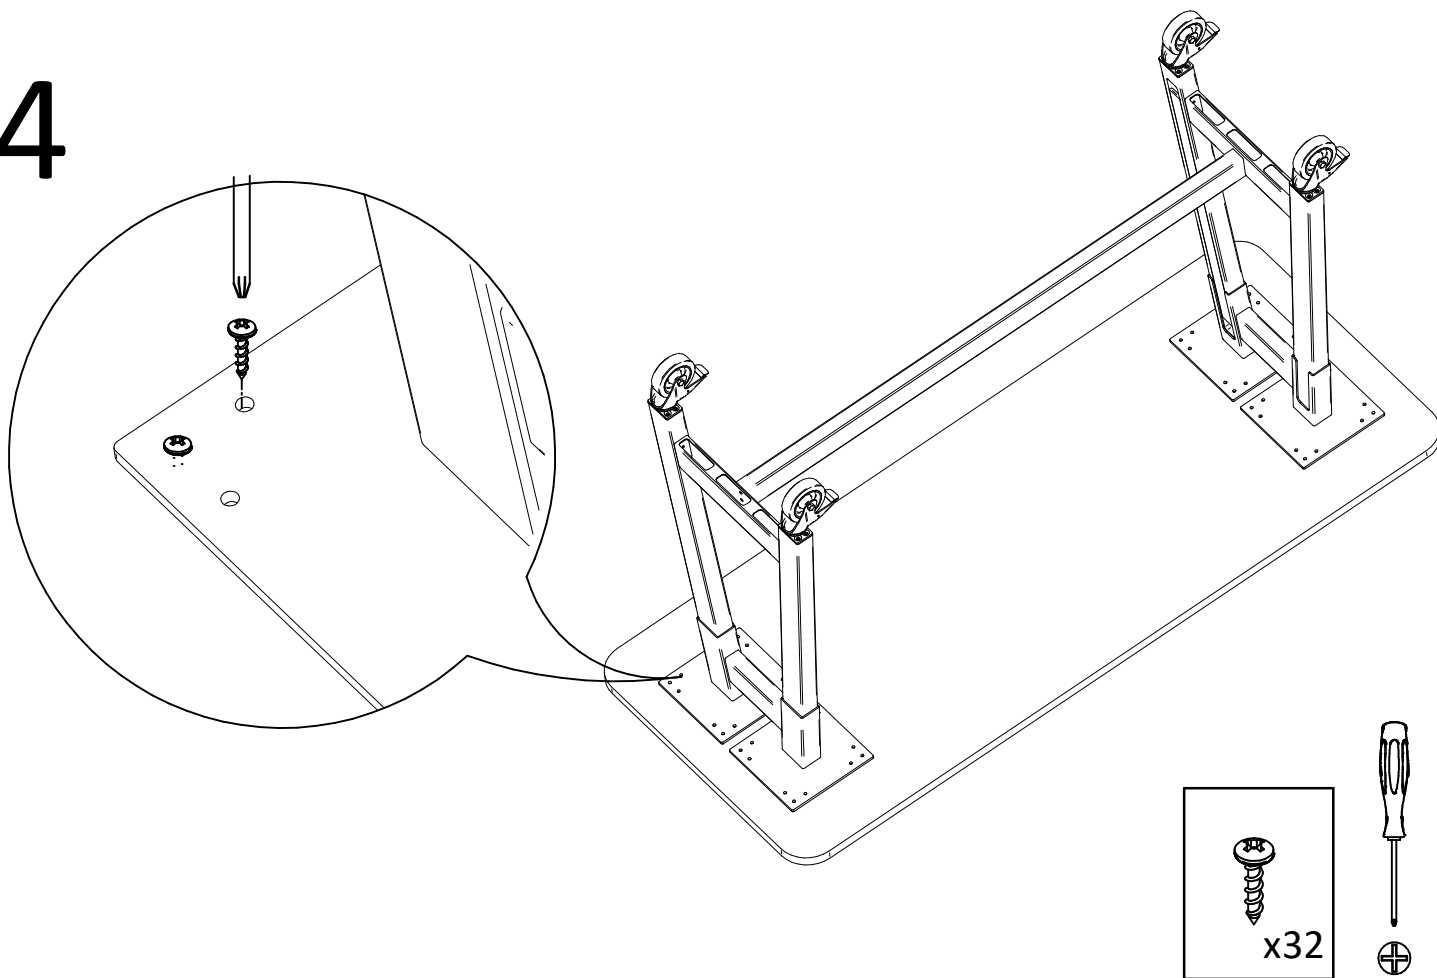

5

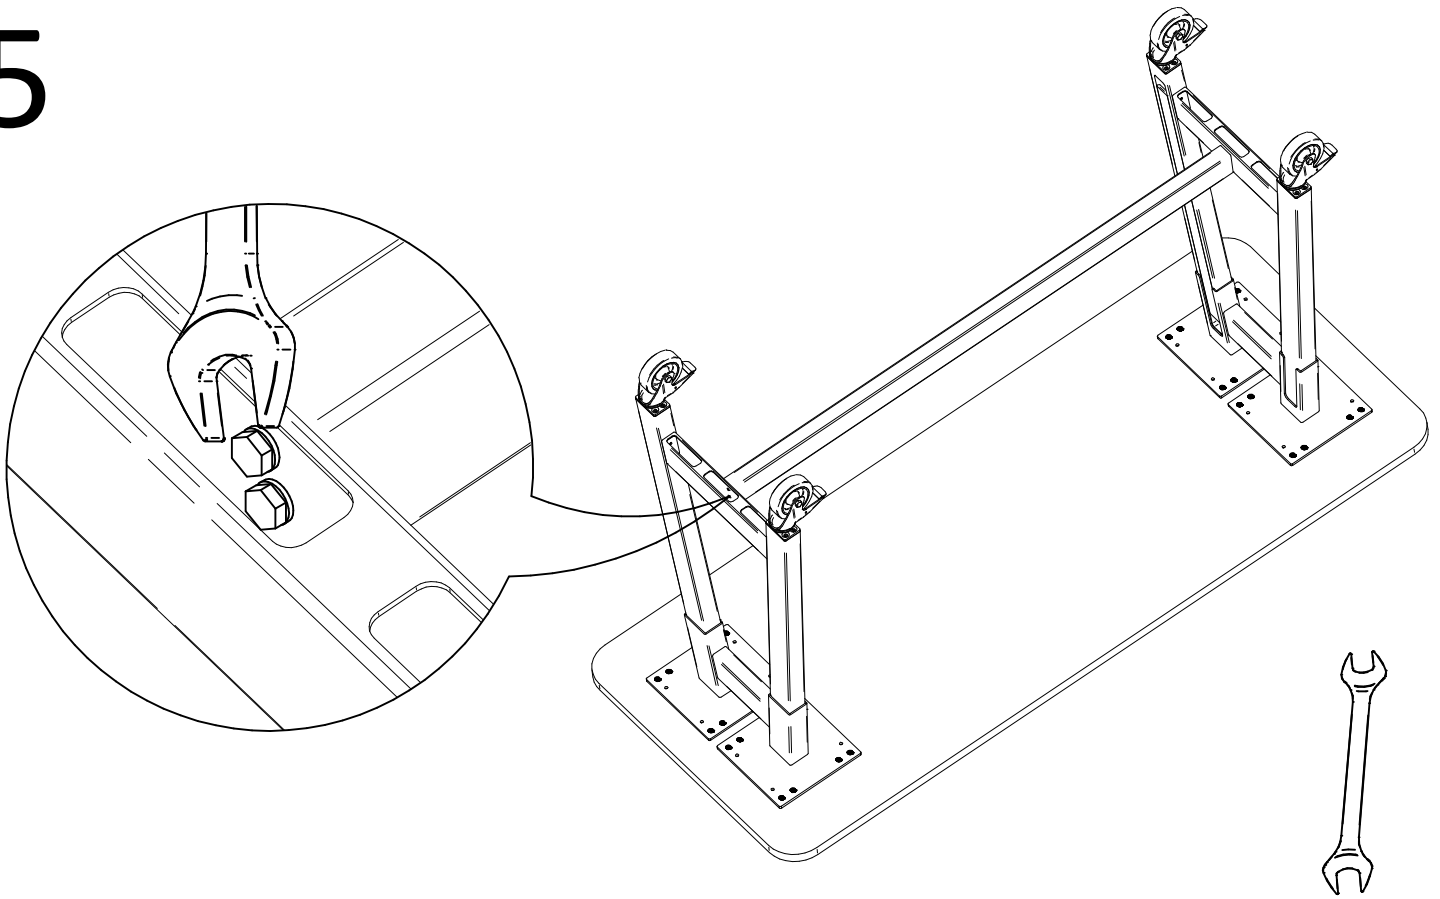

6

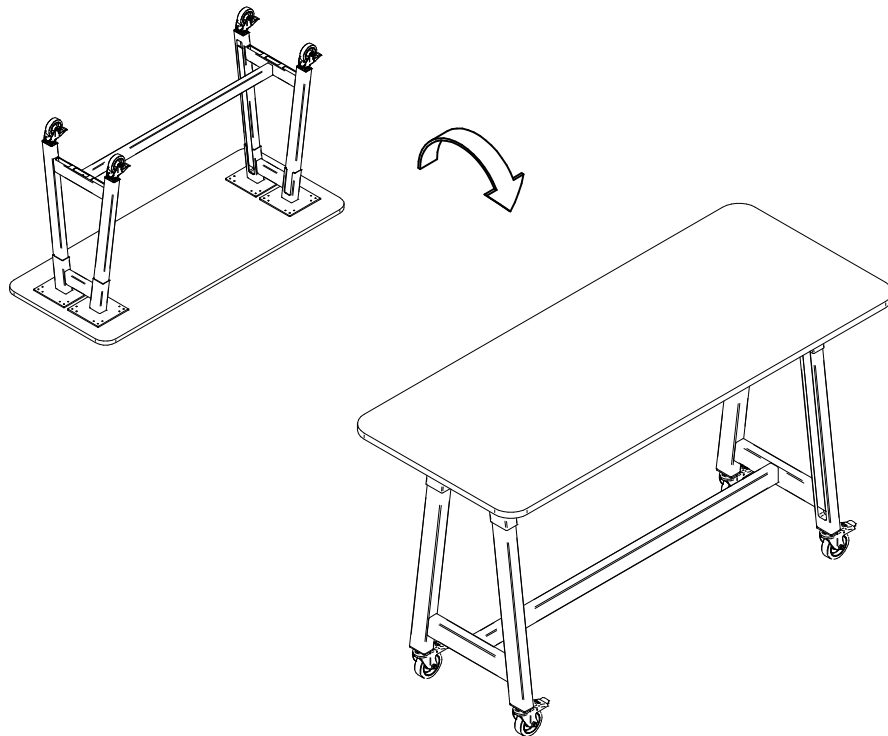

Spec Furniture Inc.
165 City View Drive, Toronto ON, M9W 5B1
P: 416.246.5540 | **F:** 416.246.5547
E: specit@specfurniture.com | specfurniture.com