

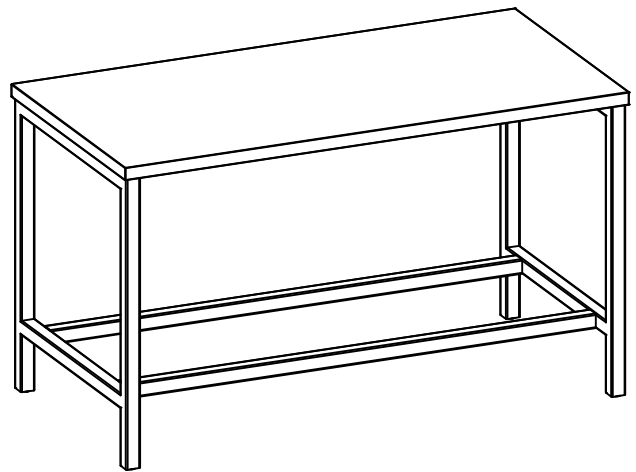
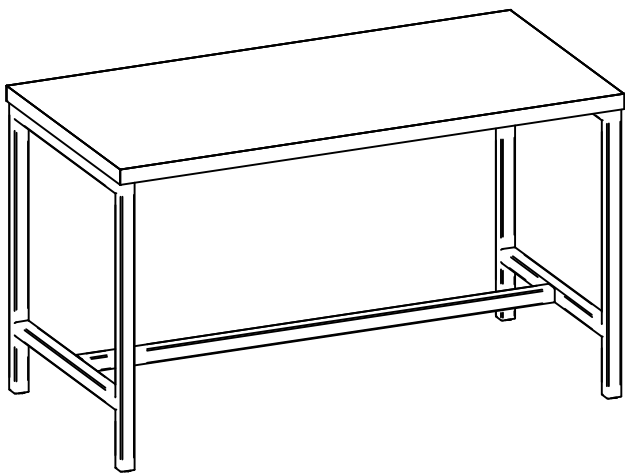
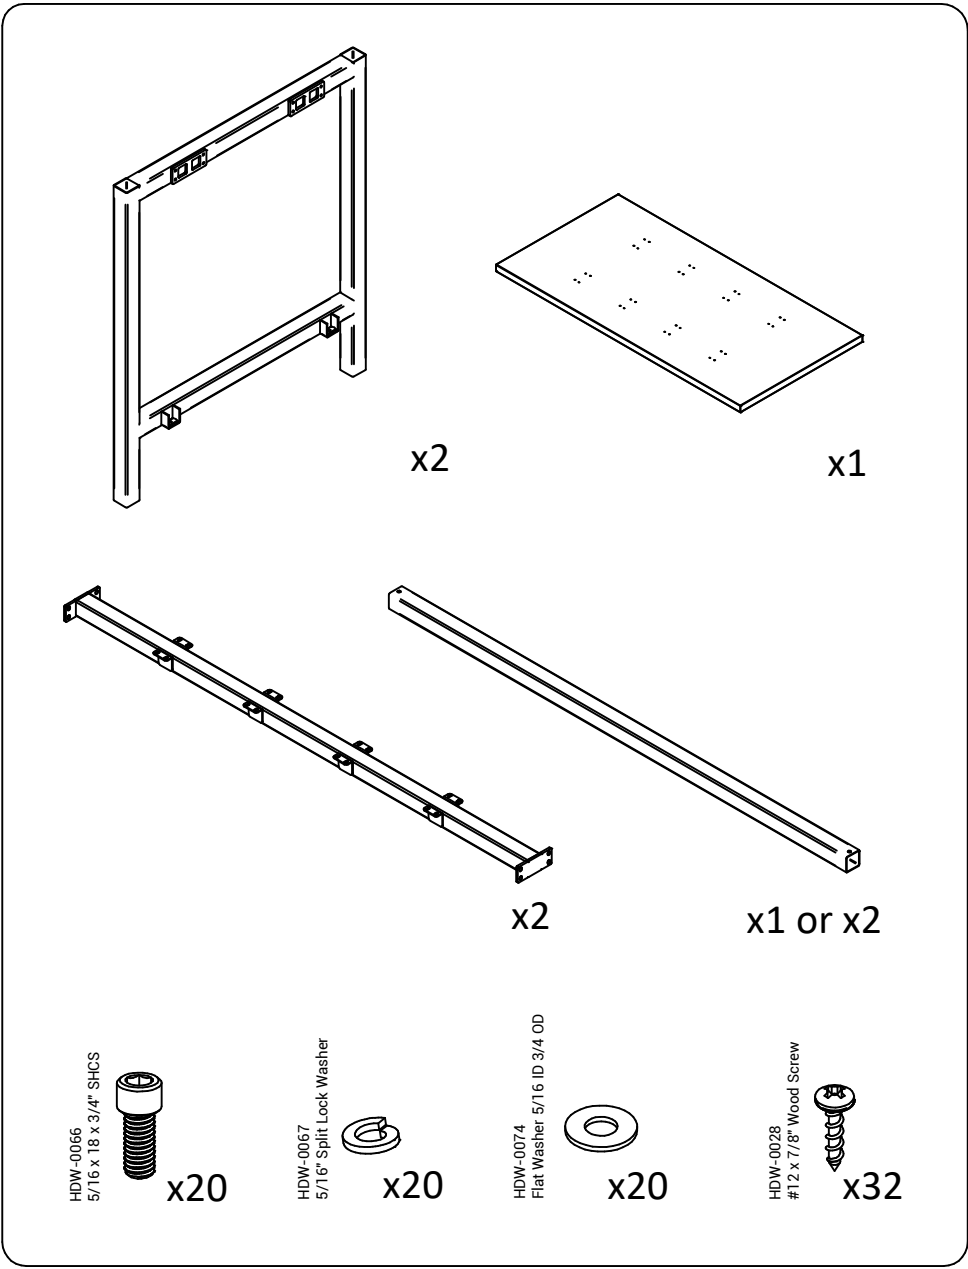
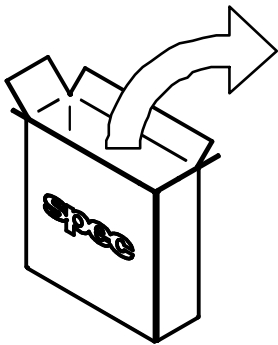


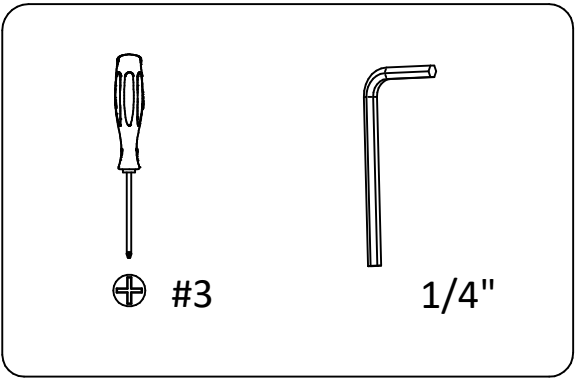




FACTORY

Installation Instructions



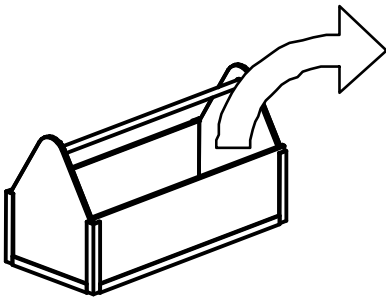


Note: Do not over-tighten fasteners.



1

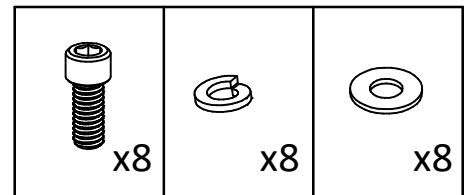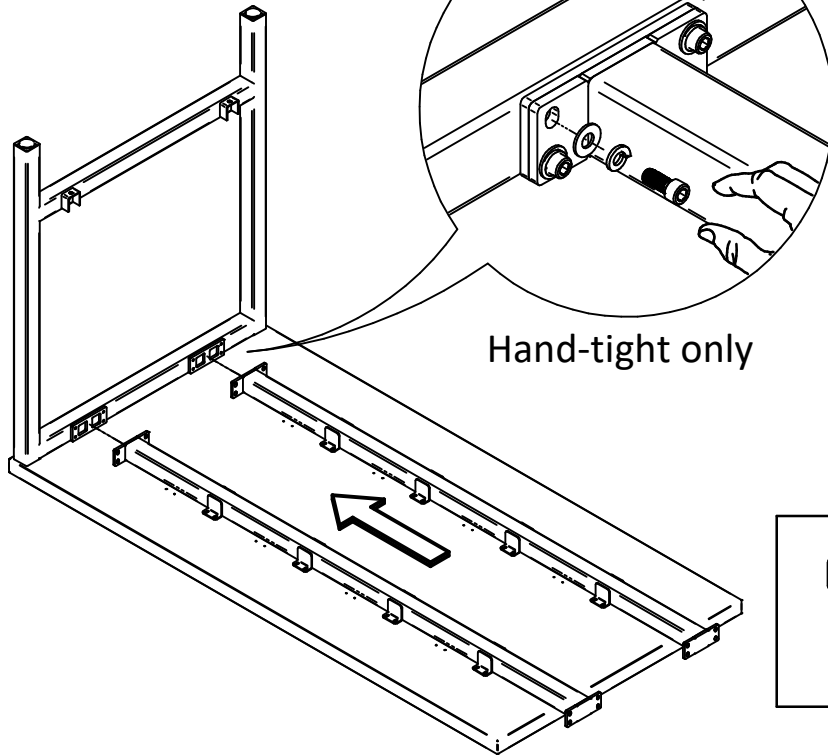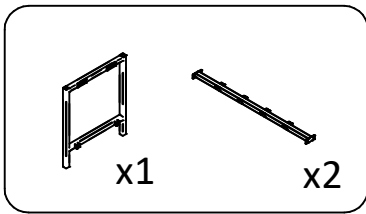


2

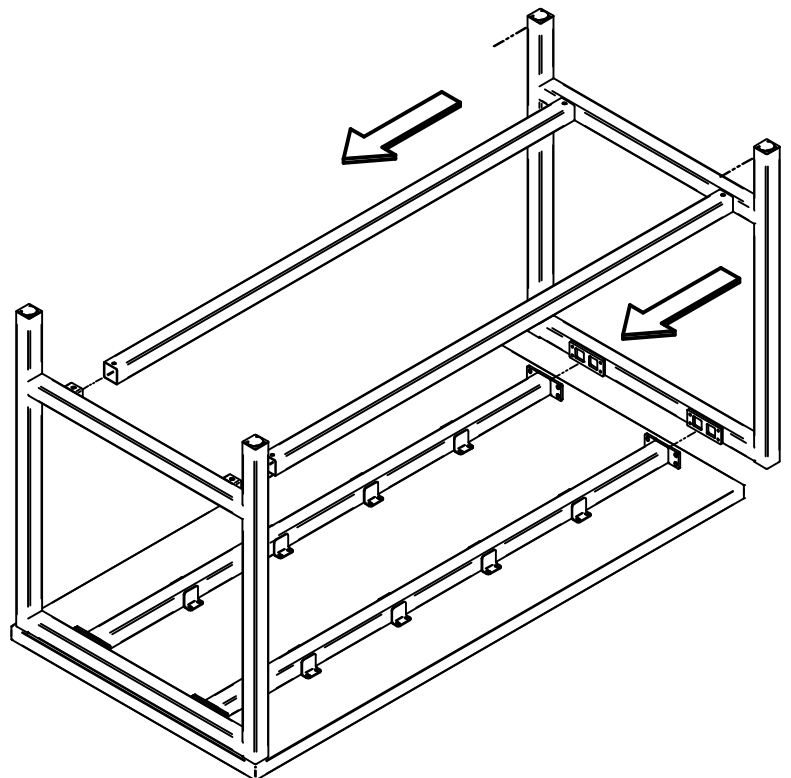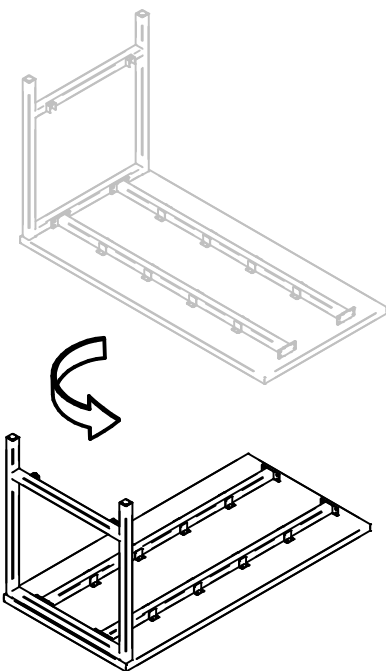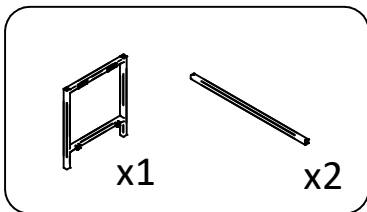



3

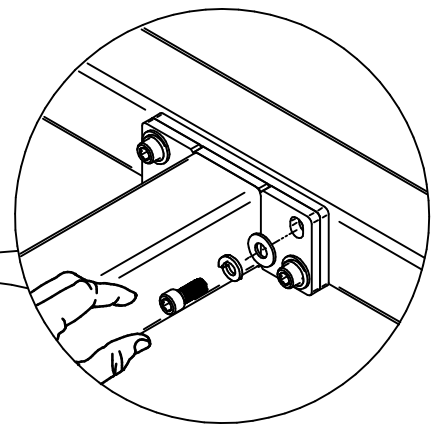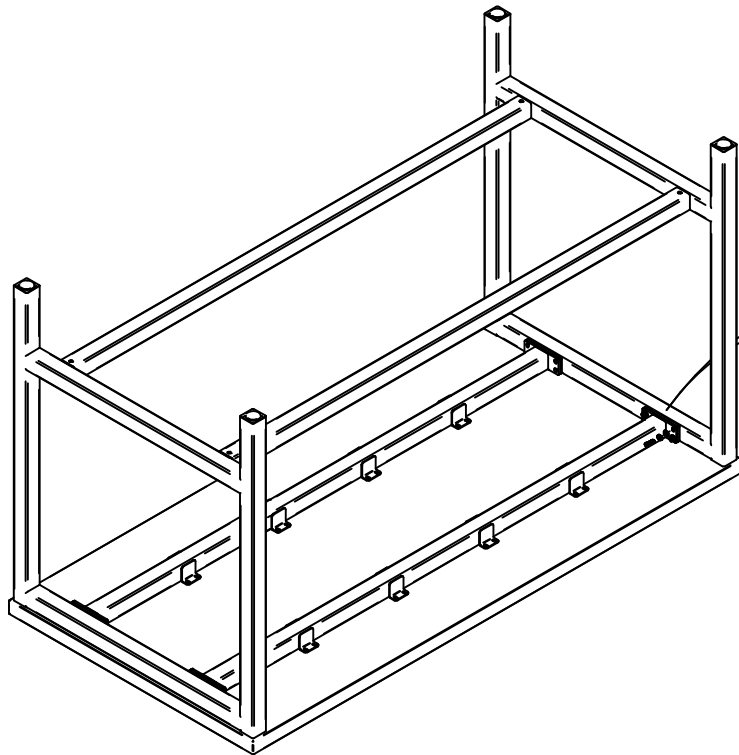


Hand-tight only

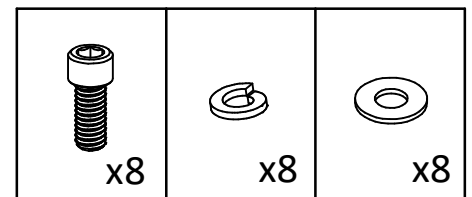




4

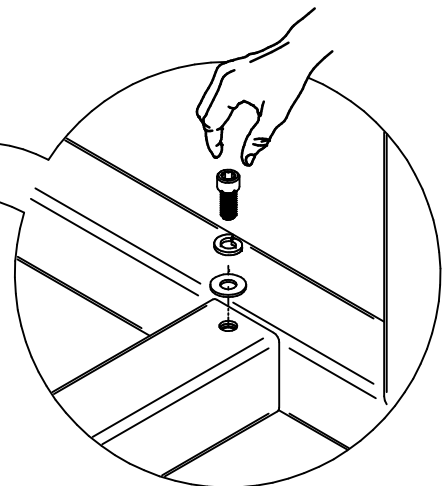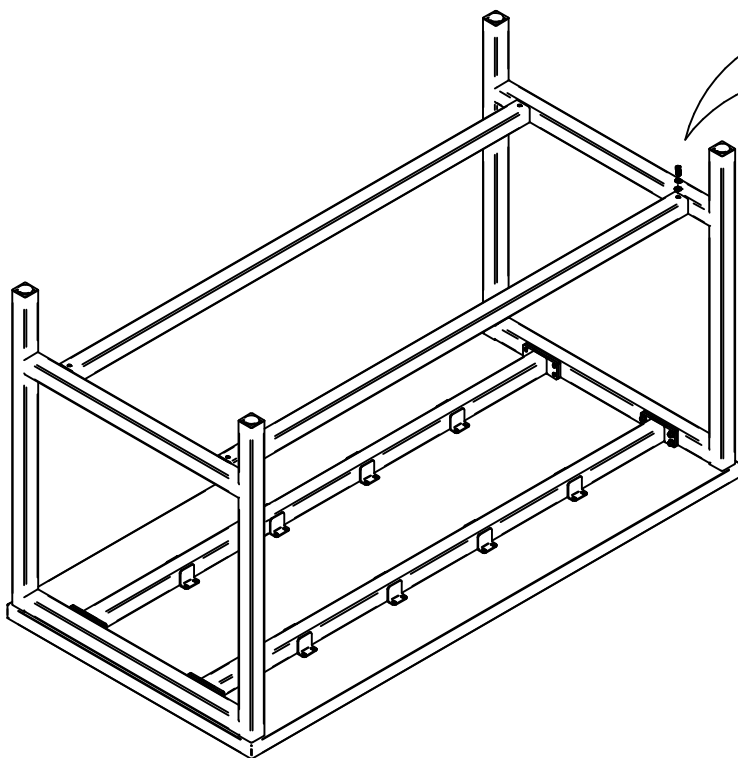



Hand-tight only

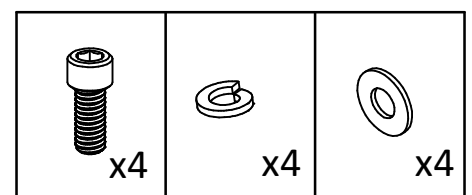


5

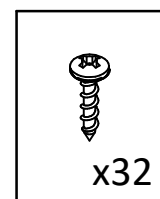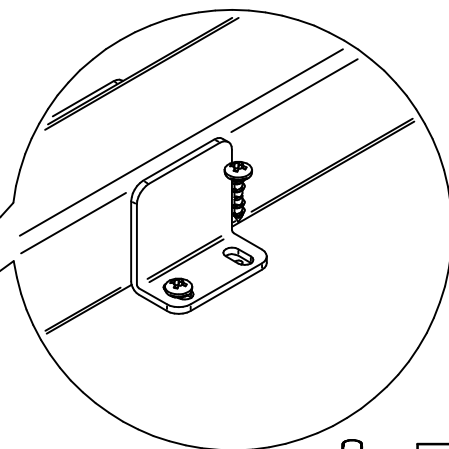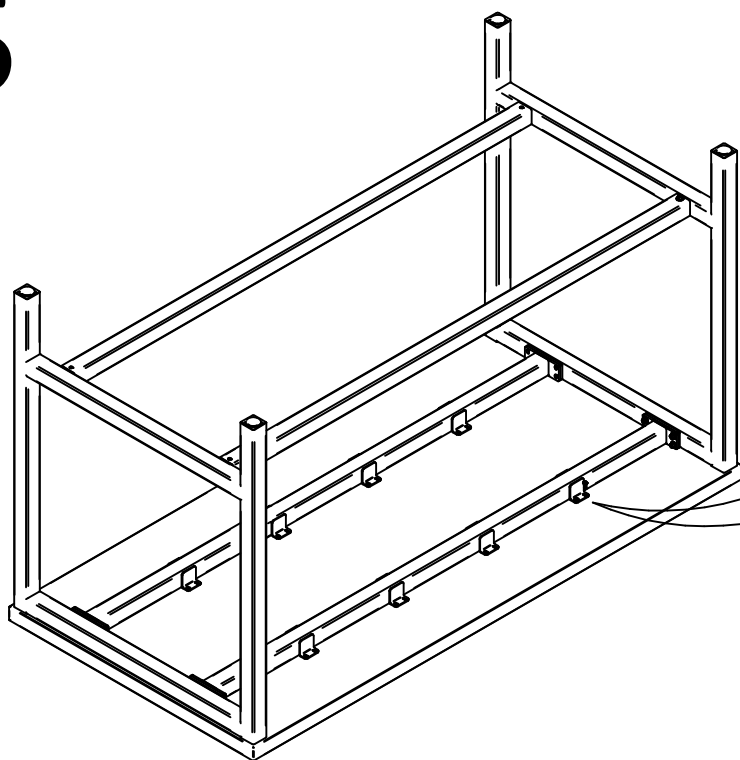




6

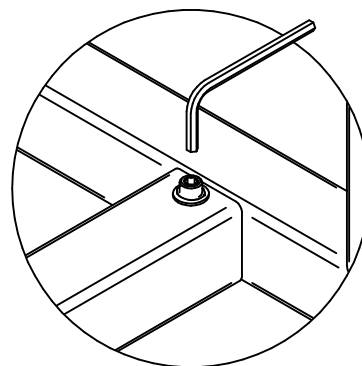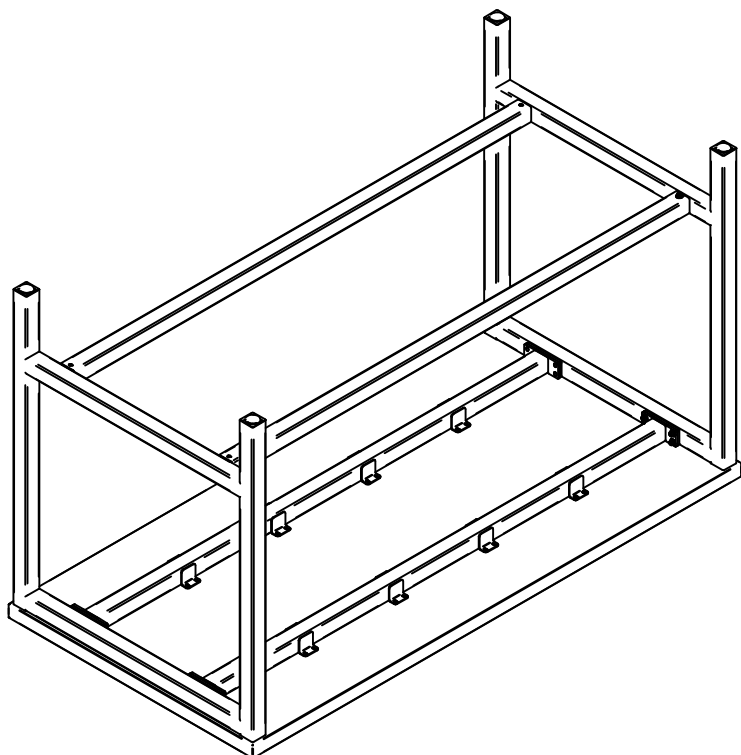

Fully tighten all bolts

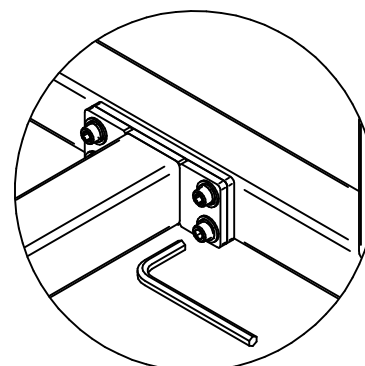

7

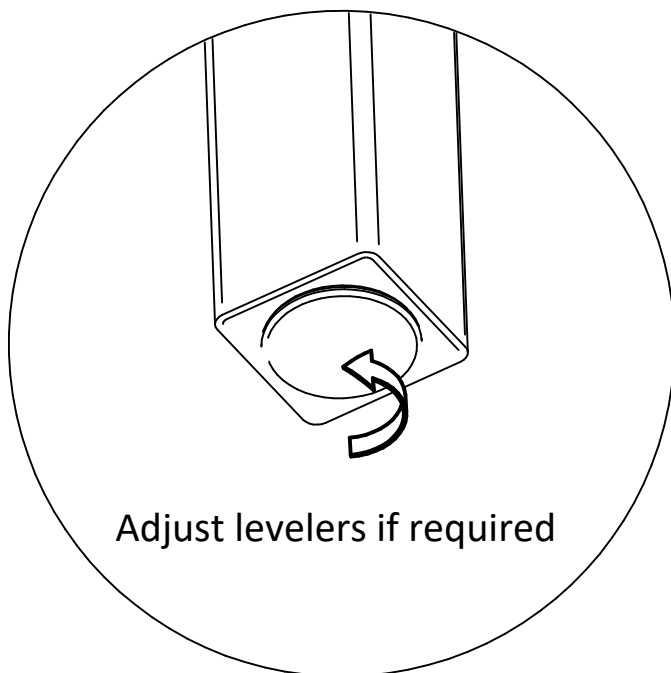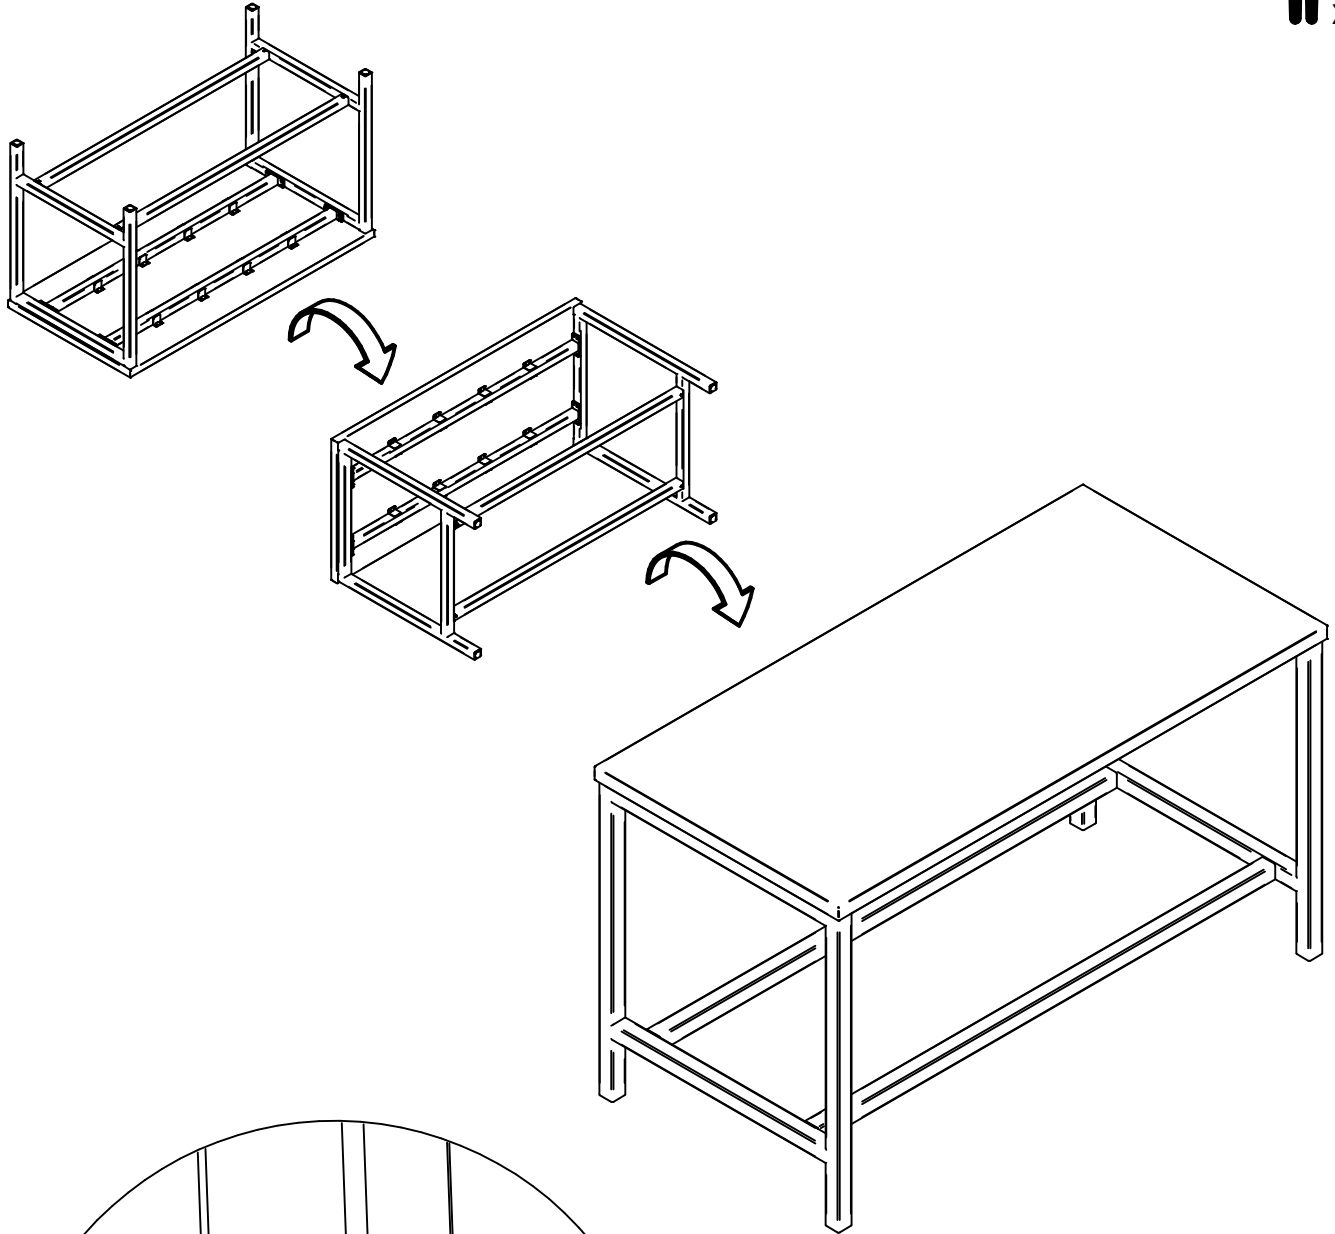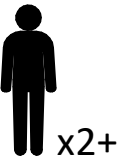

Adjust levelers if required

Spec Furniture Inc.

165 City View Drive, Toronto ON, M9W 5B1

P: 416.246.5540 | **F:** 416.246.5547

E: specit@specfurniture.com |

specfurniture.com