
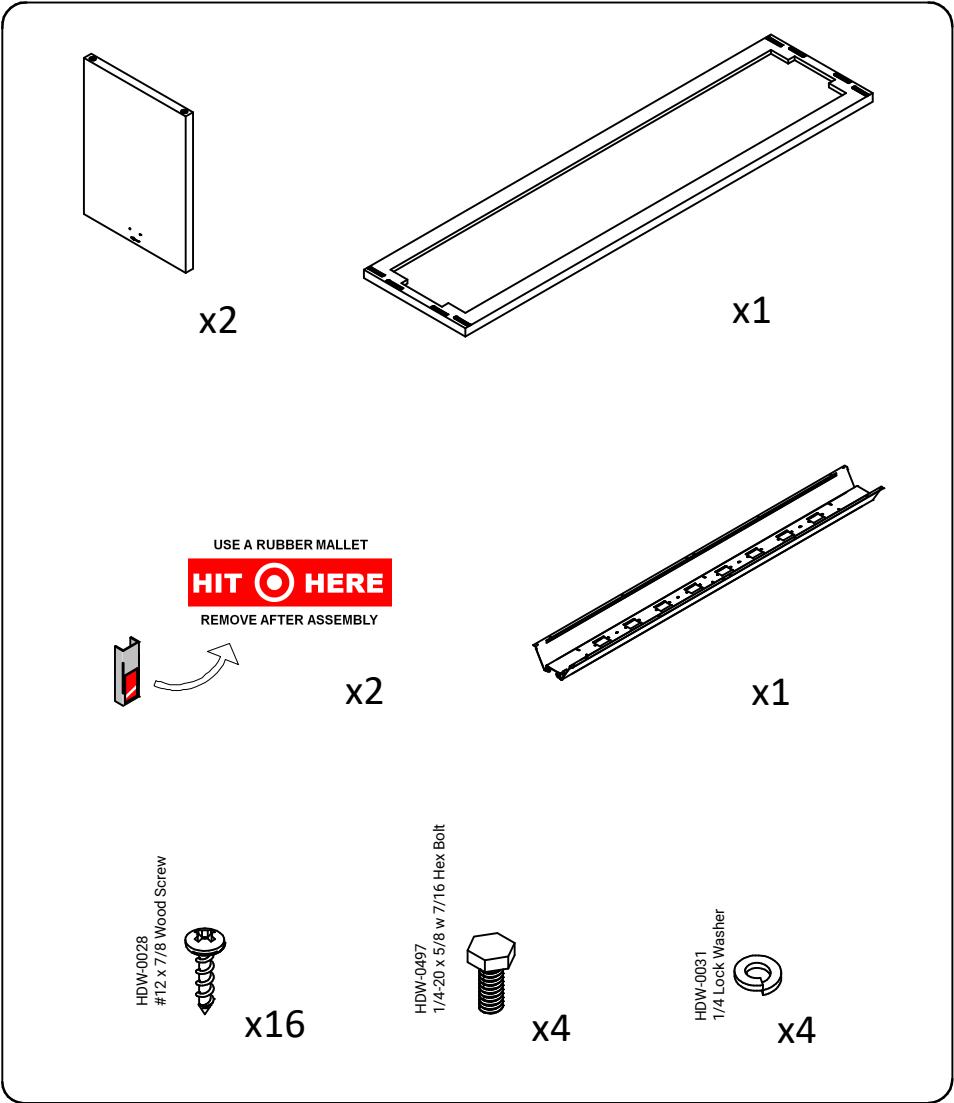
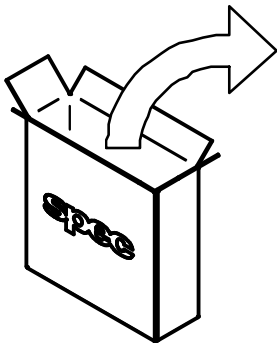
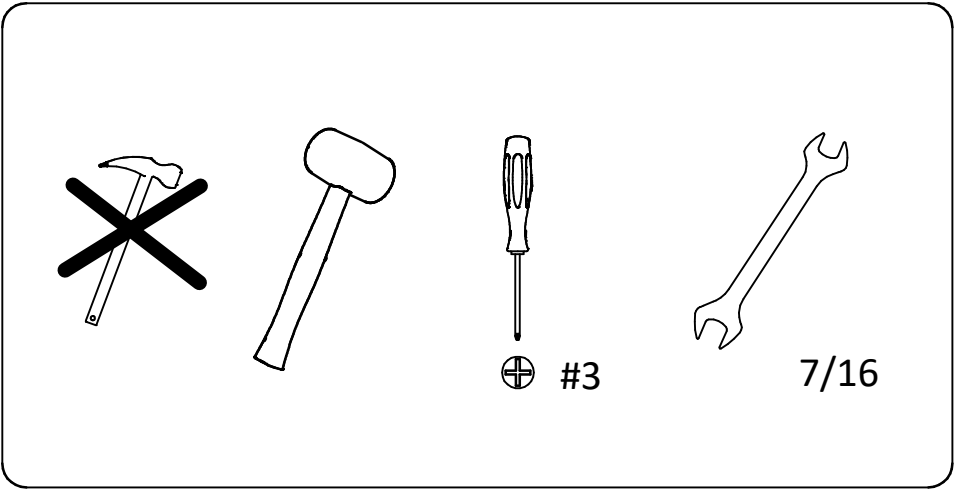


# ENDZONE



## 2" End Panels

For tables <97"

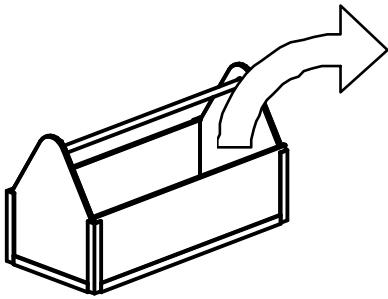






**Note: Assemble product near point-of-use.**

# 1

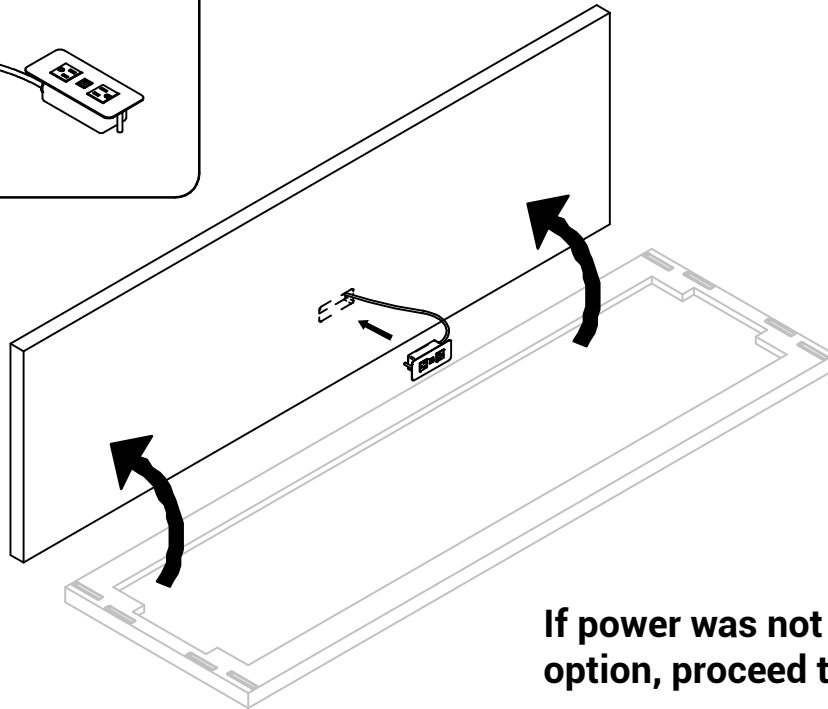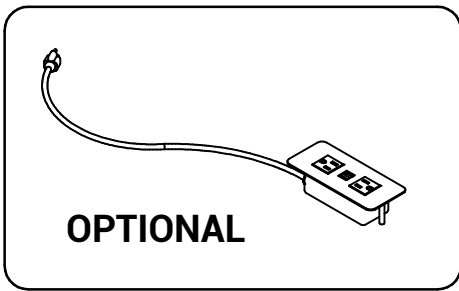

If power was not selected as an option, proceed to Step 2


# 2

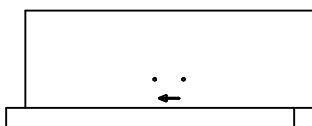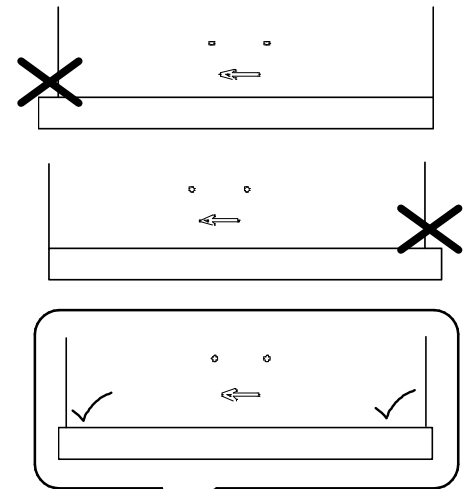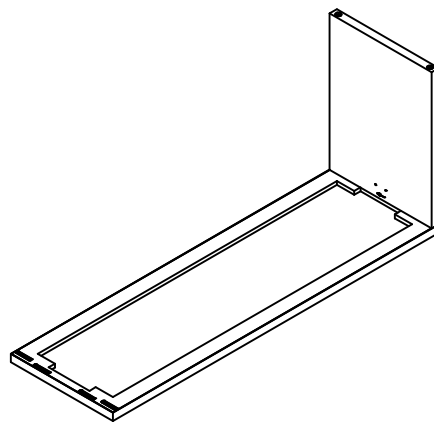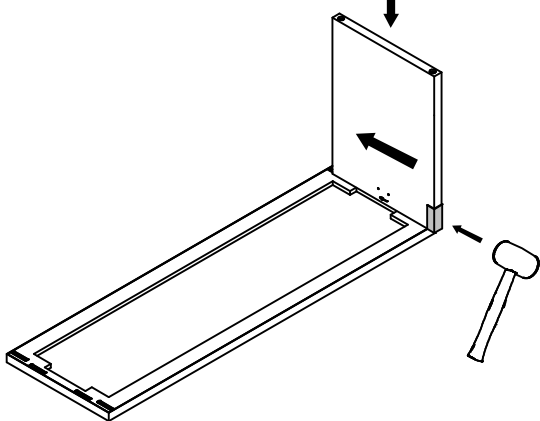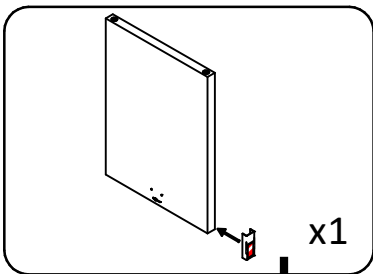

(A) Too Tight?







(B) Stop hitting







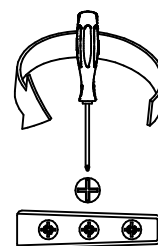


(C) Rotate all bedfitting screws on Table Top by 1/4 turn anti-clockwise. Repeat if necessary.

# 3

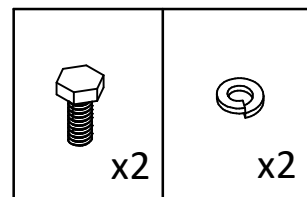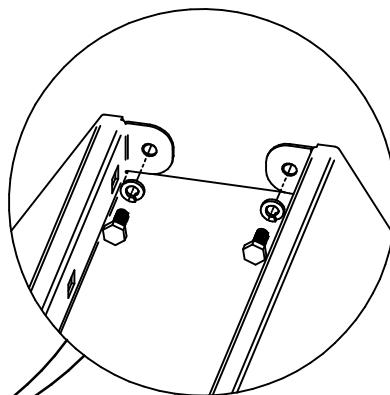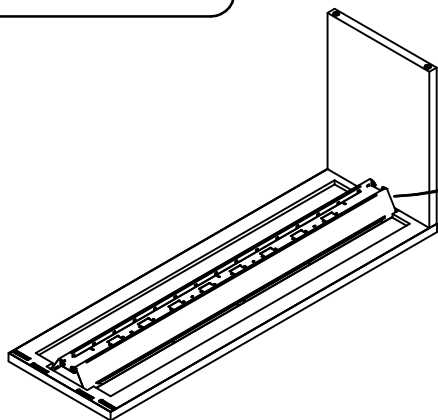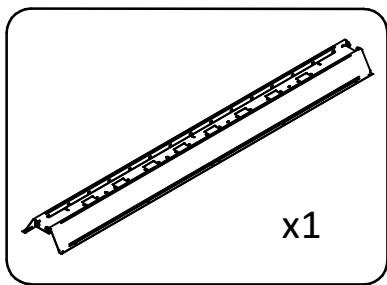


# 4

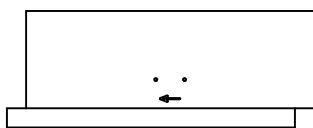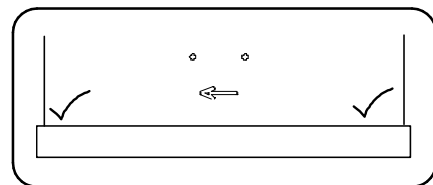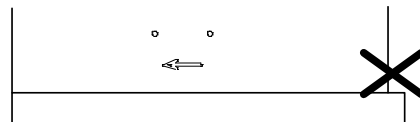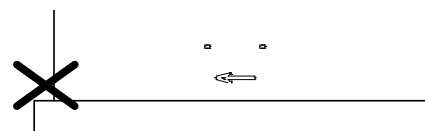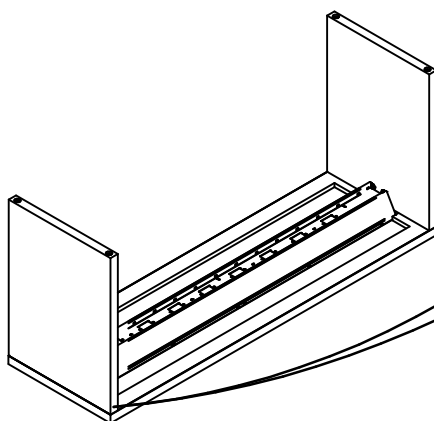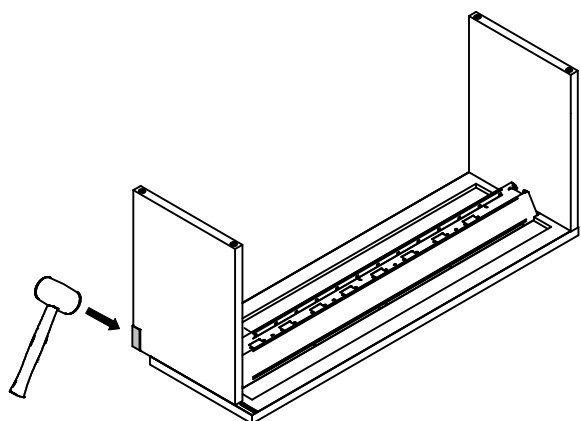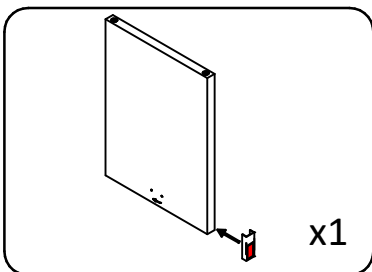

(A) Too Tight?





(B) Stop hitting


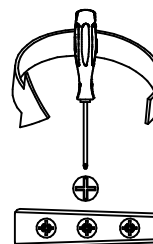


(C) Rotate all bedfitting screws on Table Top by 1/4 turn anti-clockwise. Repeat if necessary.


# 5

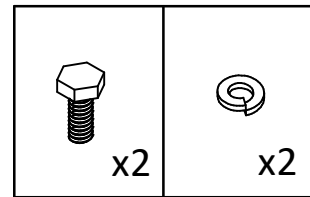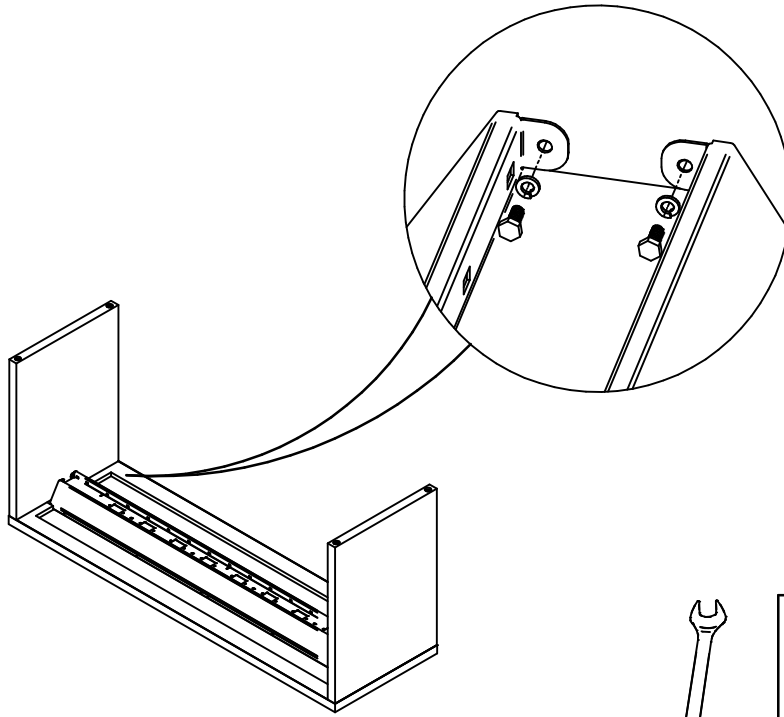



# 6

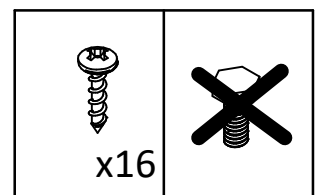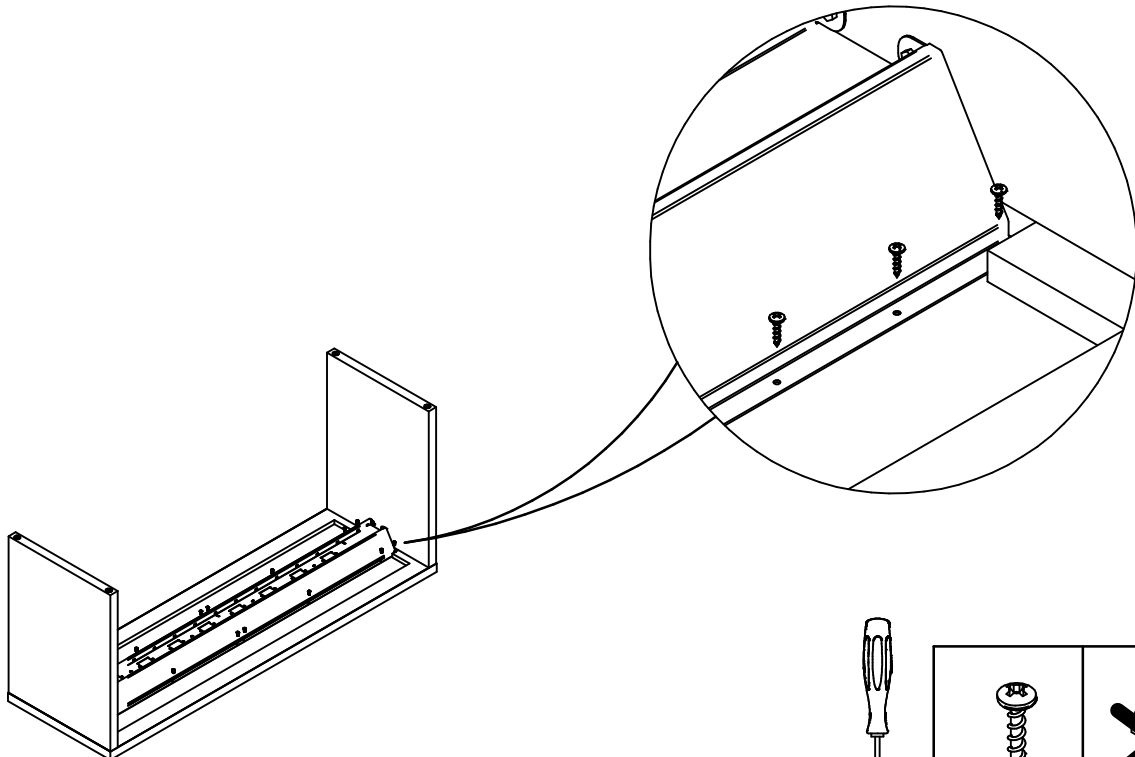

# 7

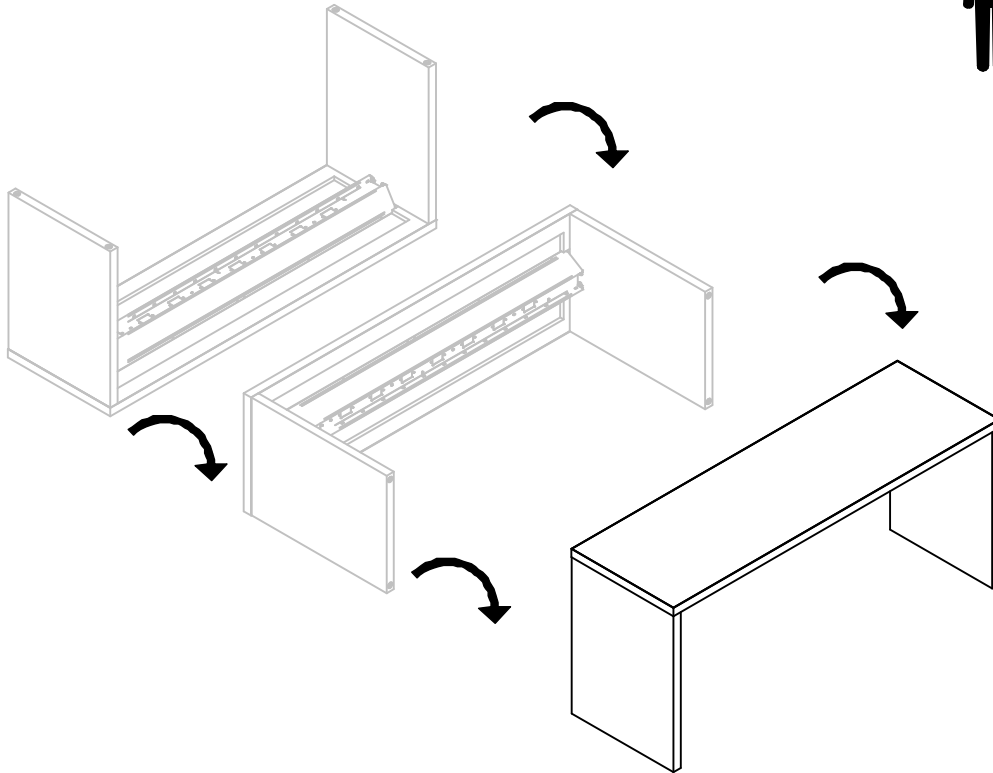

# 8

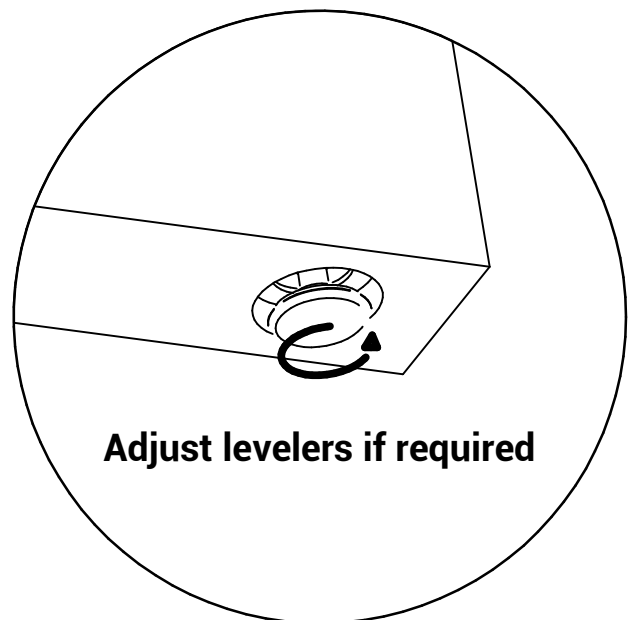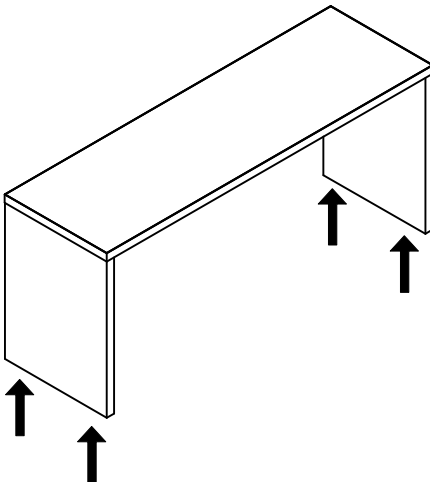


**Spec Furniture Inc.**

165 City View Drive, Toronto ON, M9W 5B1

**P:** 416.246.5540 | **F:** 416.246.5547

**E:** [specit@specfurniture.com](mailto:specit@specfurniture.com) | [specfurniture.com](http://specfurniture.com)





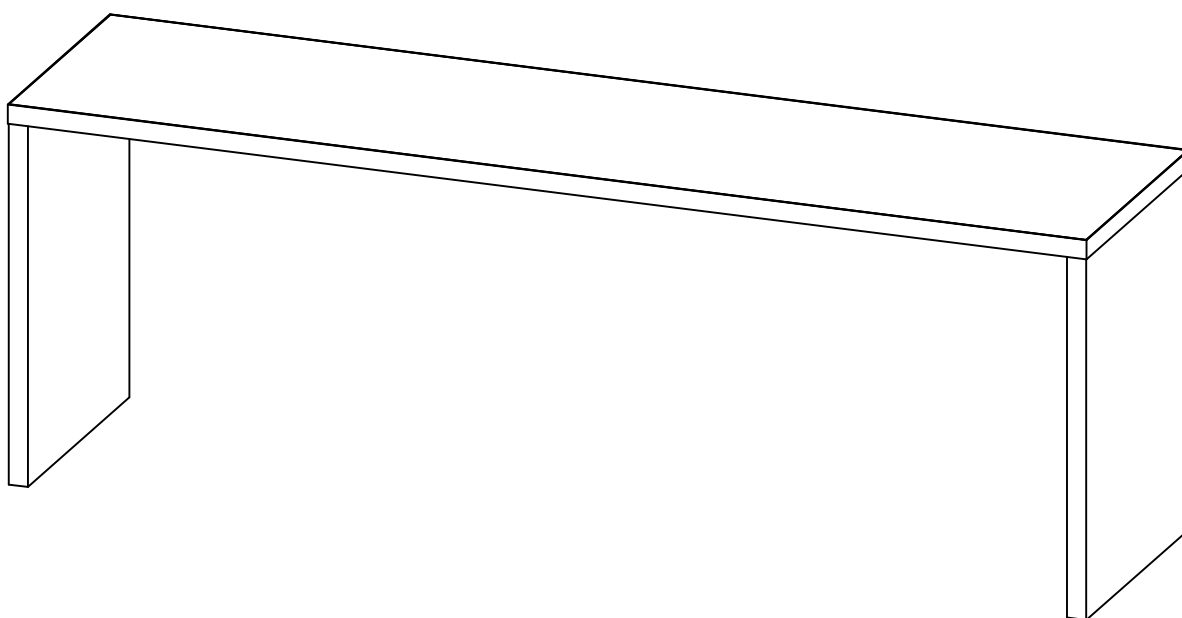


# ENDZONE

## 2" End Panels

For tables with support channels  
(97" - 120")



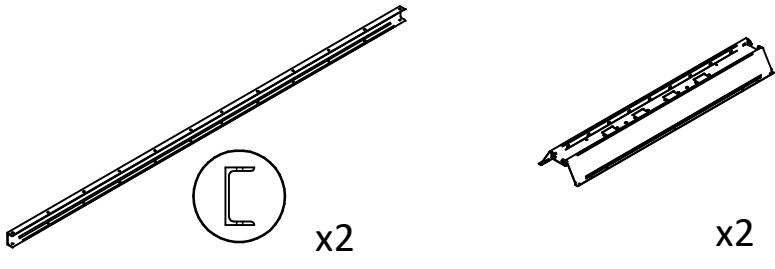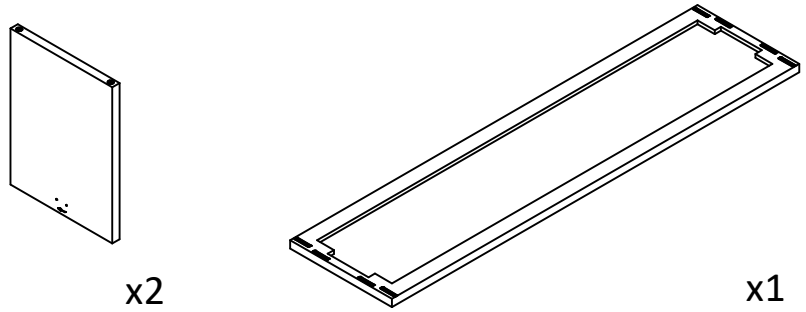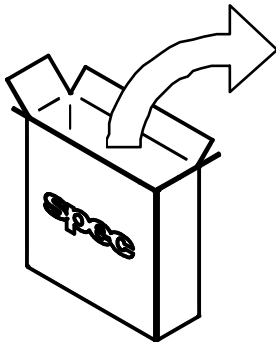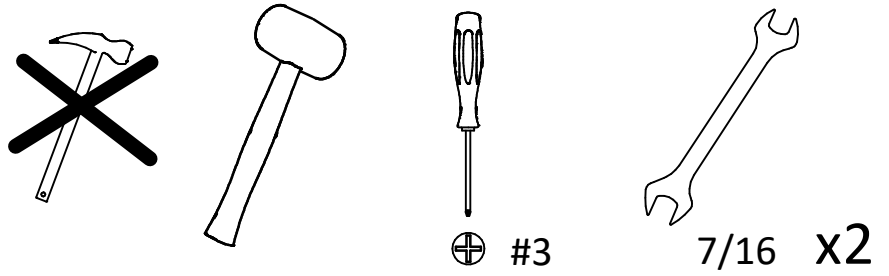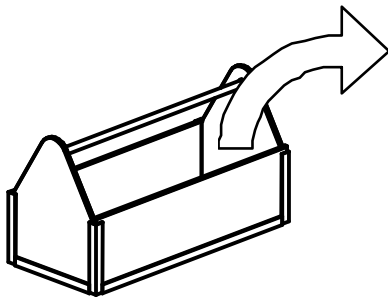

HDW-0028  
#12 x 7/8 Wood Screw



x56

HDW-0497  
1/4-20 x 5/8 w 7/16 Hex Bolt



x6

HDW-0031  
1/4 Lock Washer



x4

HDW-0074  
Flat Washer 5/16 ID 3/4 OD



x4



HDW-0068  
1/4-20 Nylon Lock Nut



x2





**Note: Assemble product near point-of-use.**

# 1

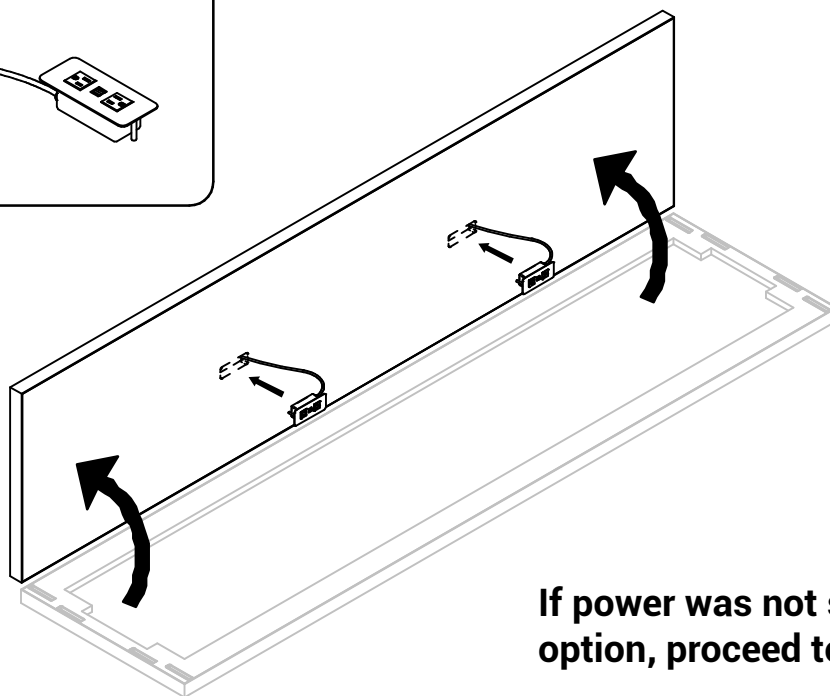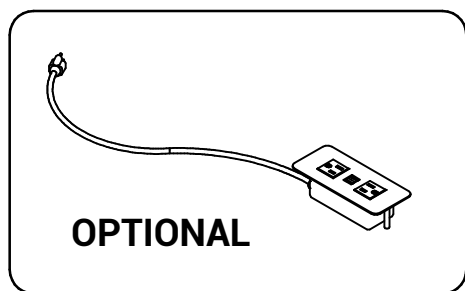


If power was not selected as an option, proceed to Step 2

# 2

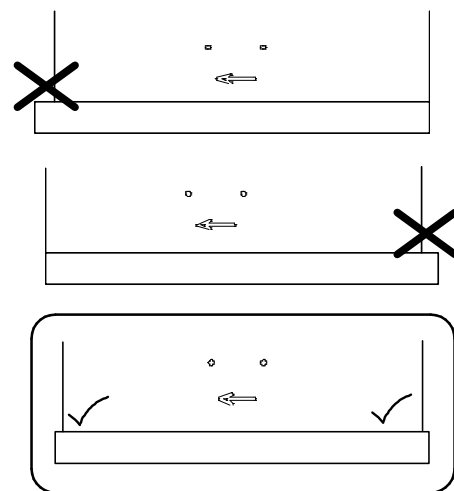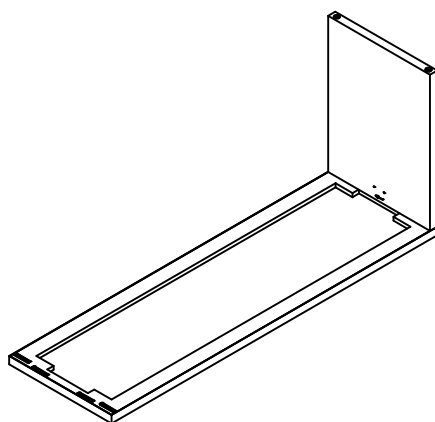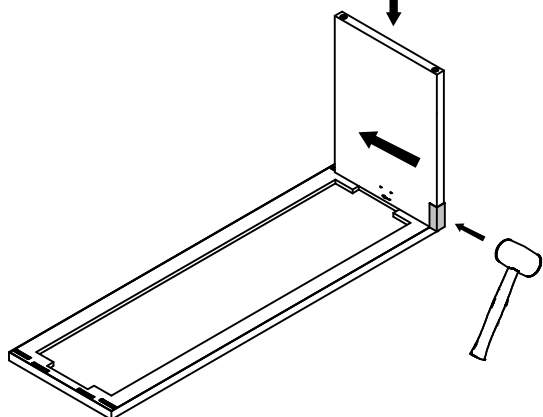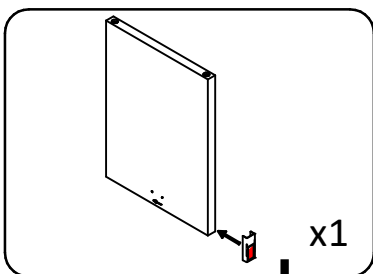


\*

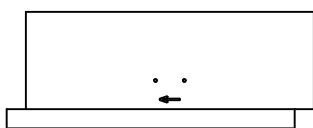

(A) Too Tight?







(B) Stop hitting




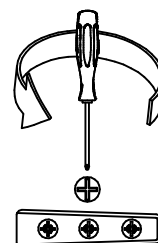


(C) Rotate all bedfitting screws on Table Top by 1/4 turn anti-clockwise. Repeat if necessary.




# 3

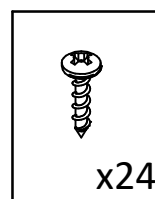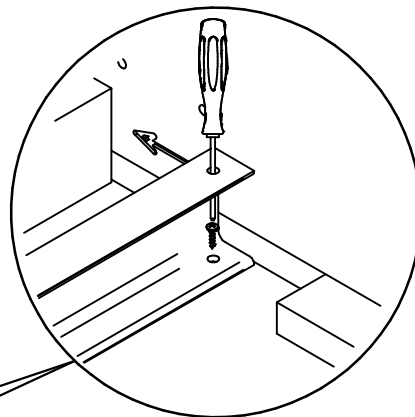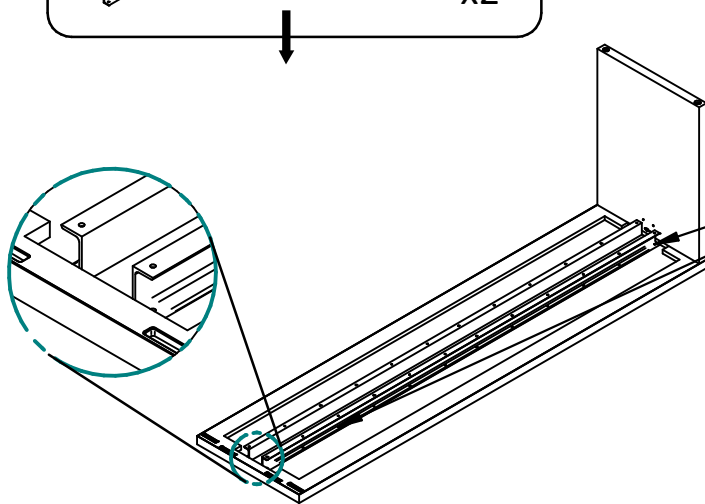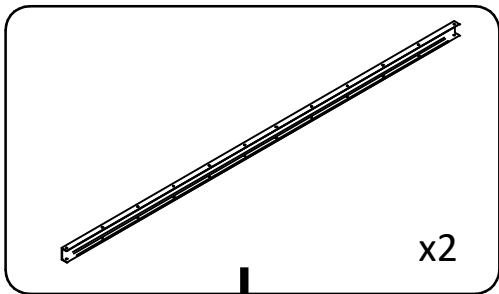





# 4

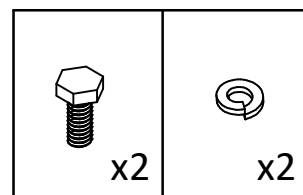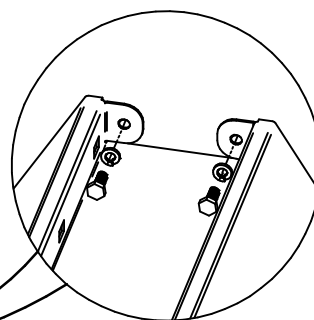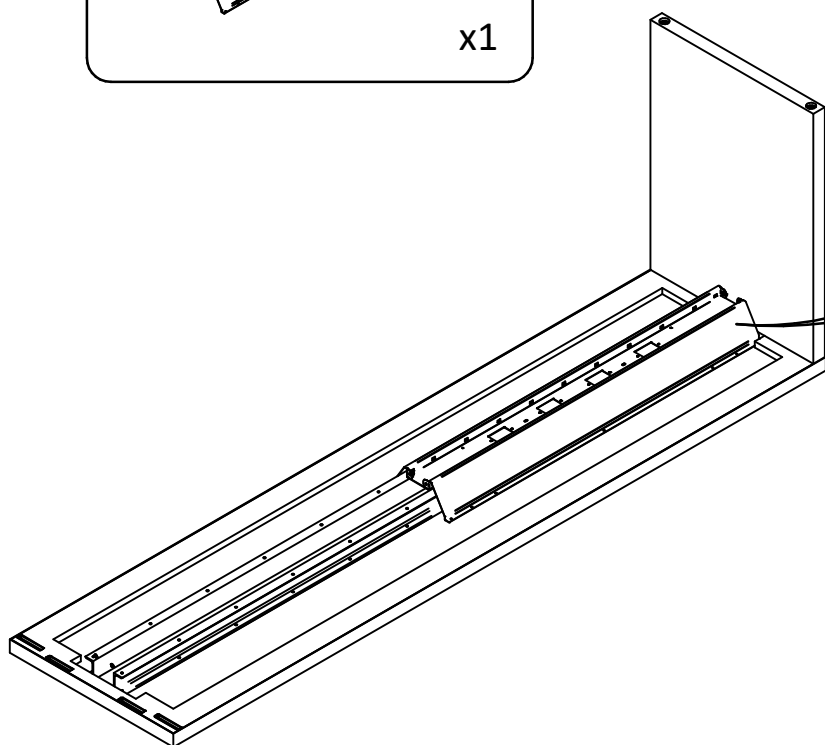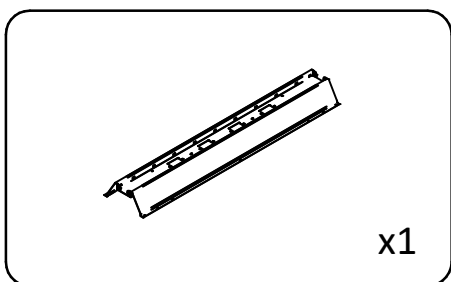

# 5

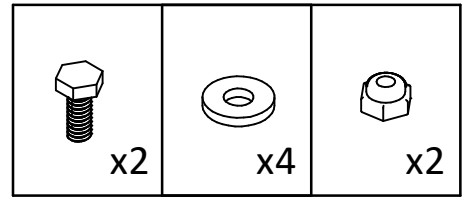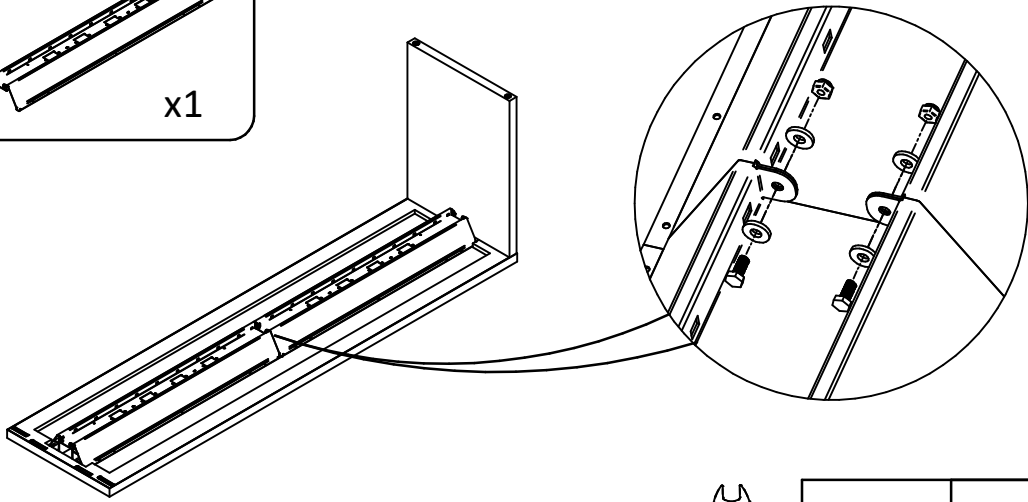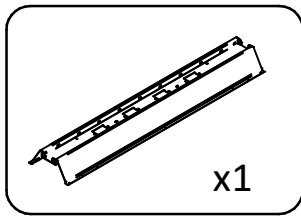


# 6

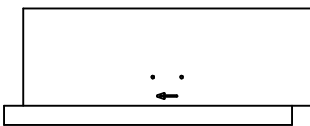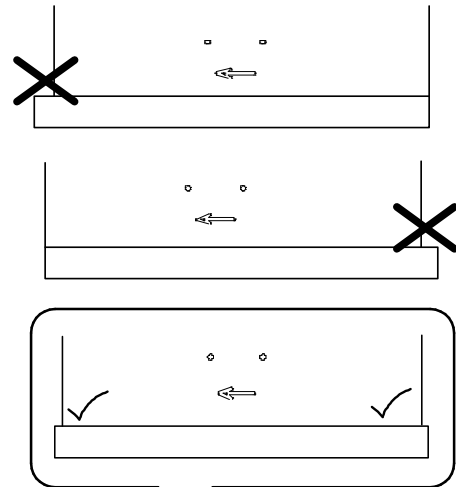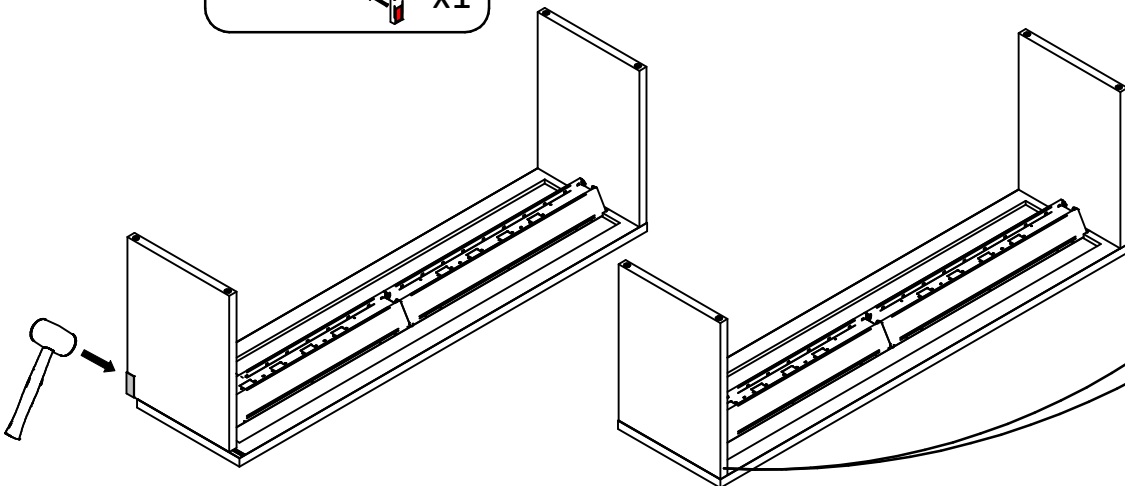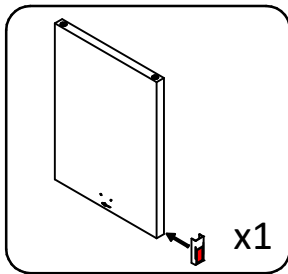

(A) Too Tight?





(B) Stop hitting


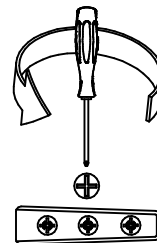


(C) Rotate all bedfitting screws on Table Top by 1/4 turn anti-clockwise. Repeat if necessary.


# 7

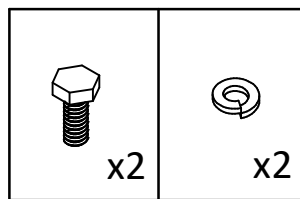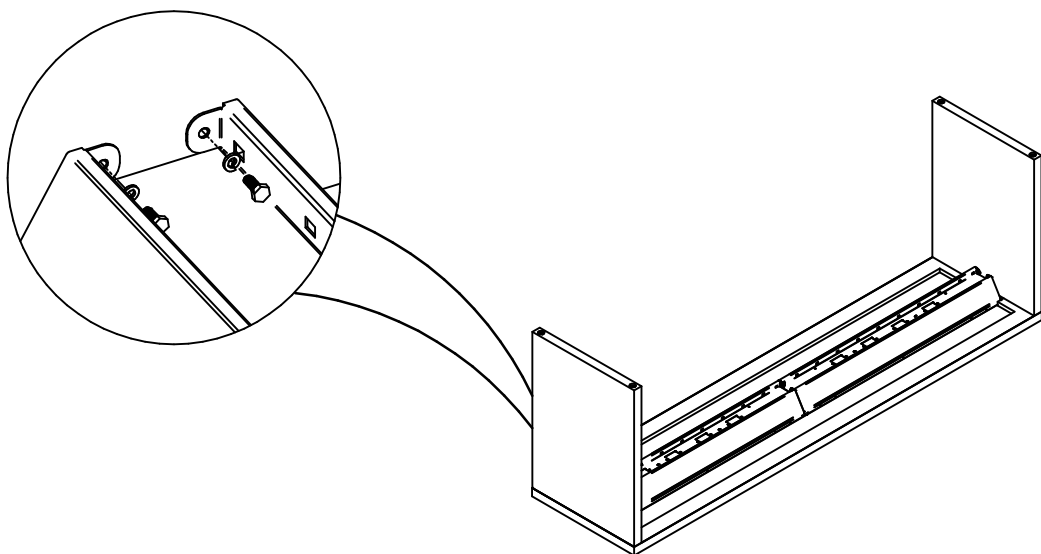



# 8

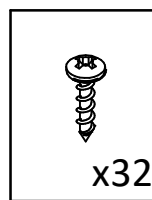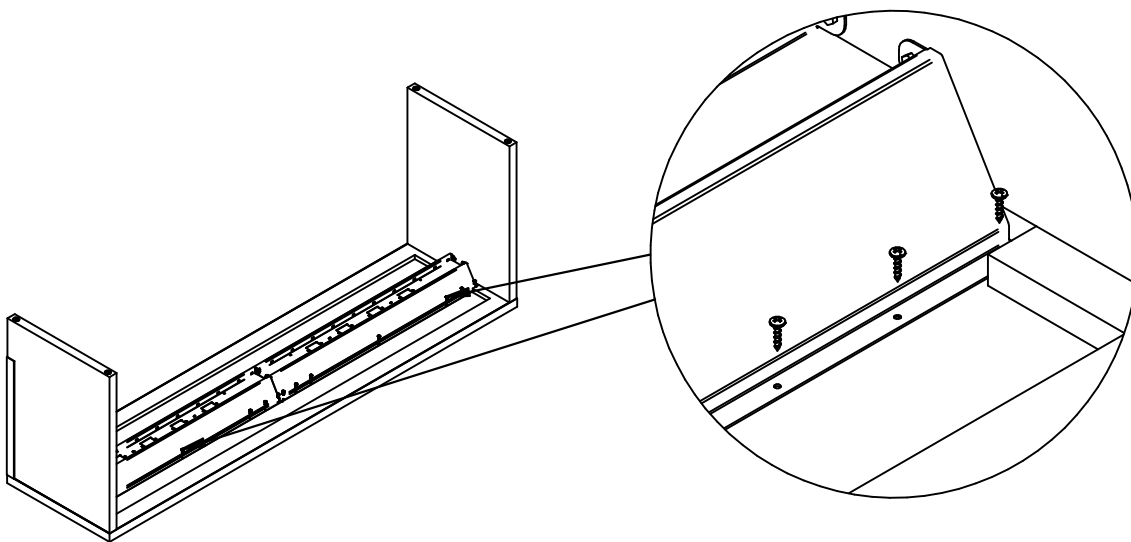

9

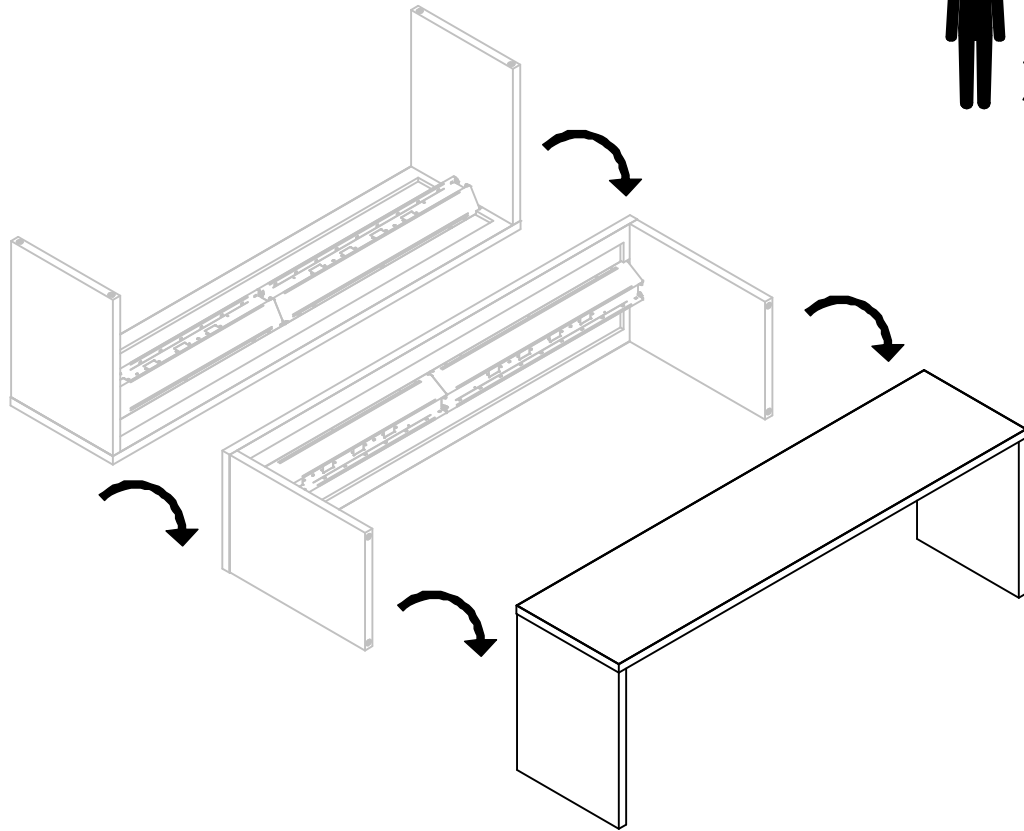

10

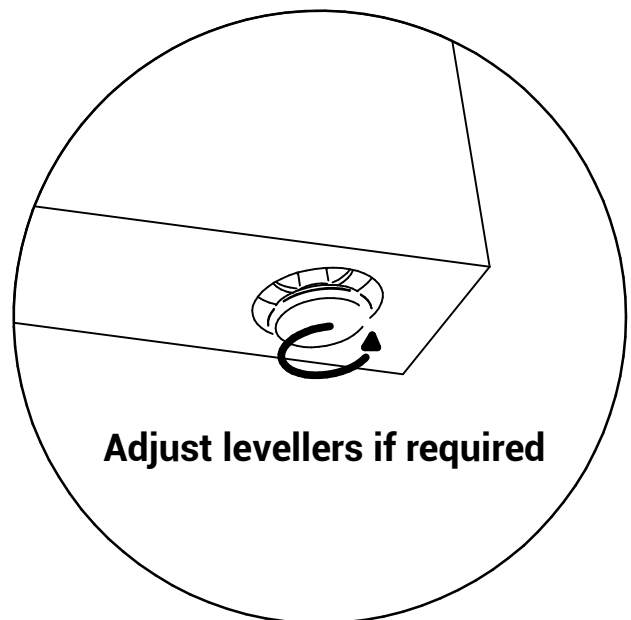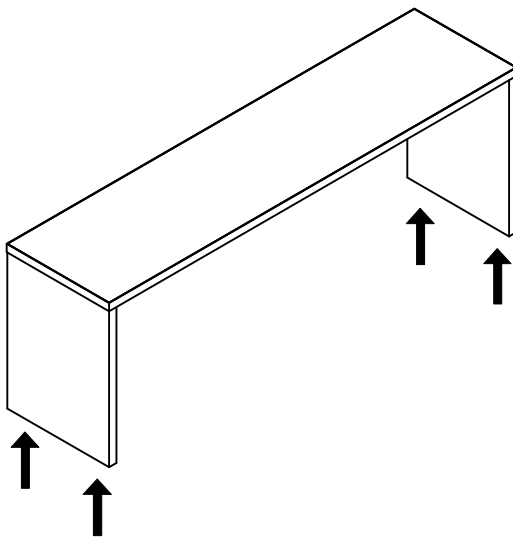


**Spec Furniture**

165 City View Drive, Toronto ON, M9W 5B1

**P:** 416.246.5540 | **F:** 416.246.5547

**E:** [specit@specfurniture.com](mailto:specit@specfurniture.com) | [specfurniture.com](http://specfurniture.com)

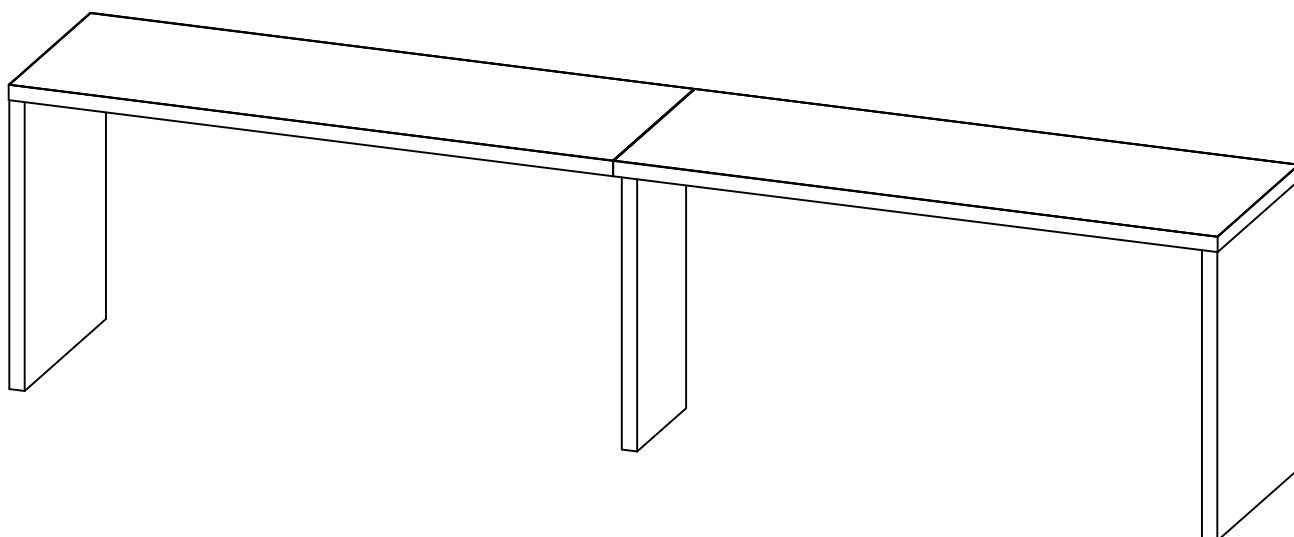



# ENDZONE

## 2" End Panels


For tables with center gables  
(121"-190")







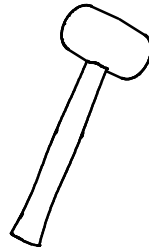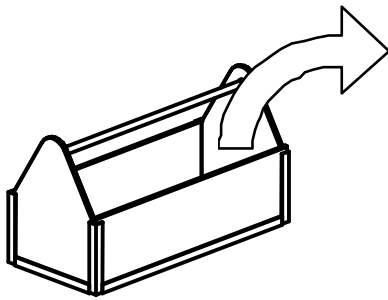

#3

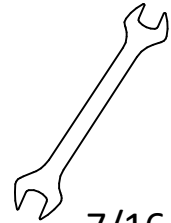


7/16 x2

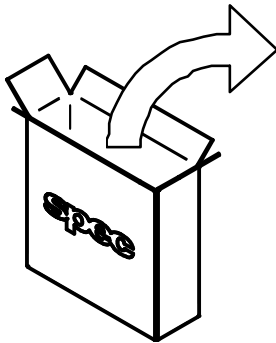

x2




x1

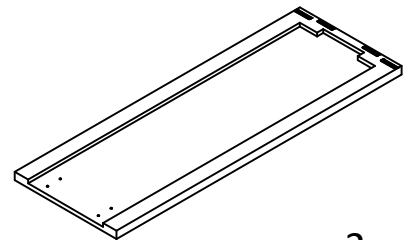


x2




x2

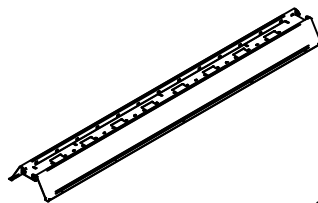

x2

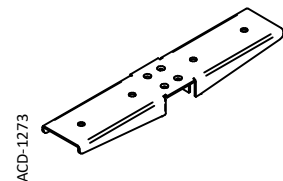

x2



x4



x8



x32



x4



x8



x8





x4



x4






**Note: Assemble product near point-of-use.**

# 1

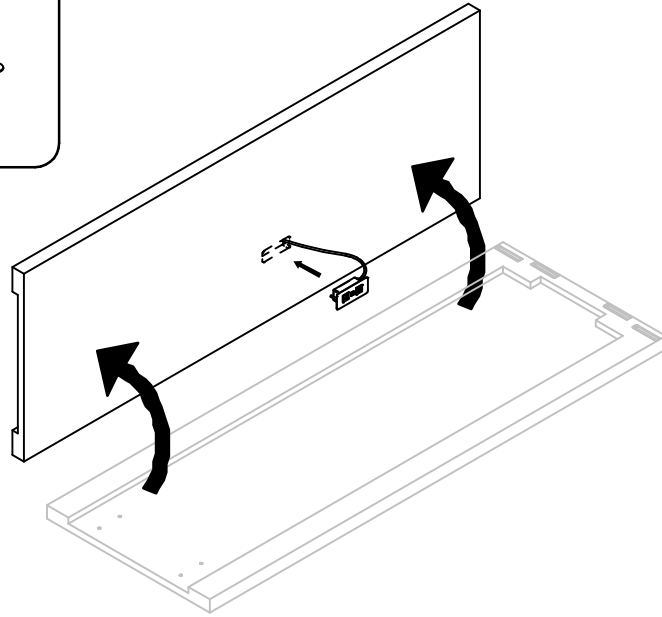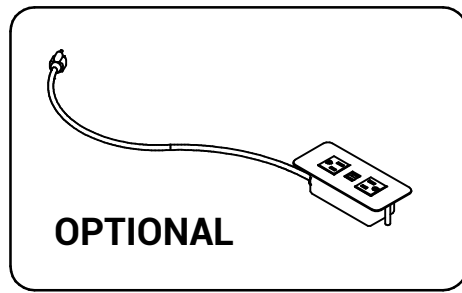

If power was not selected as an option, proceed to Step 2


# 2

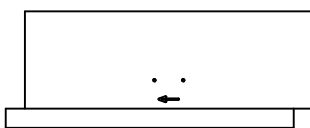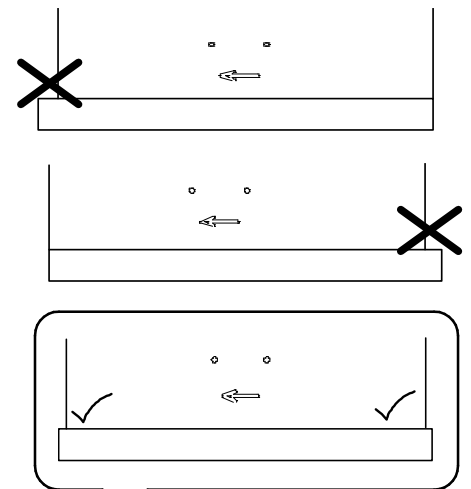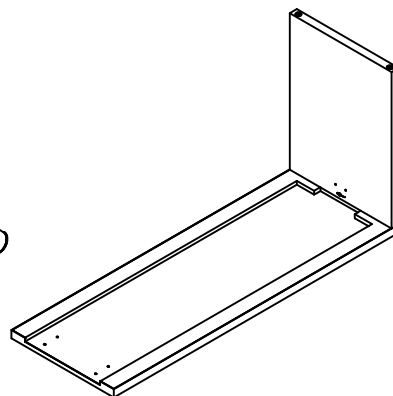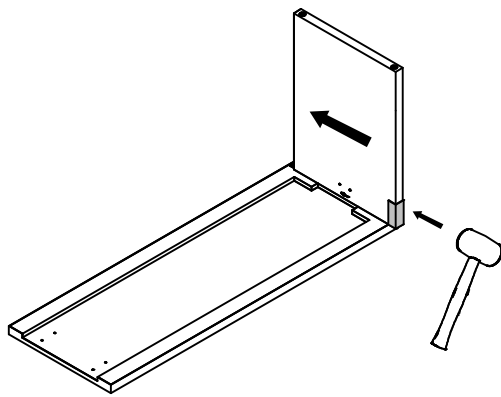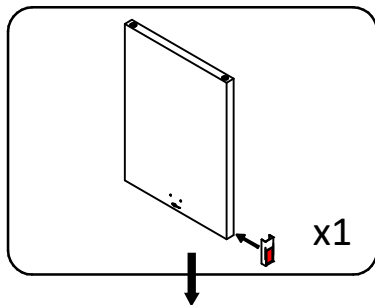

(A) Too Tight?




(B) Stop hitting

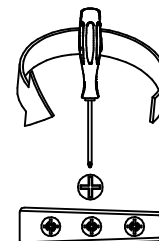

(C) Rotate all bedfitting screws on Table Top by 1/4 turn anti-clockwise. Repeat if necessary.

# 3

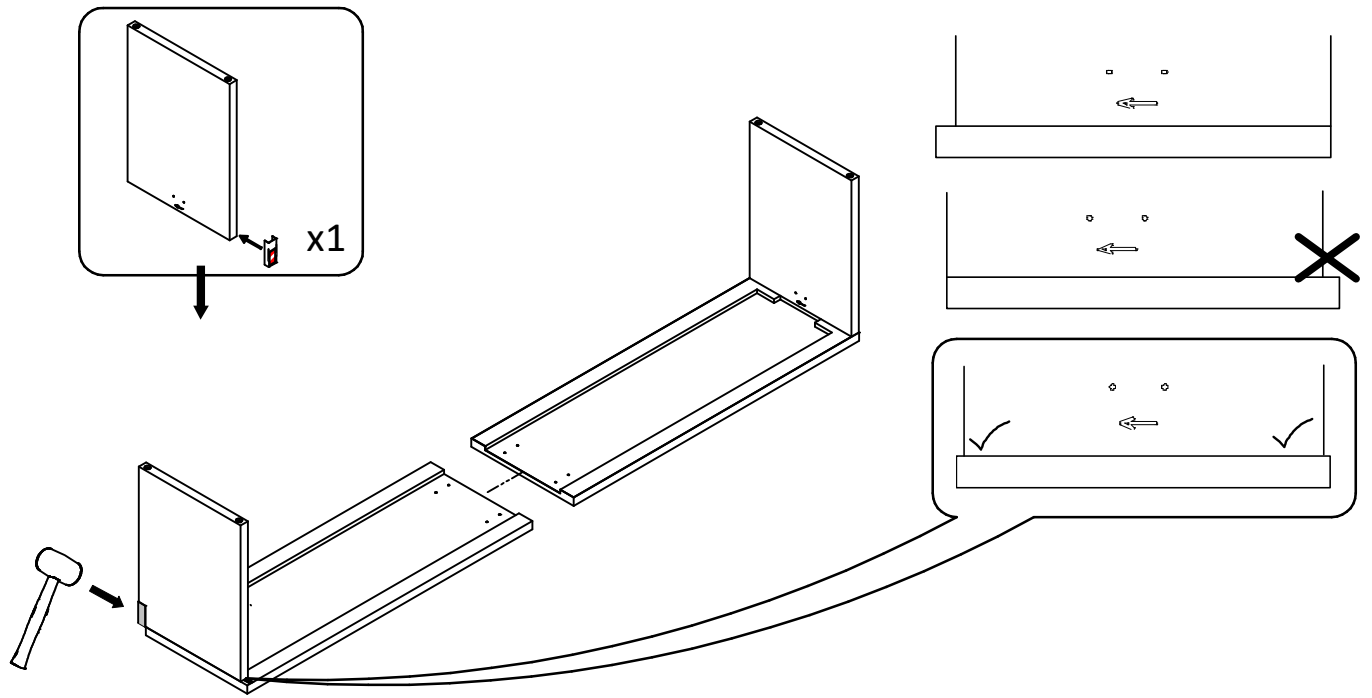


(A) Too Tight?



(B) Stop hitting

(C) Rotate all bedfitting screws on Table Top by 1/4 turn anti-clockwise. Repeat if necessary.



# 4

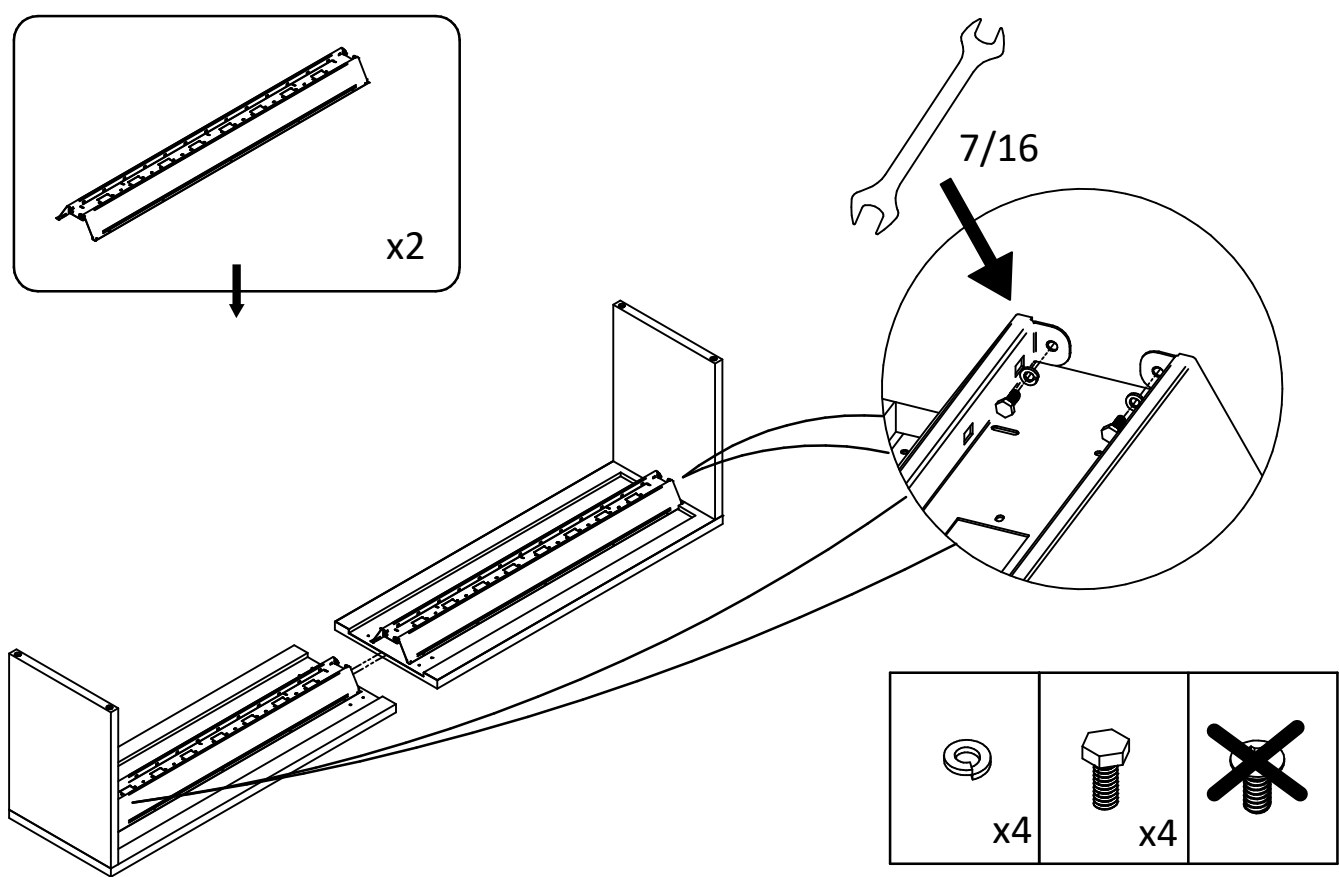


5

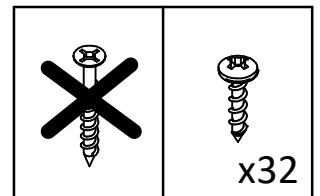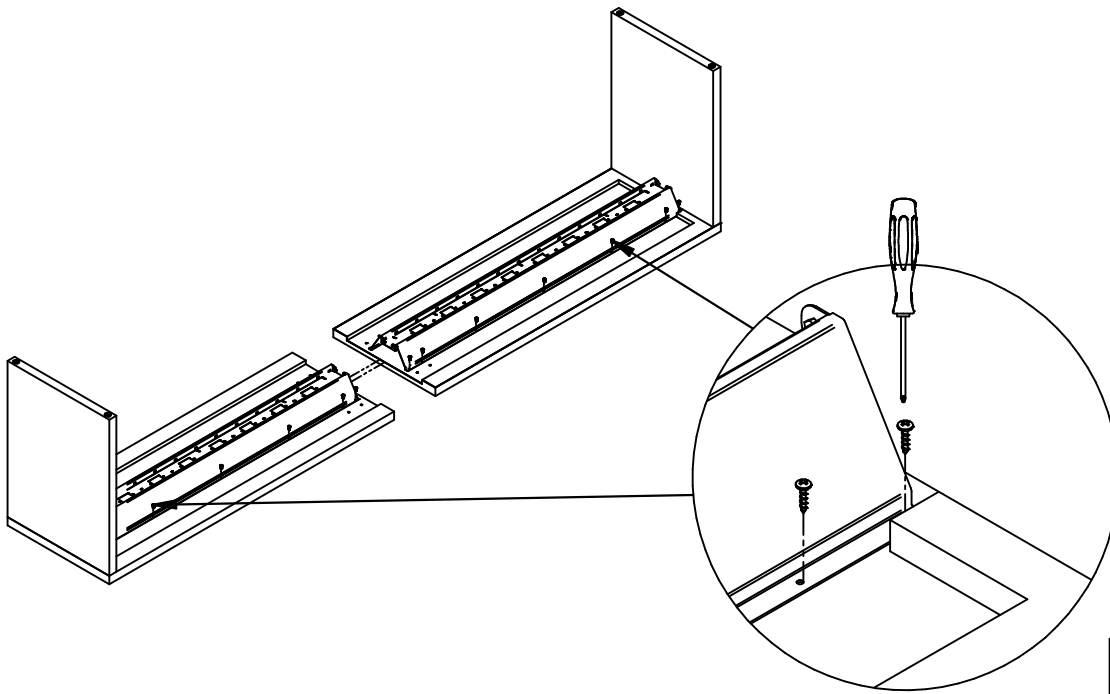


6

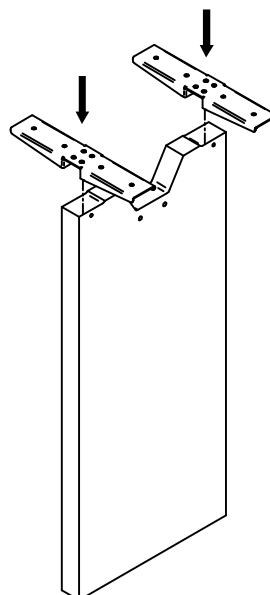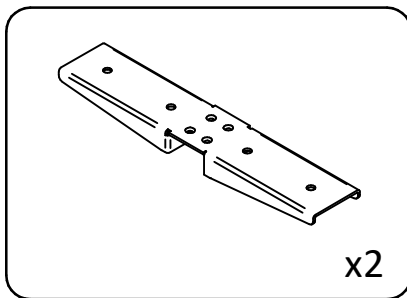


# 7

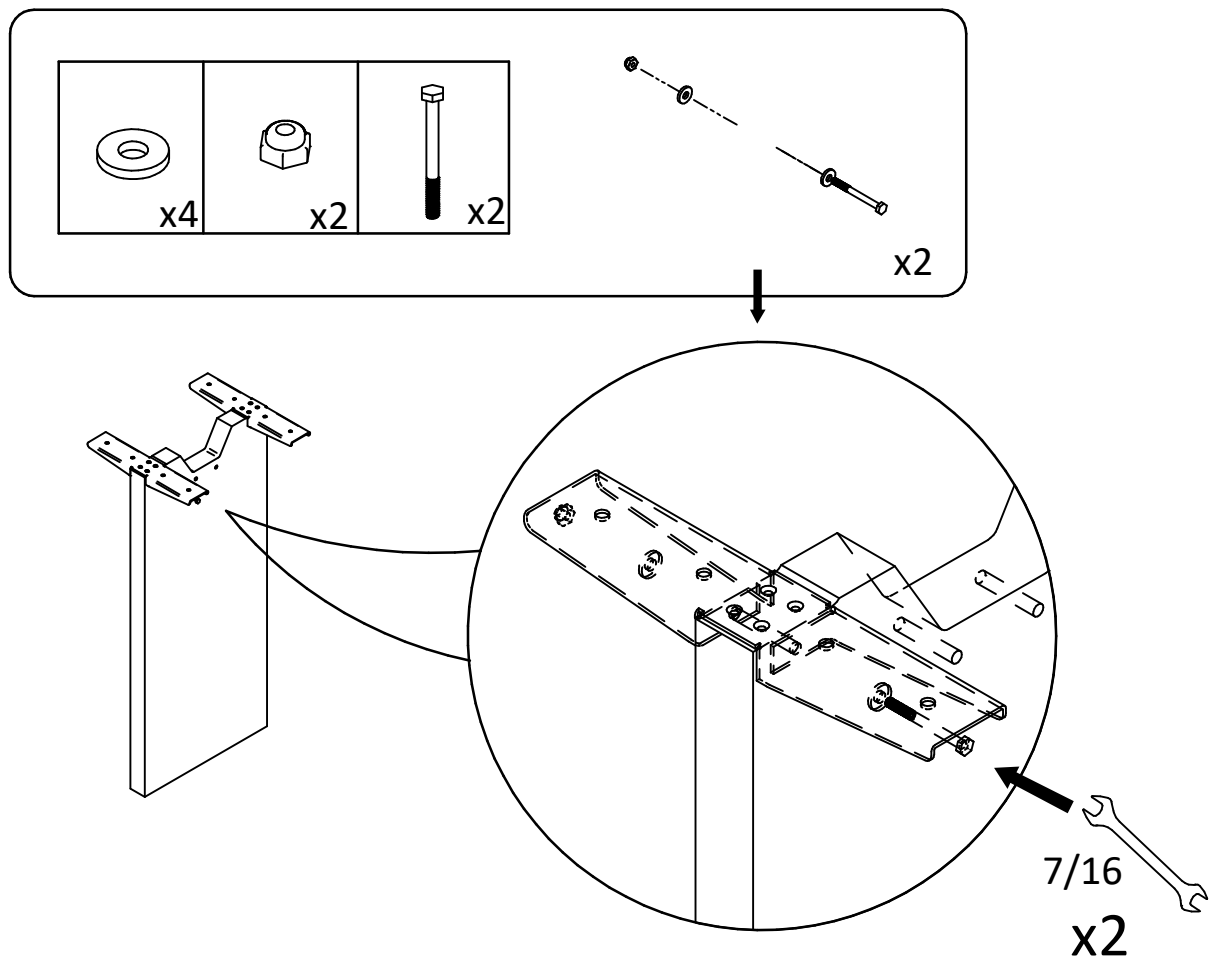


# 8

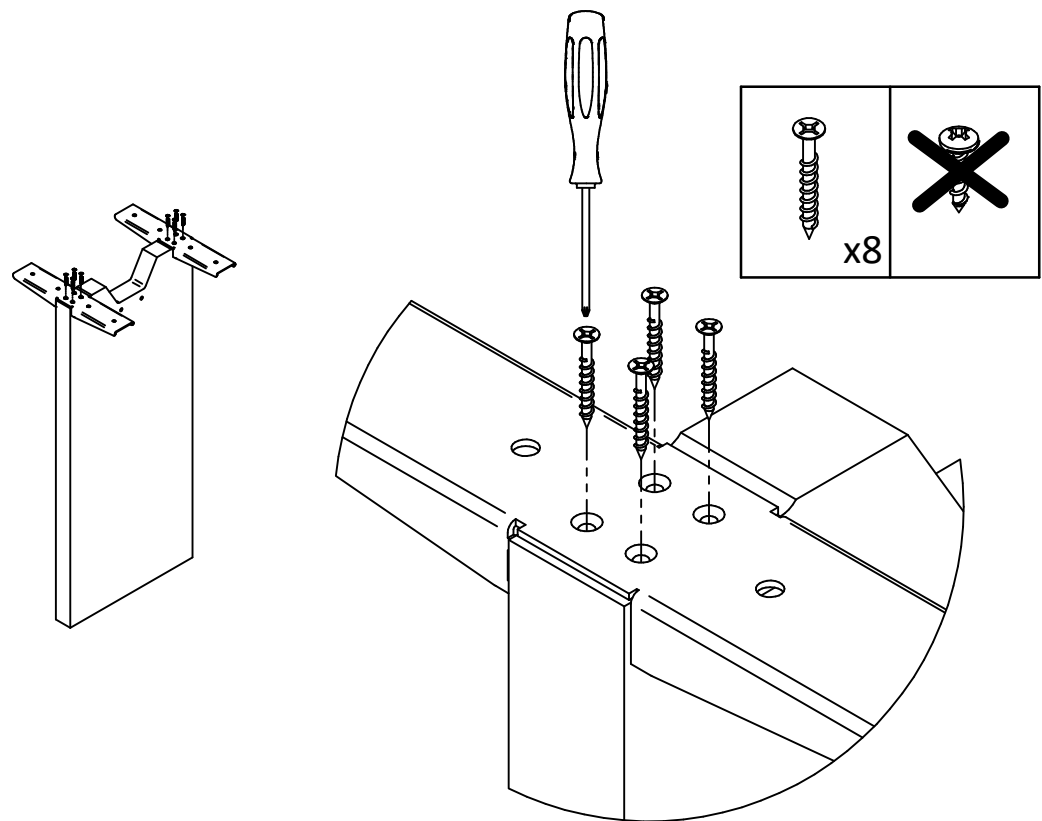


9

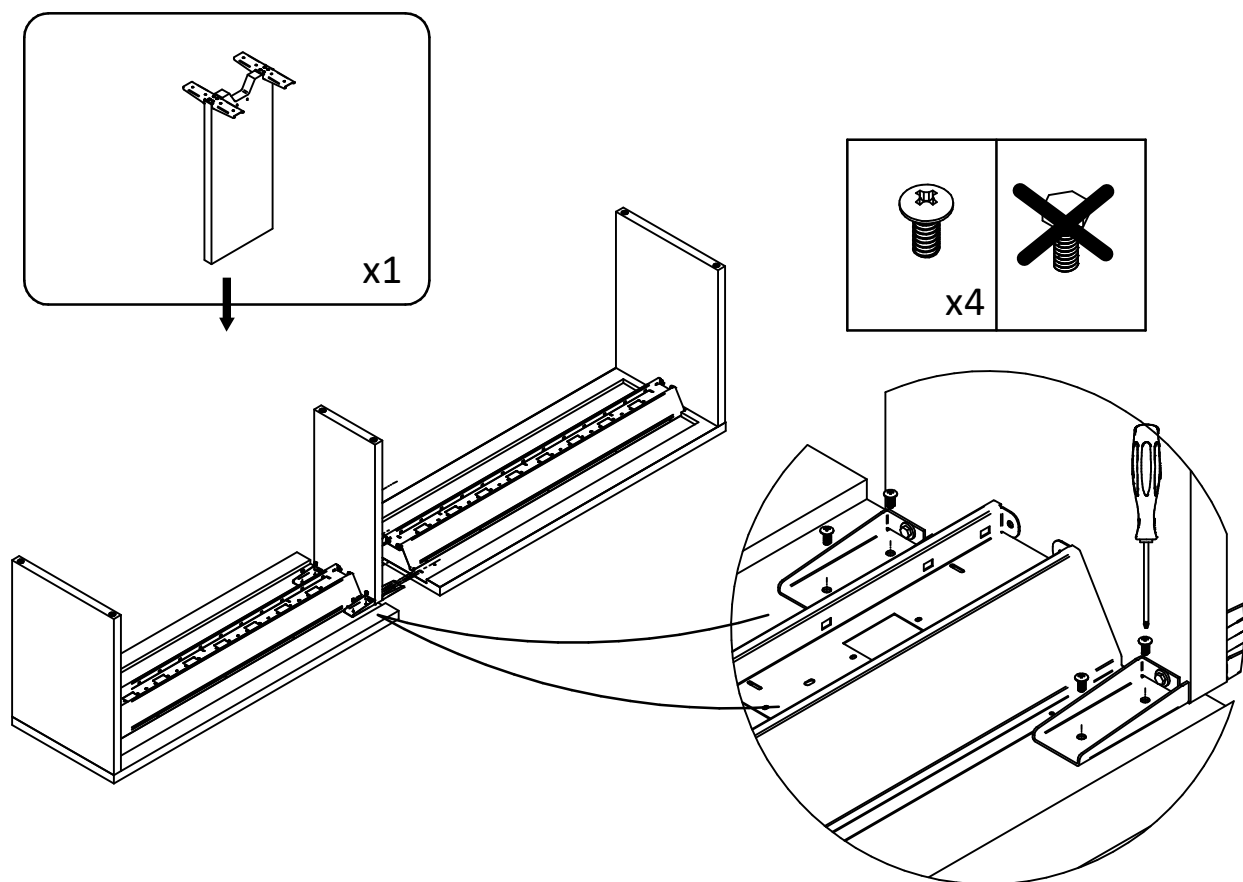

10


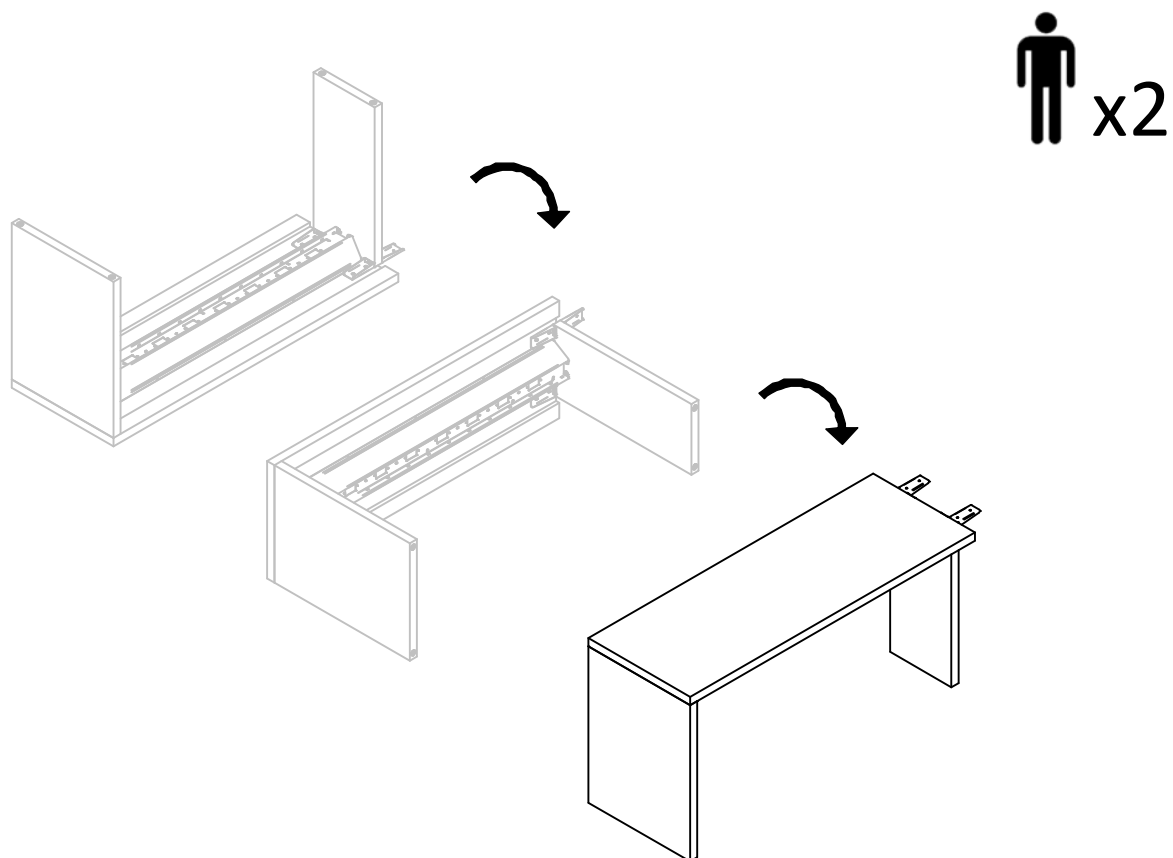


# 11

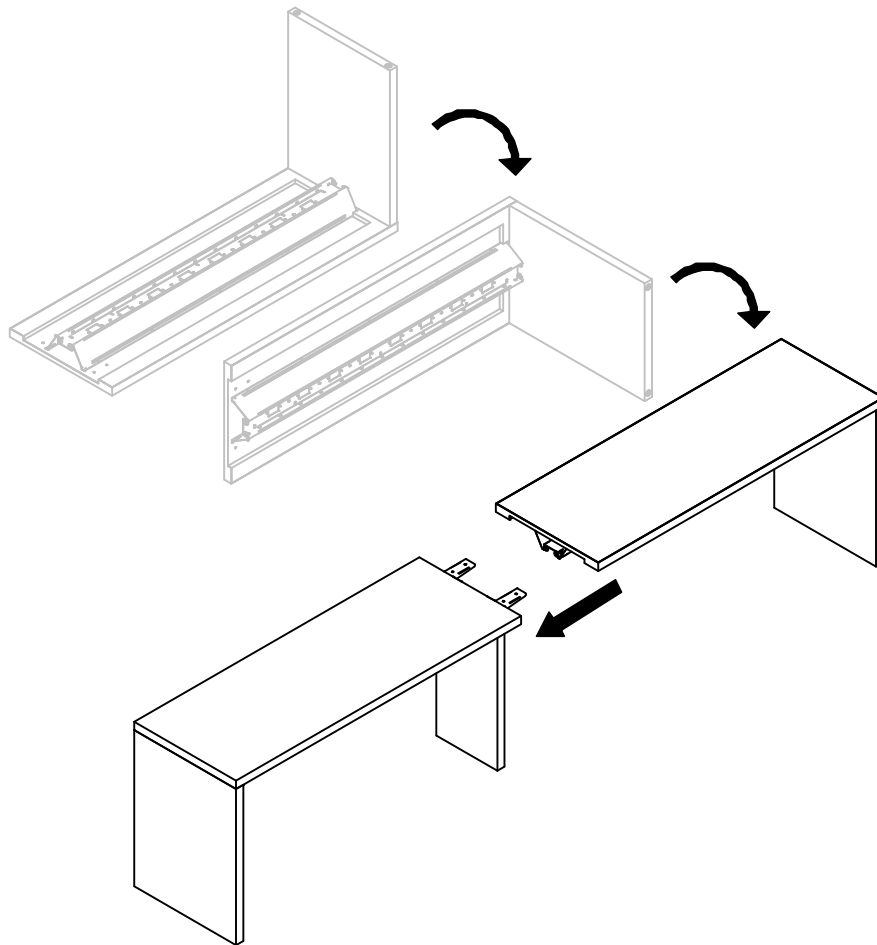


Person icon x2

# 12

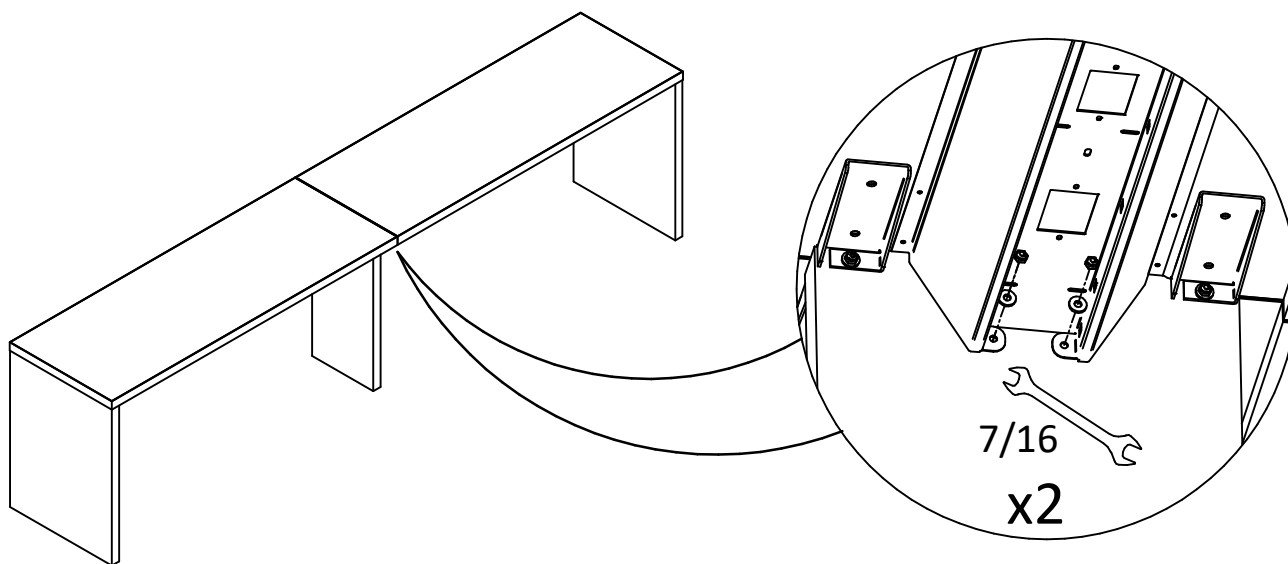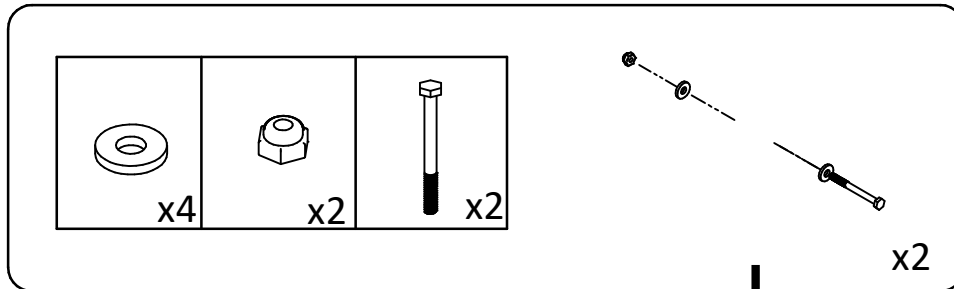




# 13

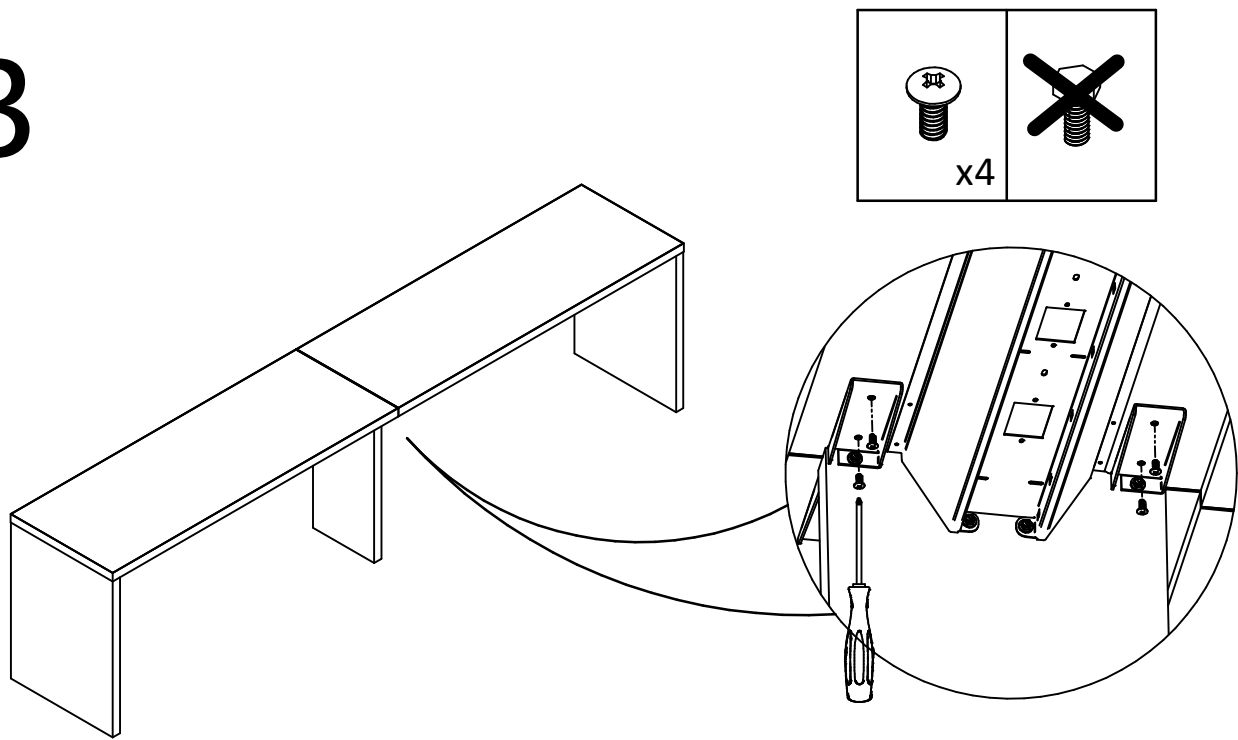

# 14

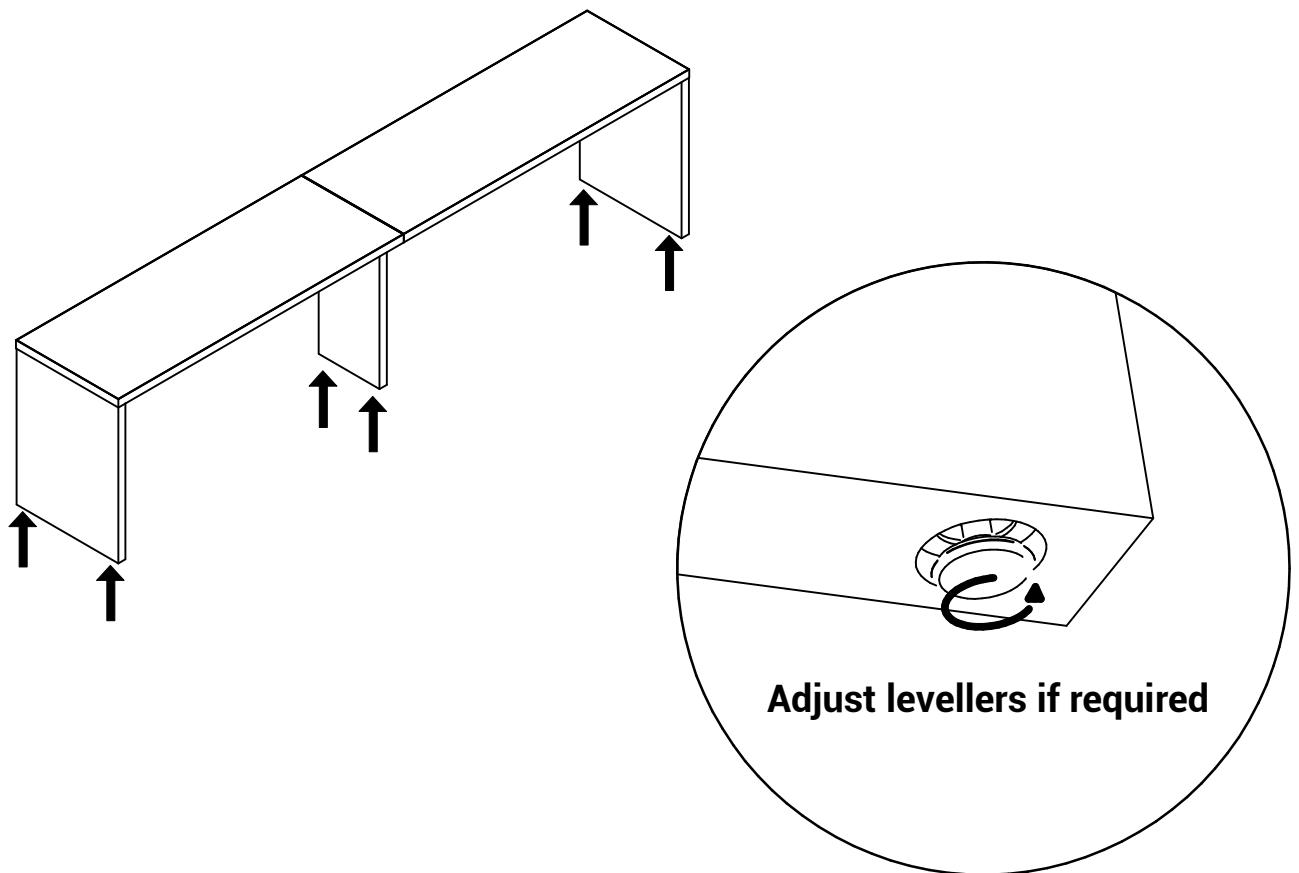




**Spec Furniture**

165 City View Drive, Toronto ON, M9W 5B1

**P:** 416.246.5540 | **F:** 416.246.5547



**E:** [specit@specfurniture.com](mailto:specit@specfurniture.com) | [specfurniture.com](http://specfurniture.com)

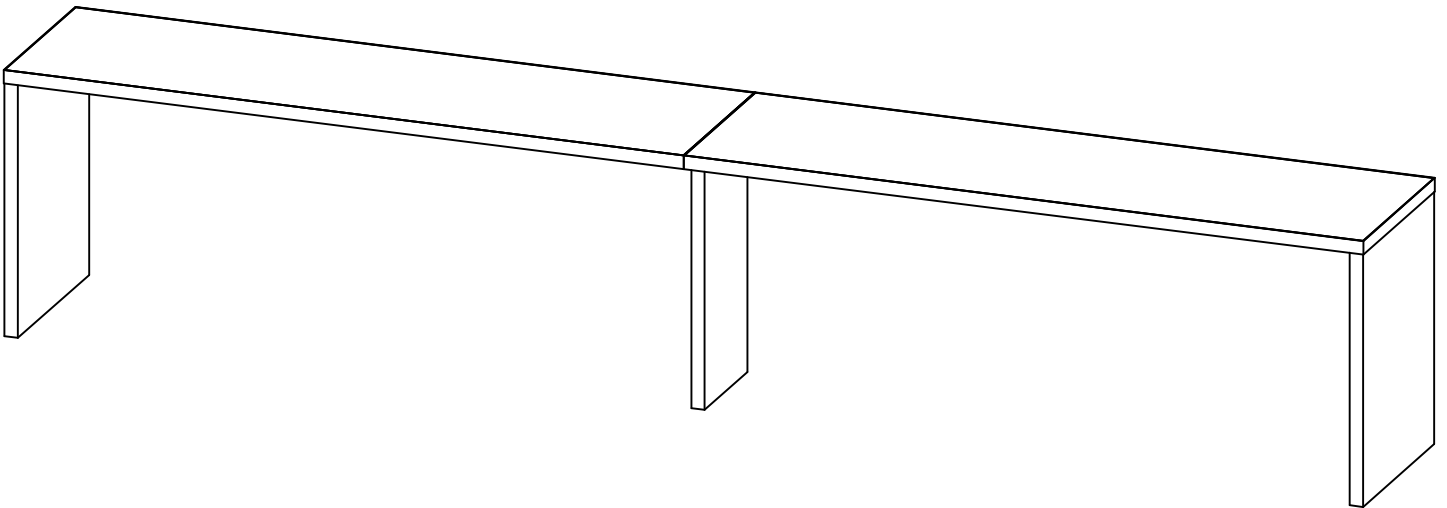


# ENDZONE

## 2" End Panels



For tables with center gables and support channels  
(191"+)

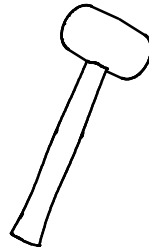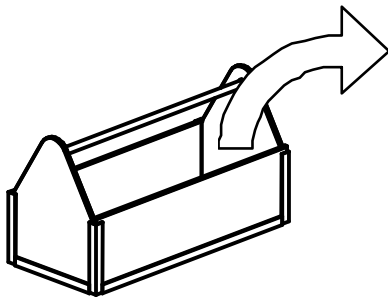

#3

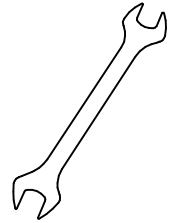


7/16 x2

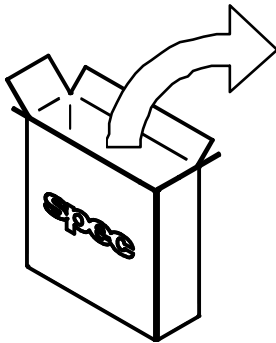

x2




x1

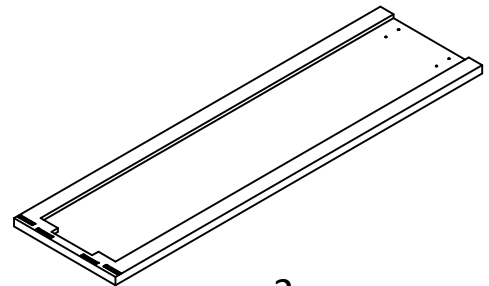


x2



x1

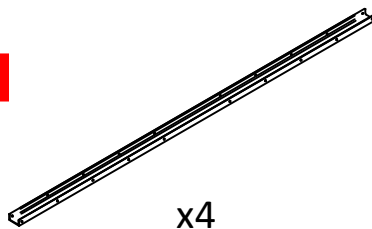


x4

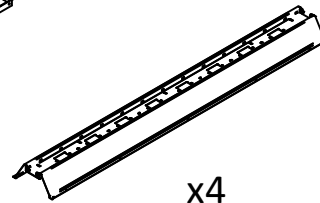


x4

ACD-1273

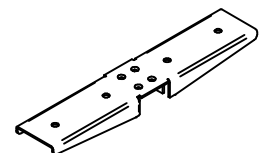

x2



HDW-0743  
1/4-20 x 2-3/4 Bolt

x4




HDW-0081  
8 x 1-1/2 Wood Screw

x8




HDW-0028  
#12 x 7/8 Wood Screw

x104




HDW-0497  
1/4-20 x 5/8 w 7/16 Hex Bolt

x8




HDW-0009  
1/4-20 x 5/8 Bolt

x8

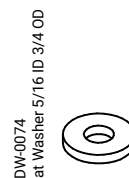


HDW-0074  
Flat Washer 5/16 ID 3/4 OD

x16



HDW-0031  
1/4 Lock Washer

x4





HDW-0068  
1/4-20 Nylon Lock Nut

x8








**Note: Assemble product near point-of-use.**

# 1

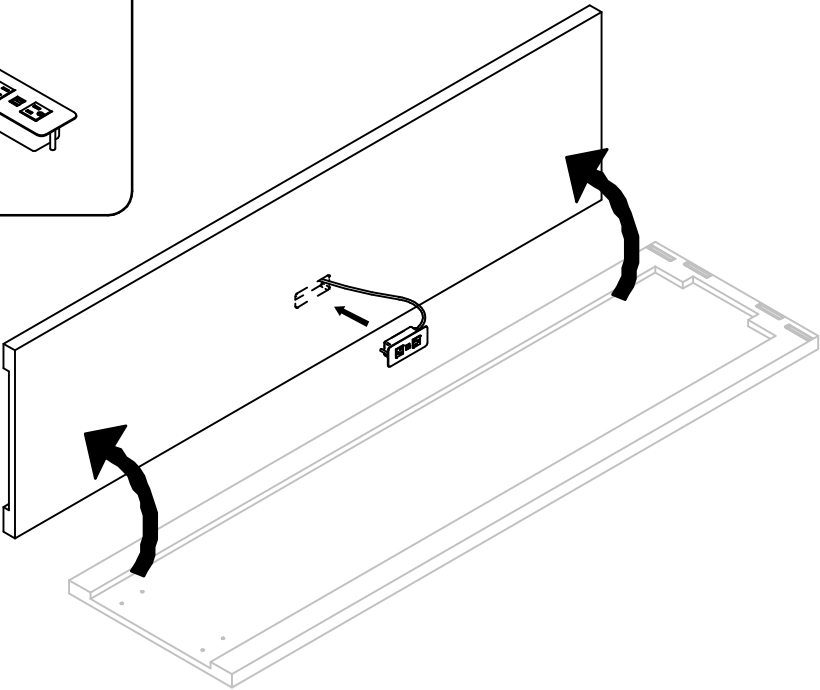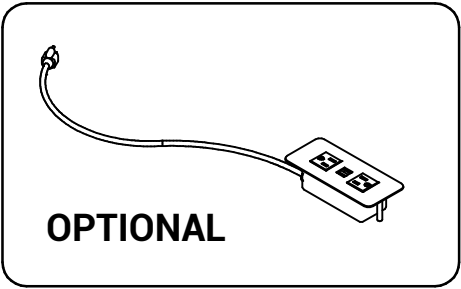

If power was not selected as an option, proceed to Step 2.


# 2

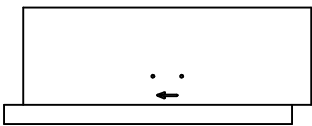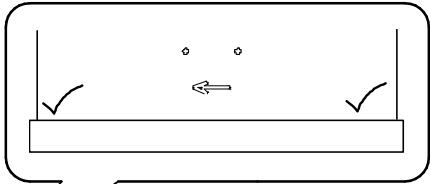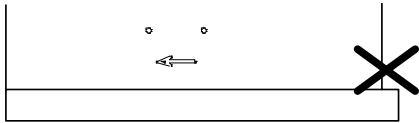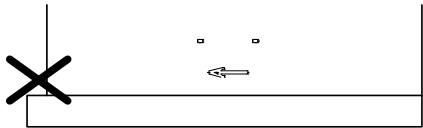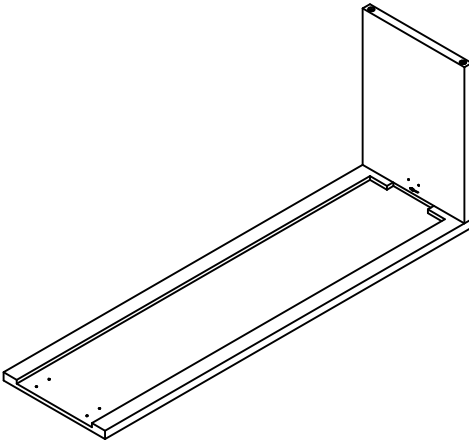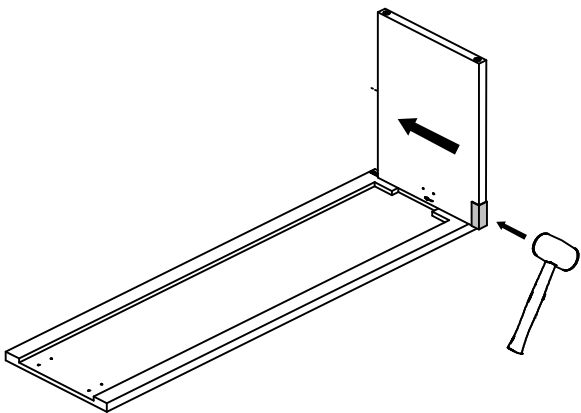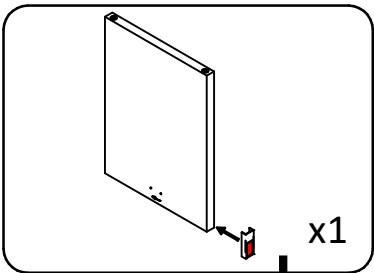

(A) Too Tight?





(B) Stop hitting

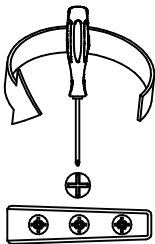


(C) Rotate all bedfitting screws on Table Top by 1/4 turn anti-clockwise. Repeat if necessary.


# 3

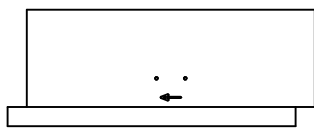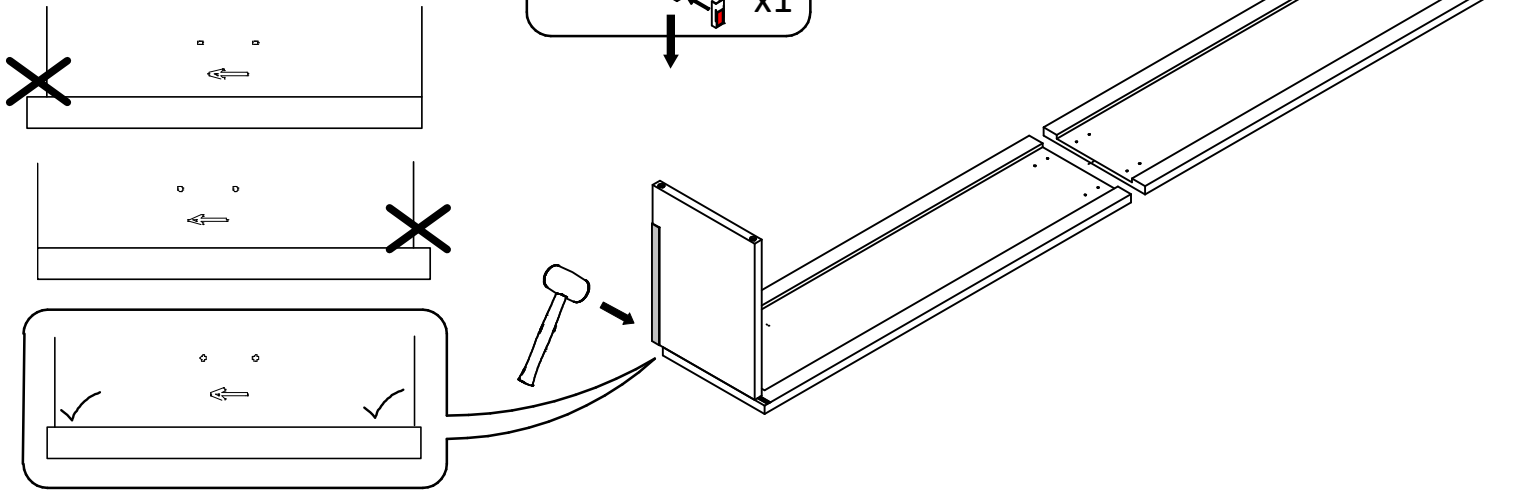

(A) Too Tight?



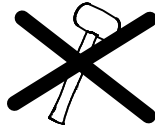


(B) Stop hitting





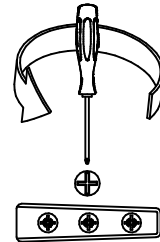


(C) Rotate all bedfitting screws on Table Top by 1/4 turn anti-clockwise. Repeat if necessary.






# 4

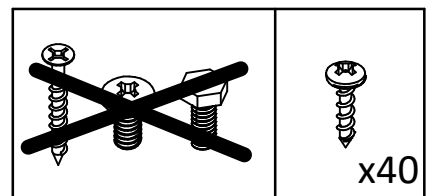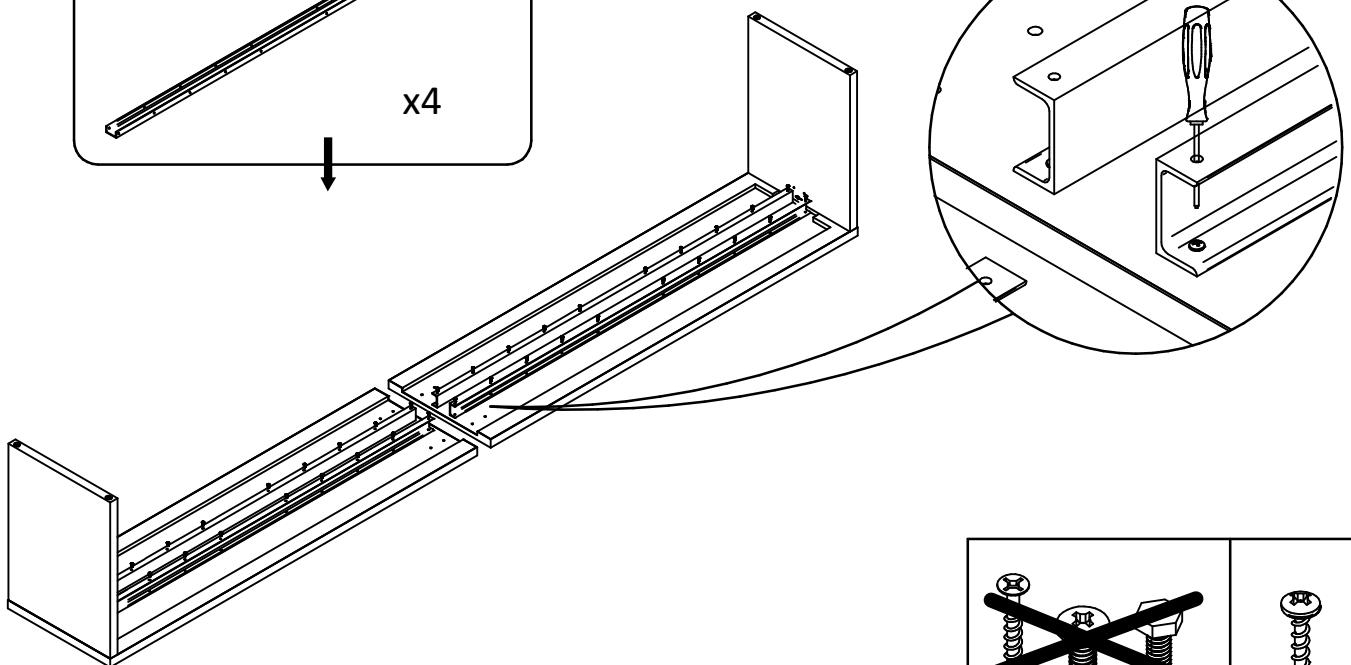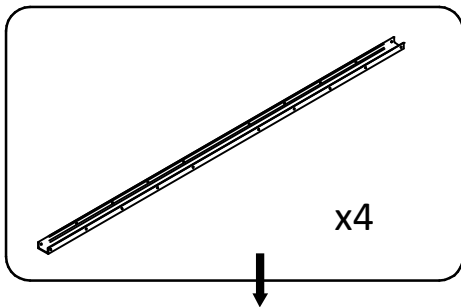

# 5

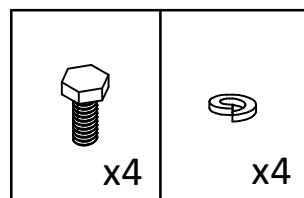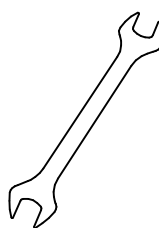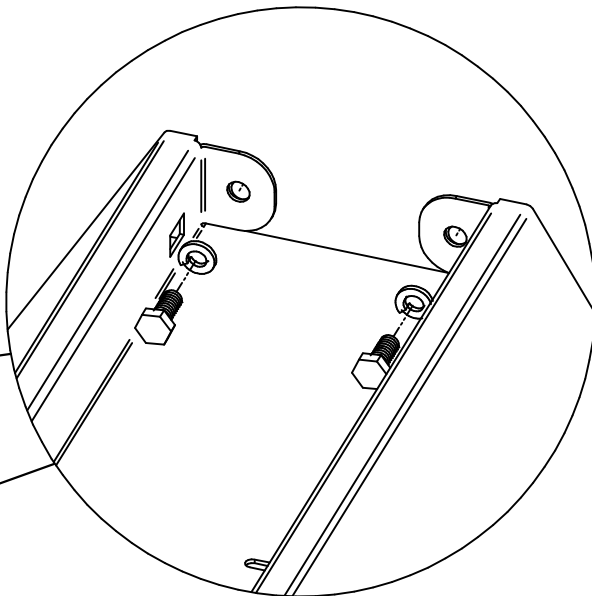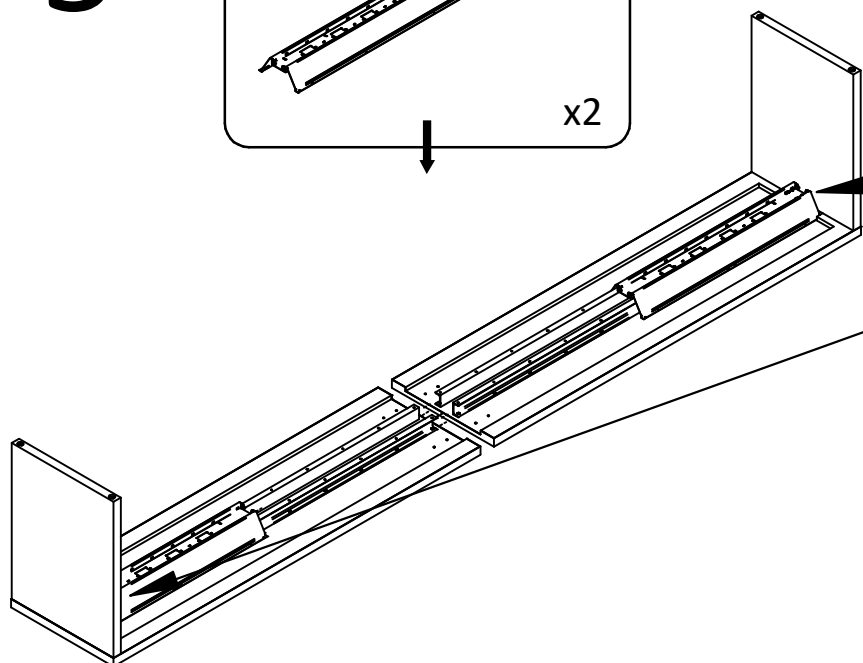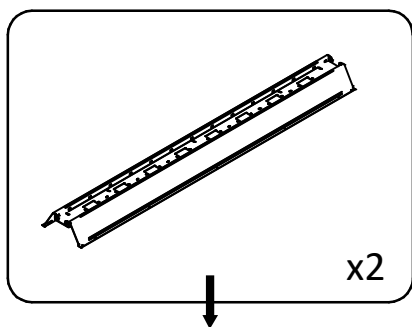


# 6

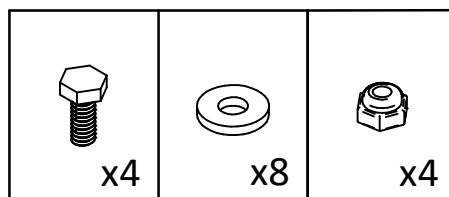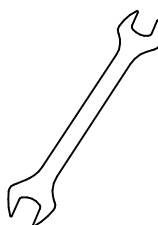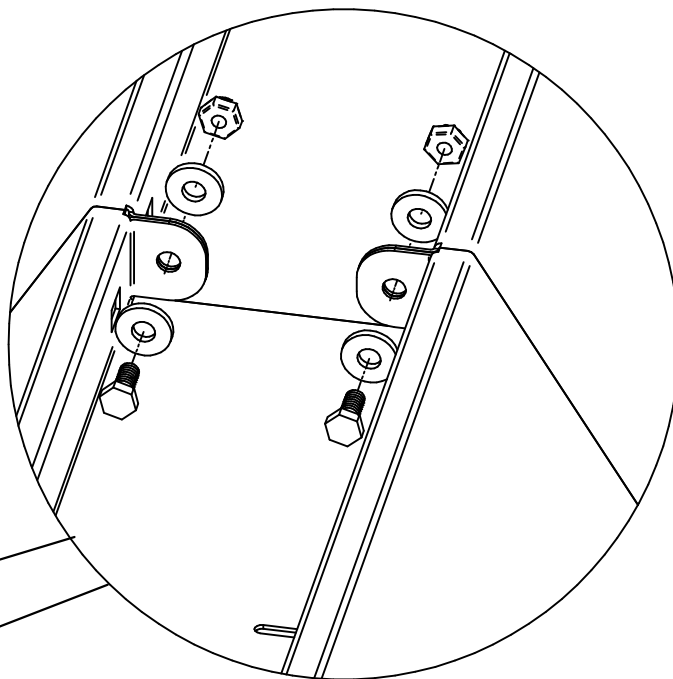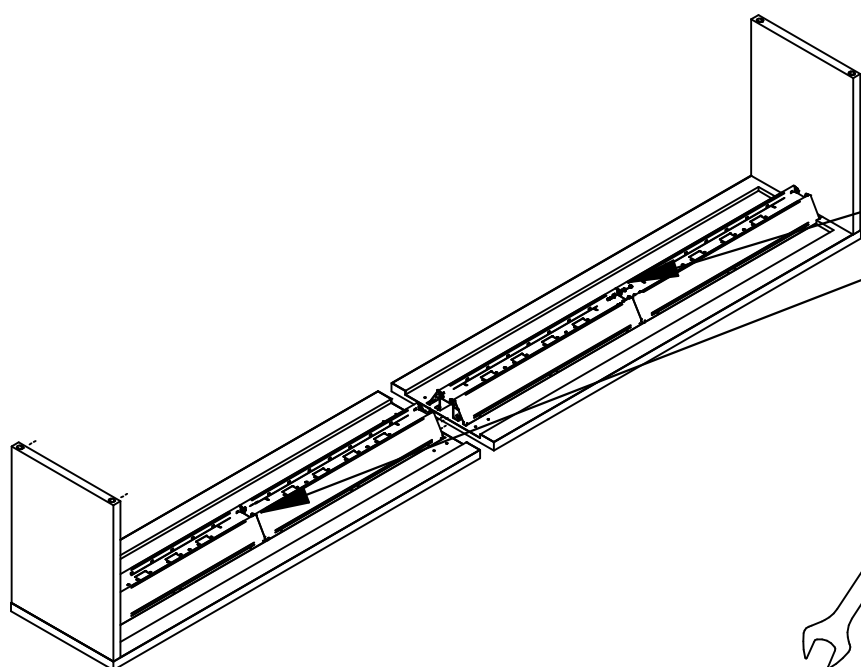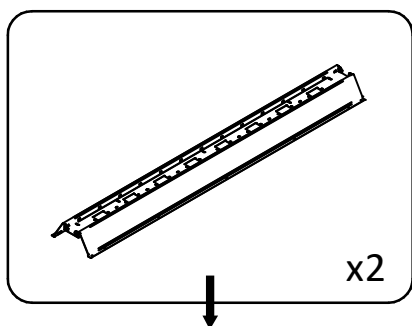





# 7

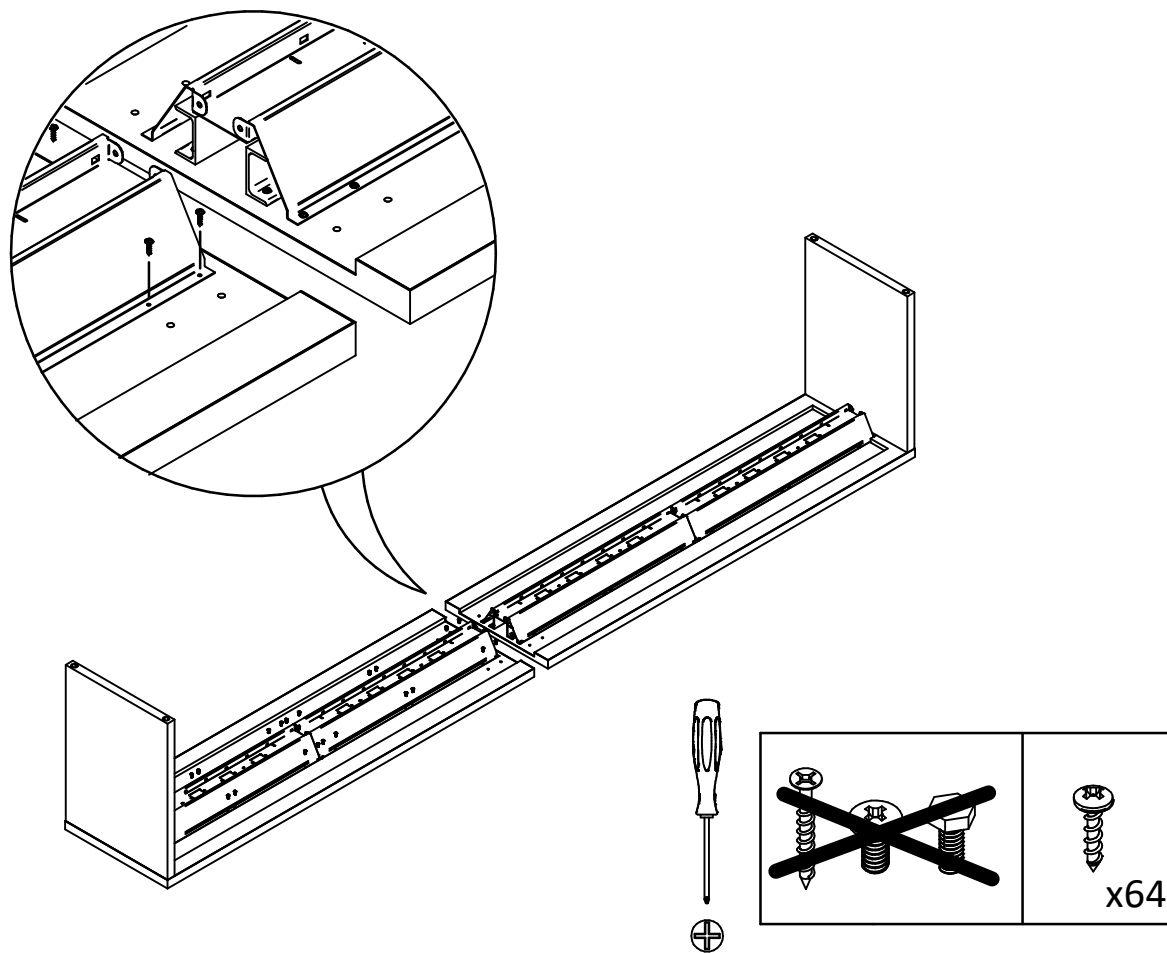


# 8

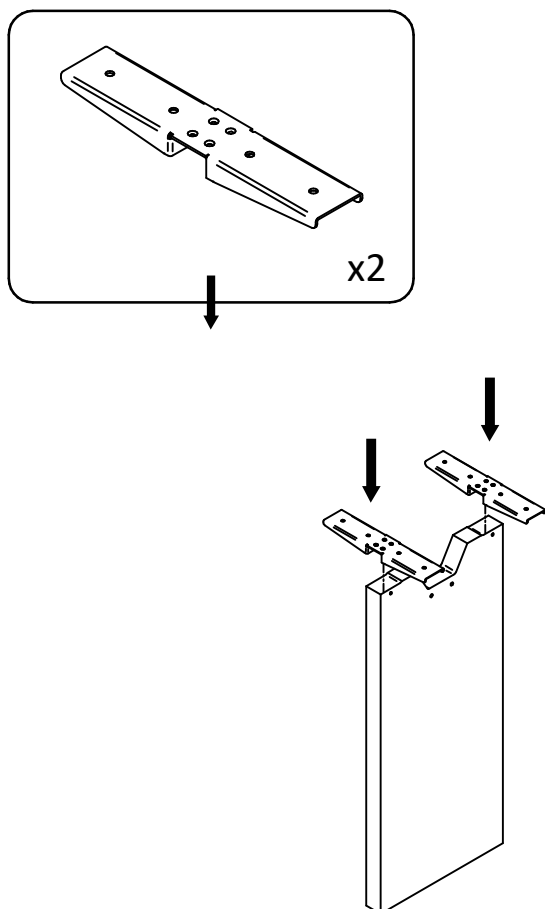


# 9

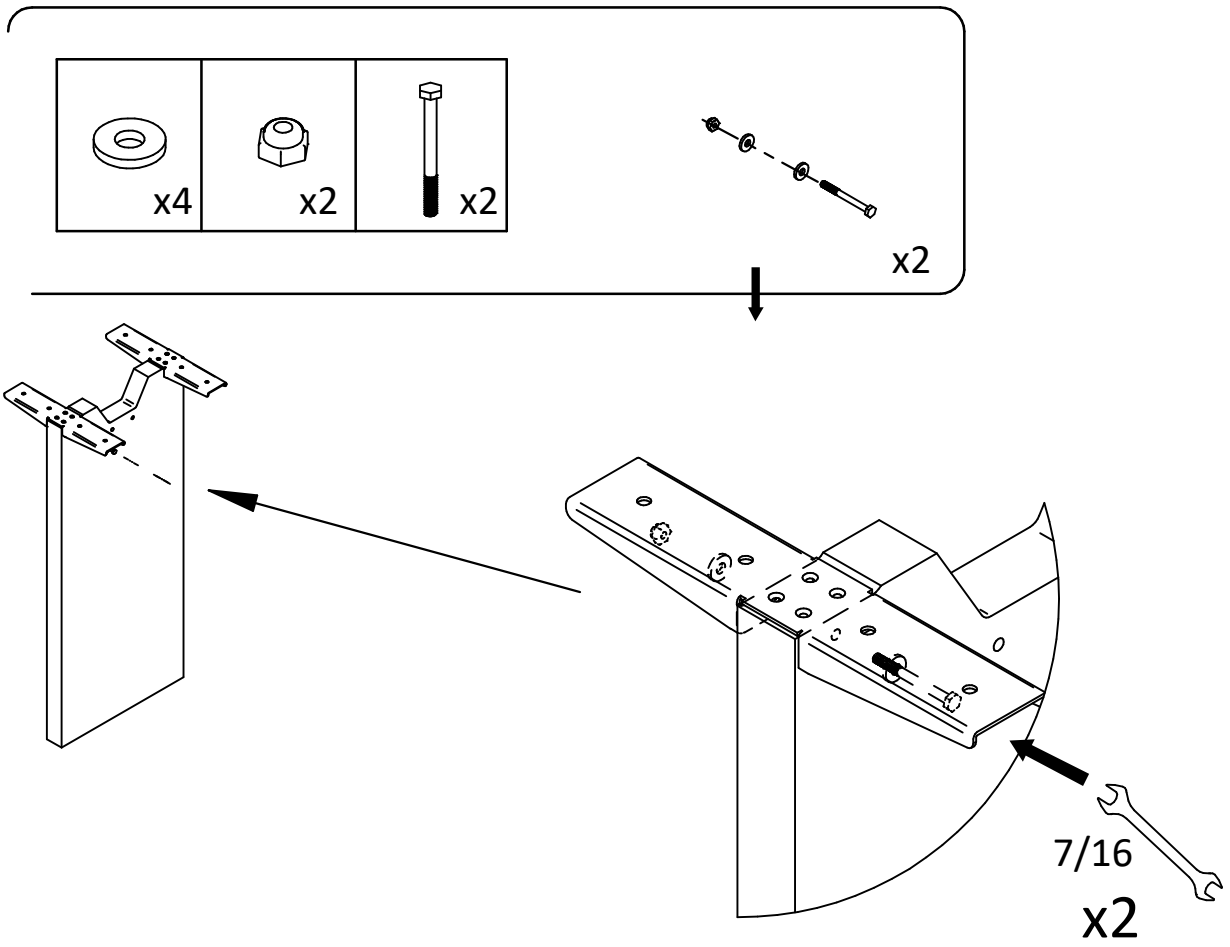


# 10

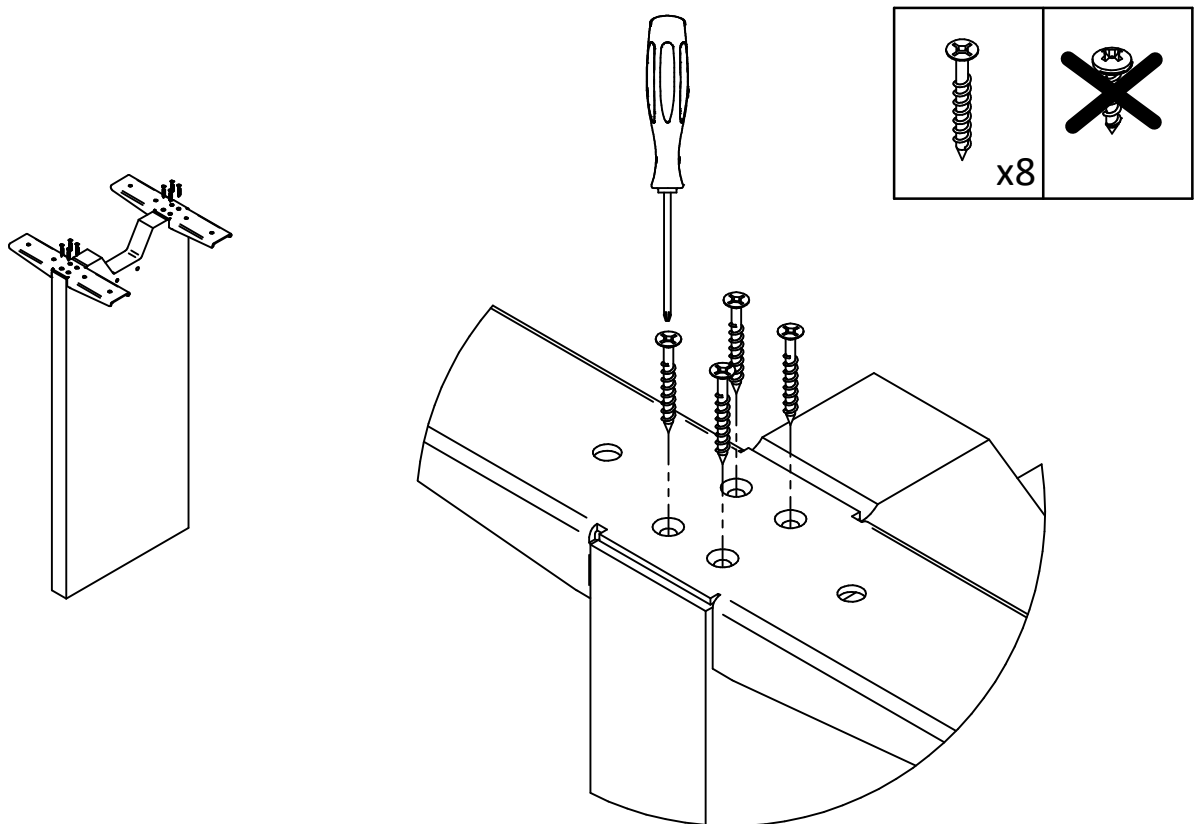

# 11

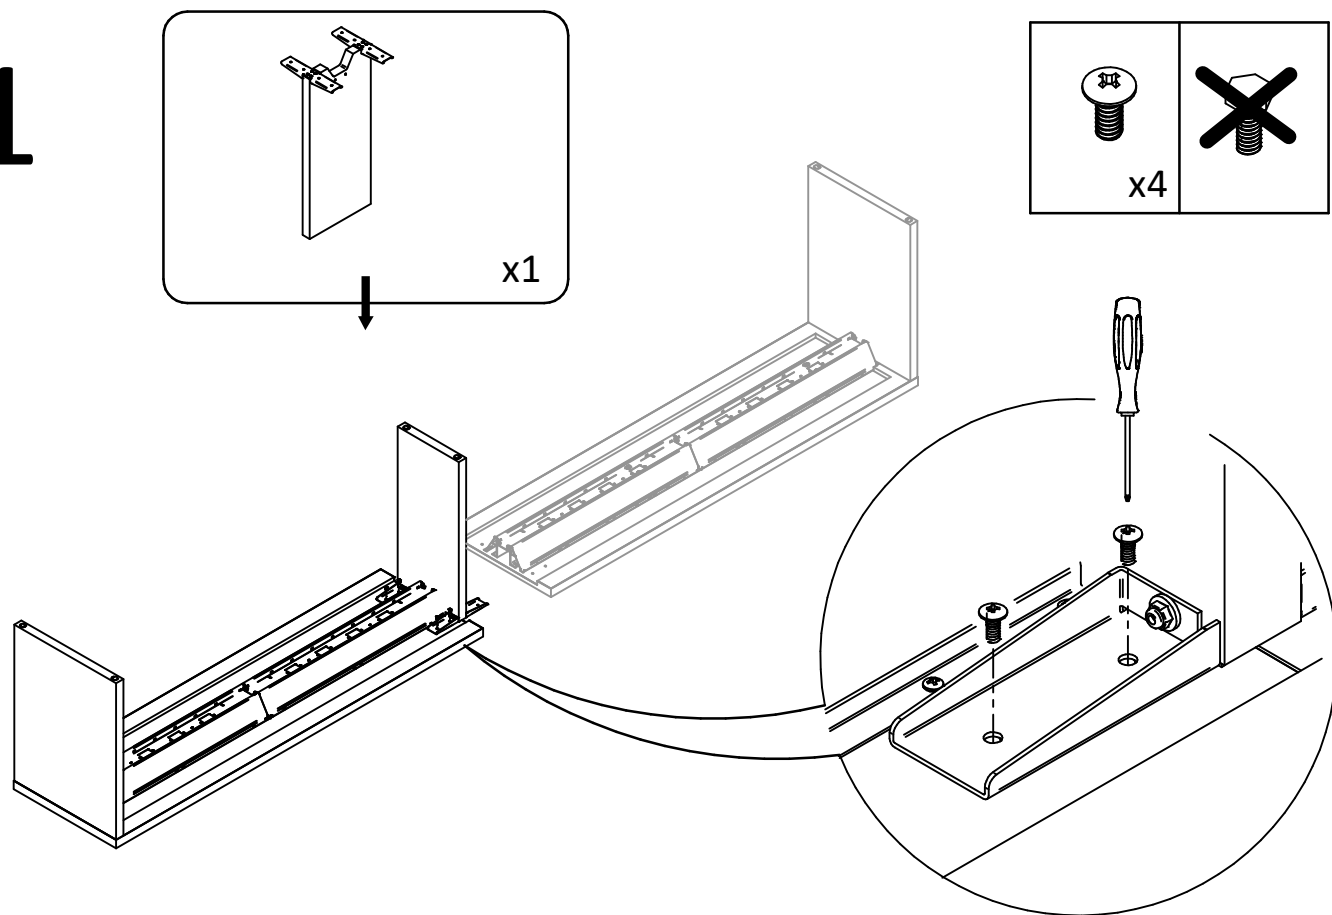


# 12

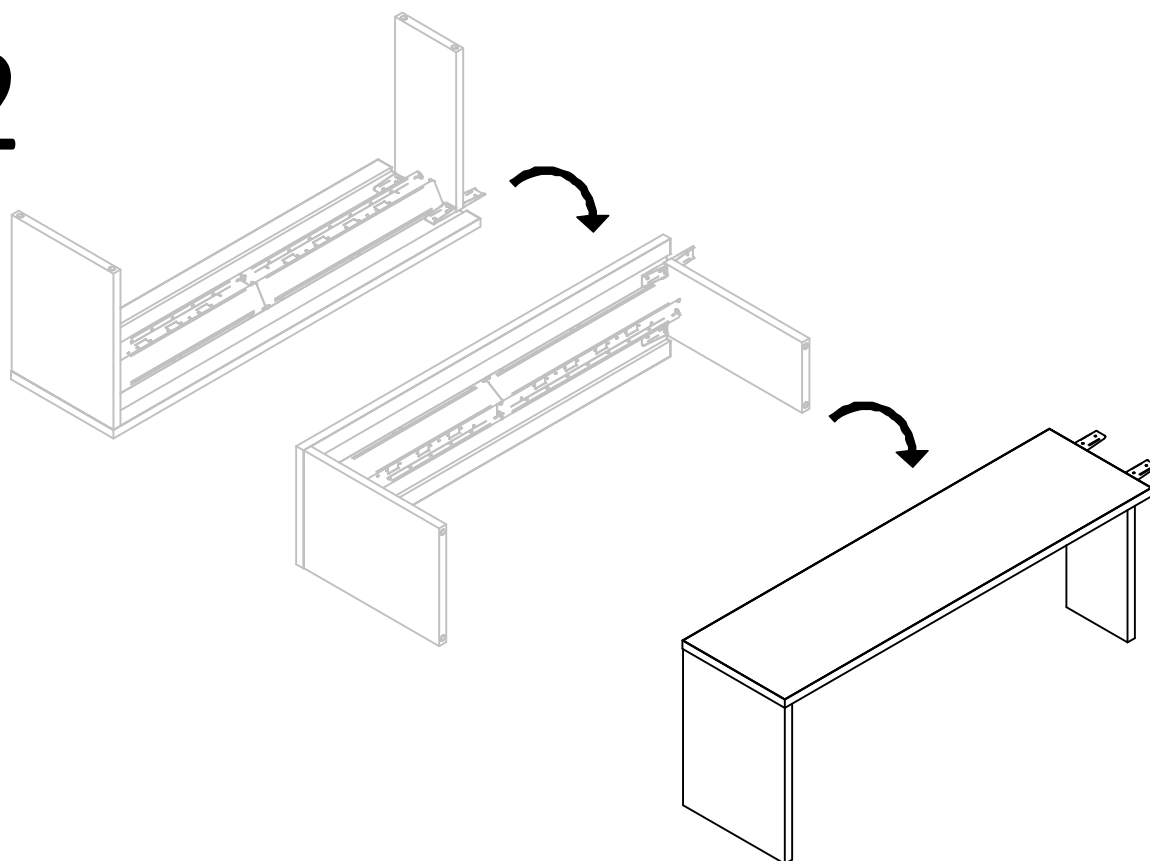



 x3

# 13




 x3

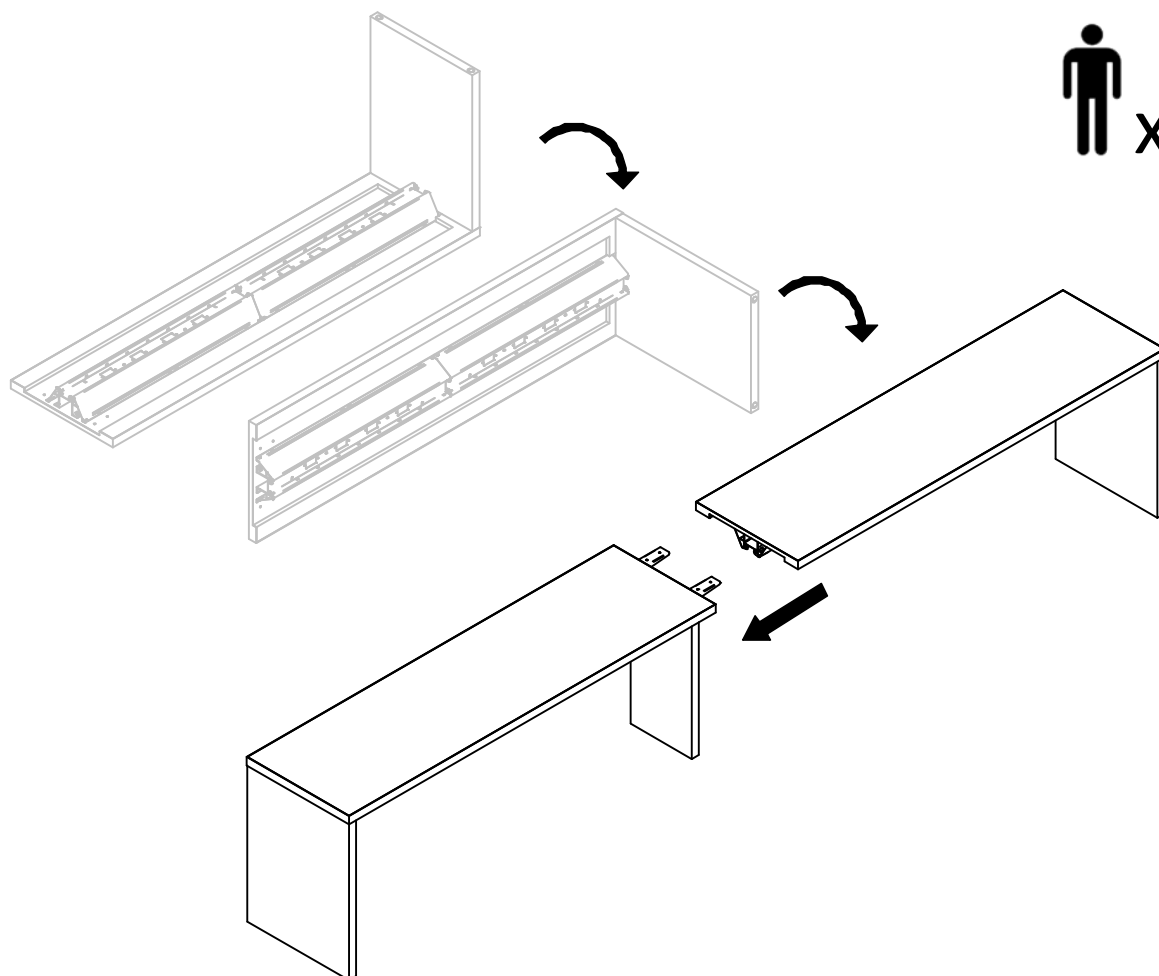



# 14

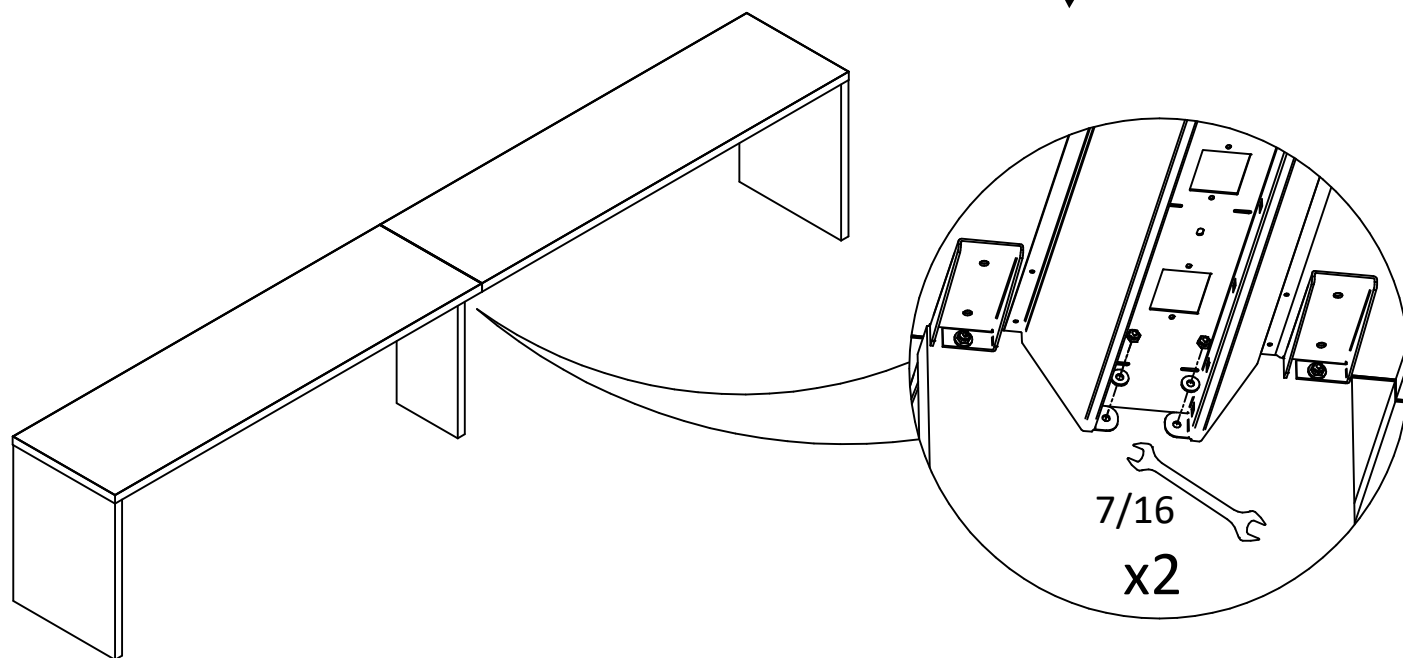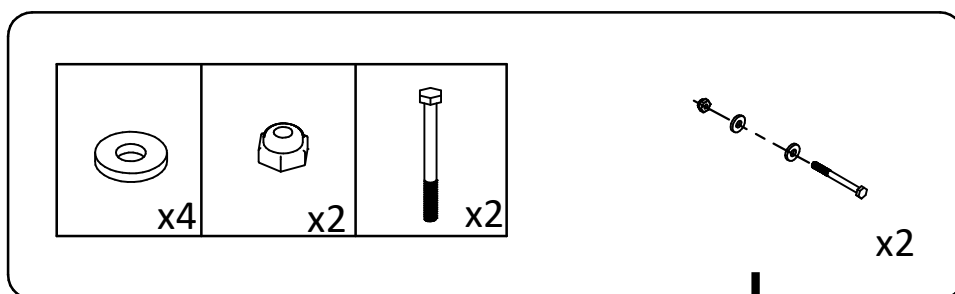

# 15

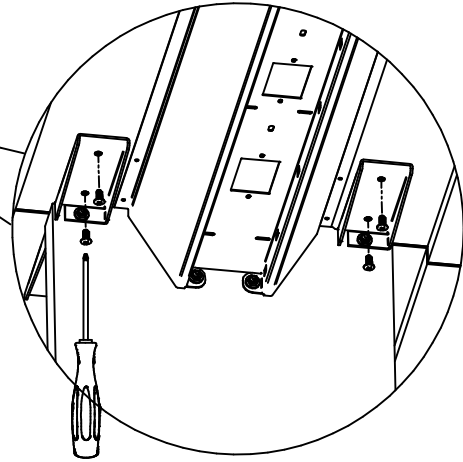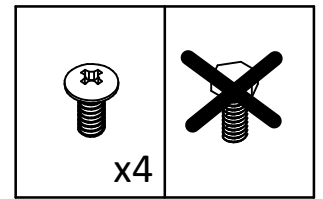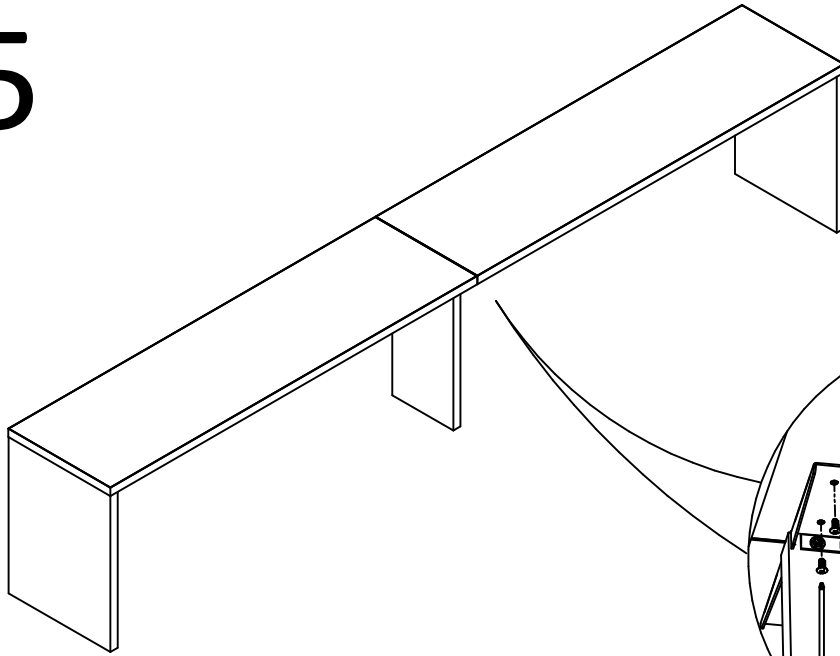

# 16

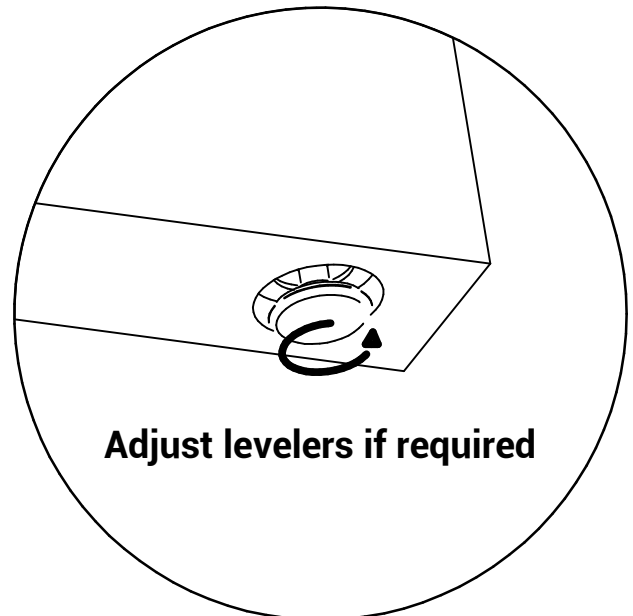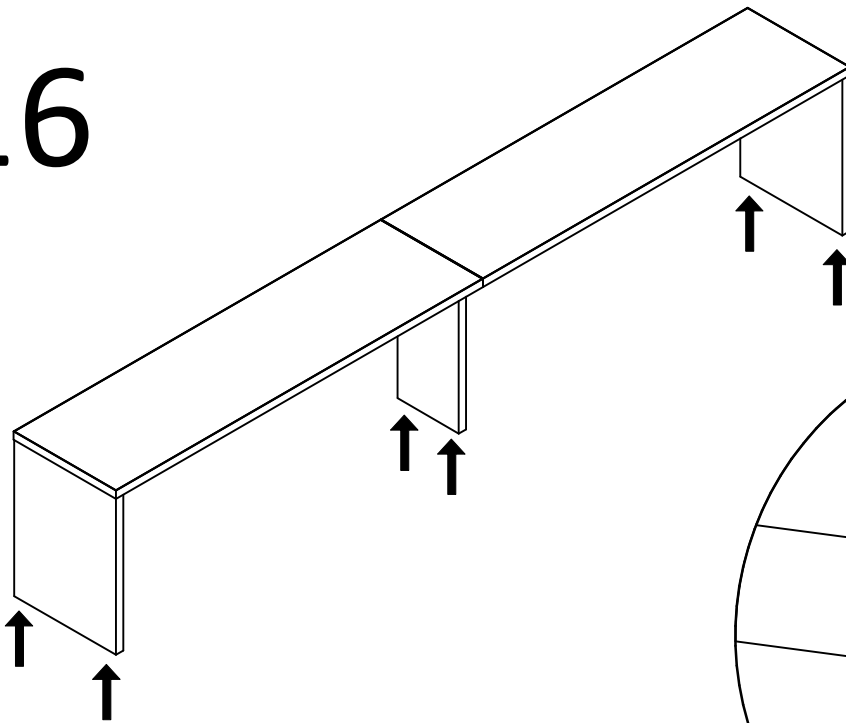


**Spec Furniture Inc.**

165 City View Drive, Toronto ON, M9W 5B1


**P:** 416.246.5540 | **F:** 416.246.5547

**E:** [specit@specfurniture.com](mailto:specit@specfurniture.com) | [specfurniture.com](http://specfurniture.com)

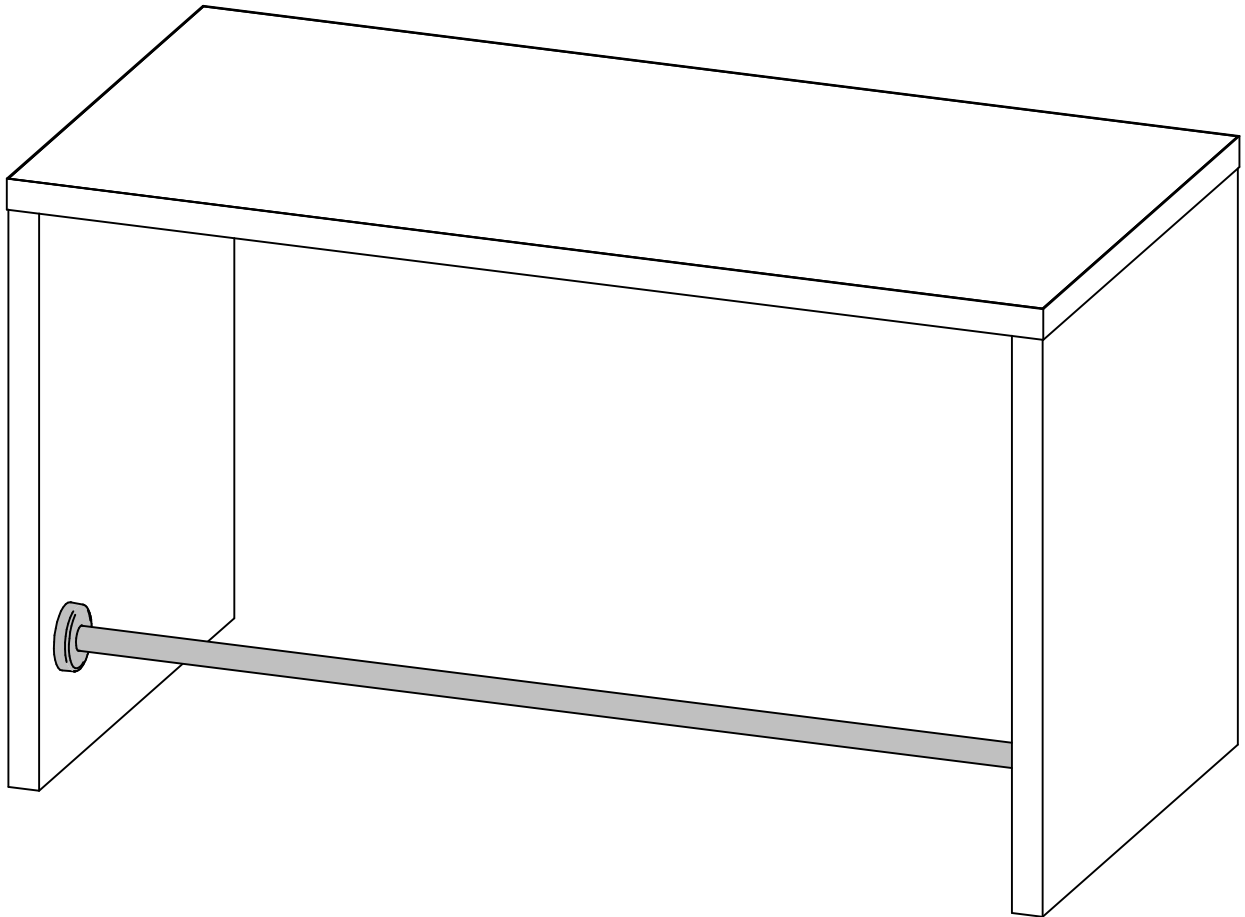


# ENDZONE



## Footrest

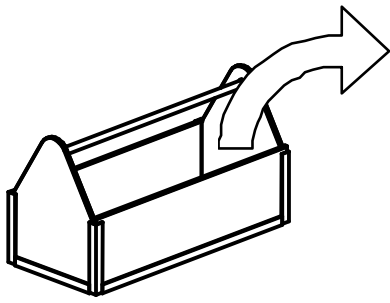

#3



3/16

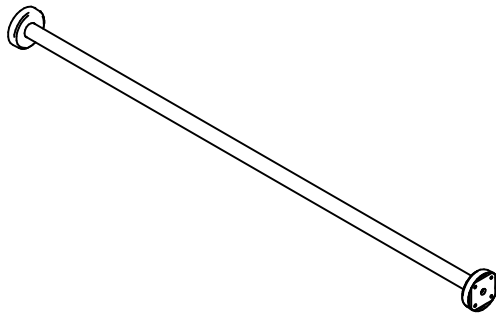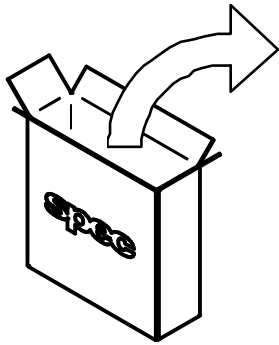


x1

HDW-0210  
1/4-20 x 1-1/4" Machine screw




x8

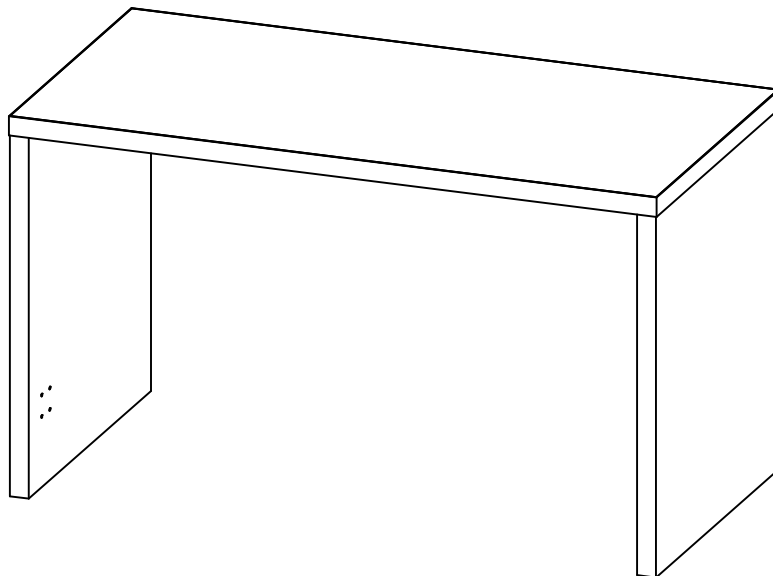





# 1

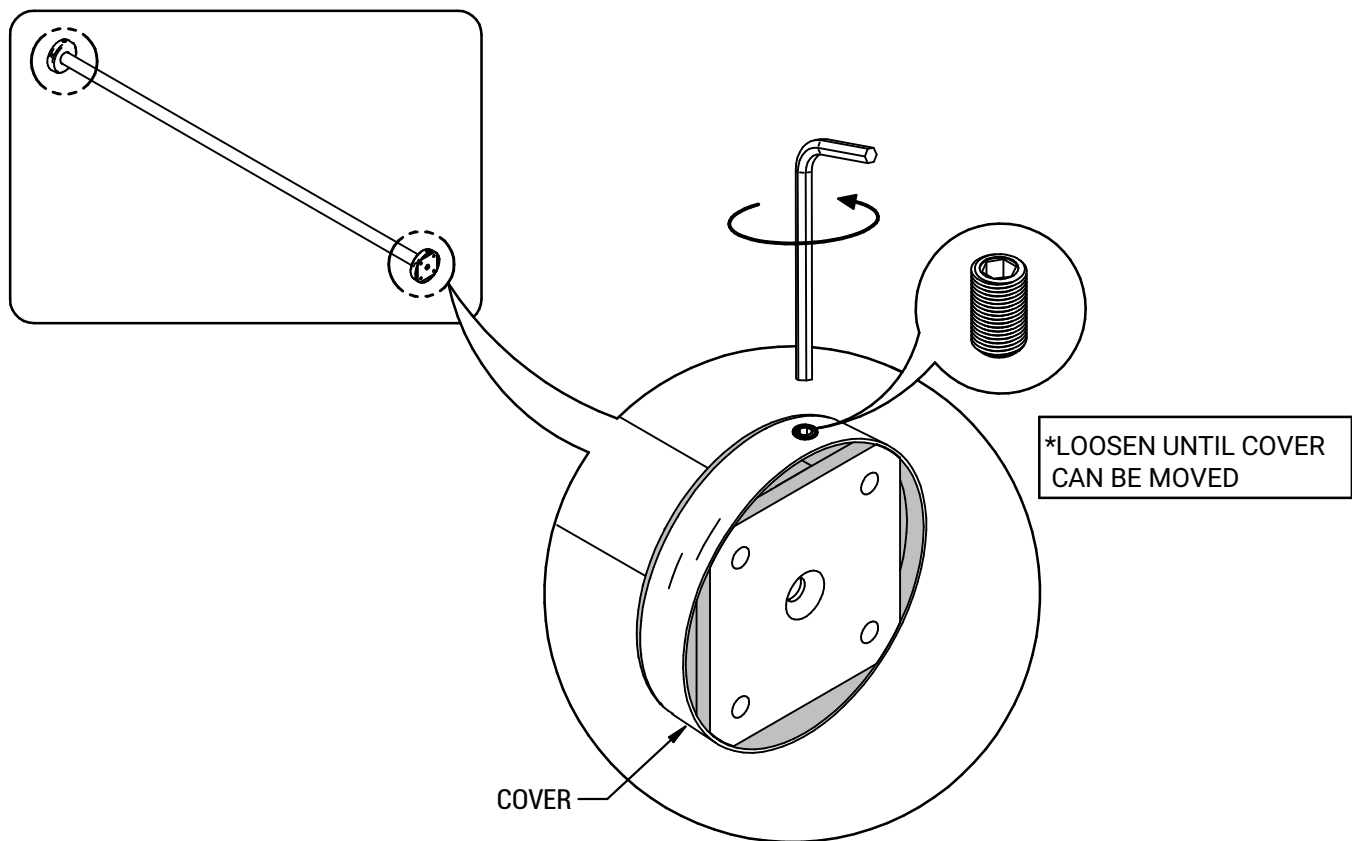


# 2


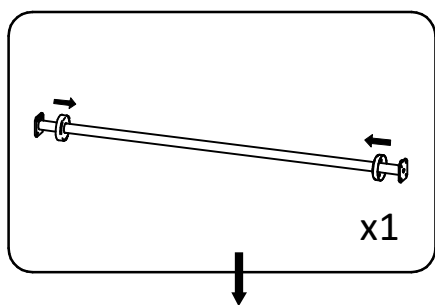


 x2

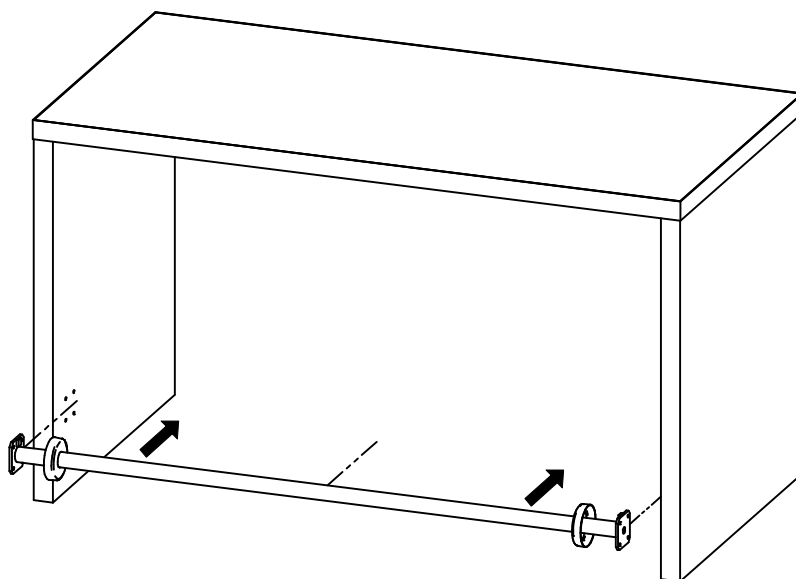


# 3


 x2

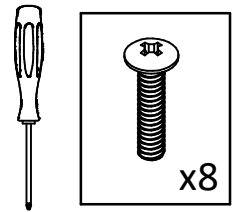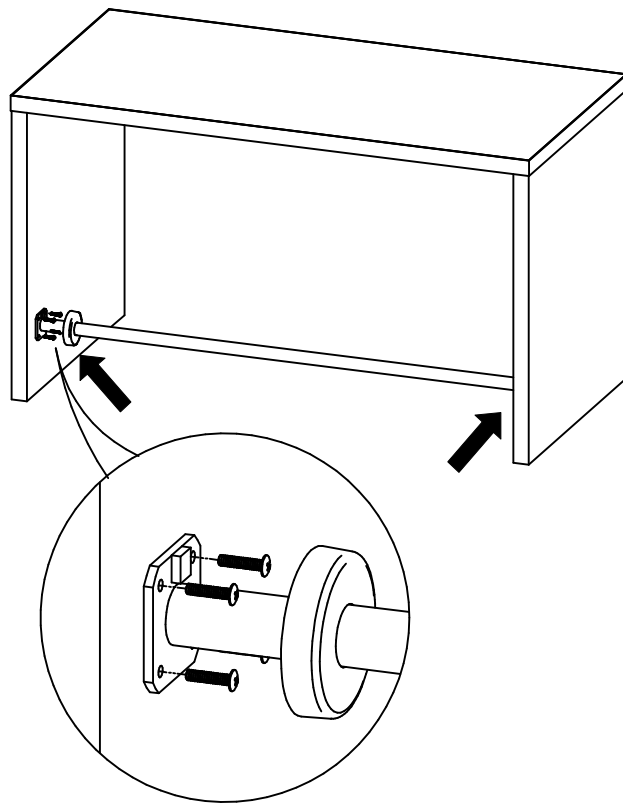


# 4

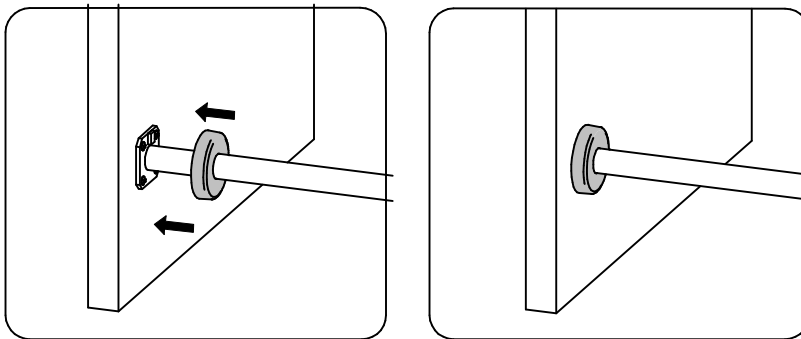




\*POSITION COVERS SO  
THAT SCREW IS ON  
THE BOTTOM

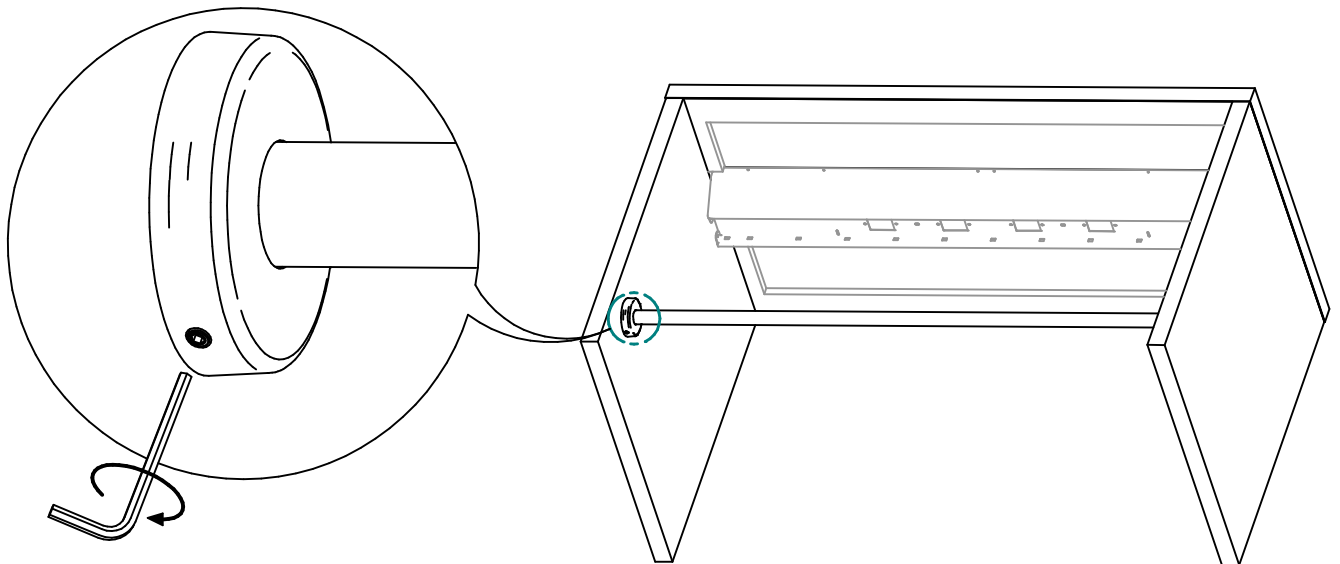






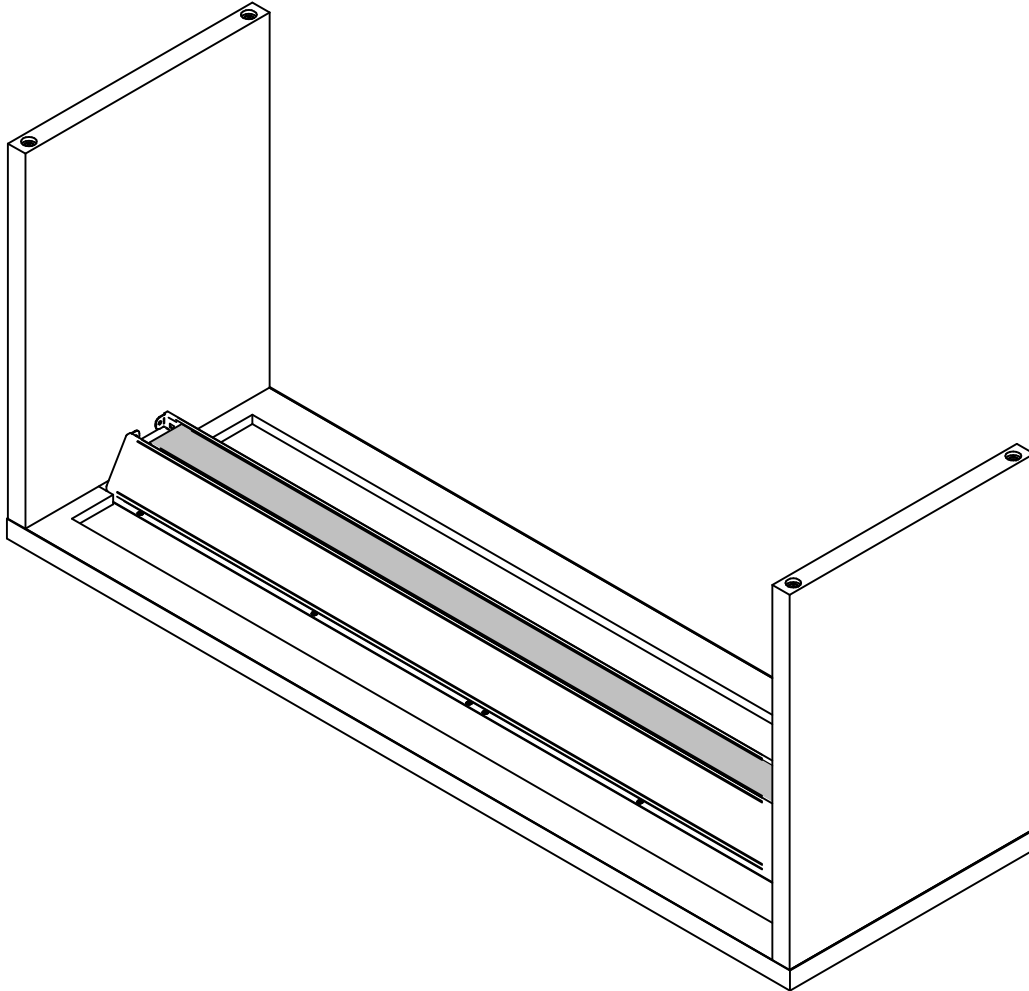


# ENDZONE

## Trough Cover

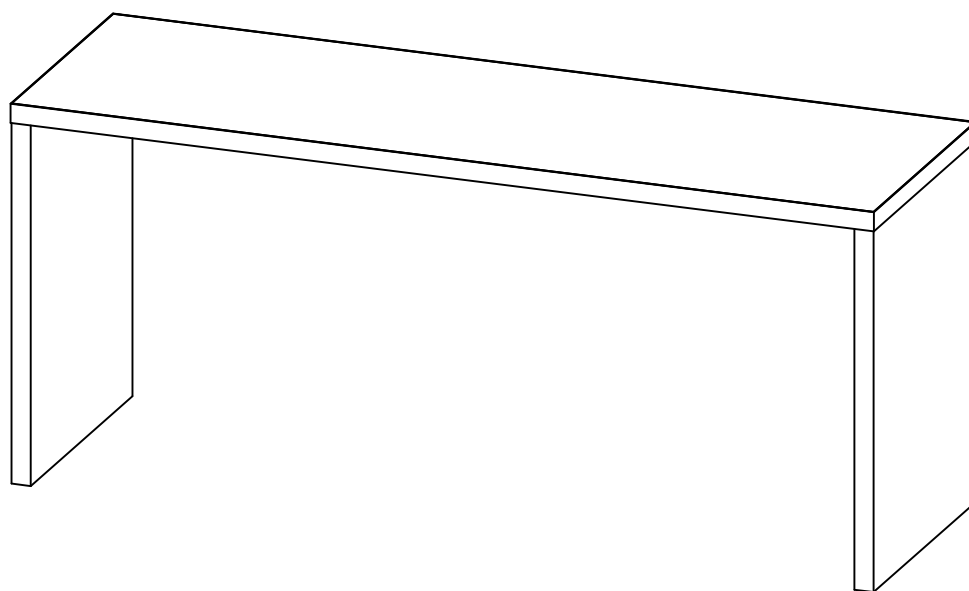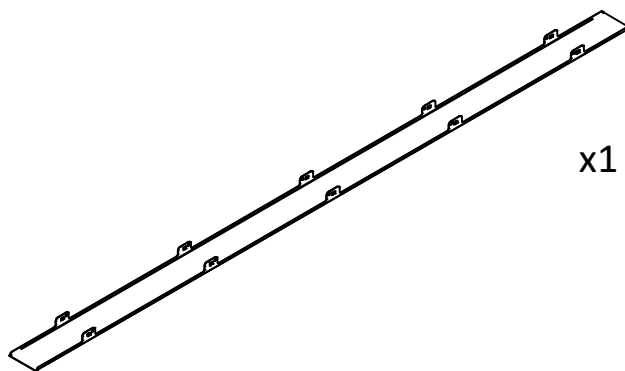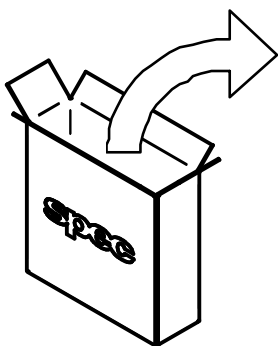

1

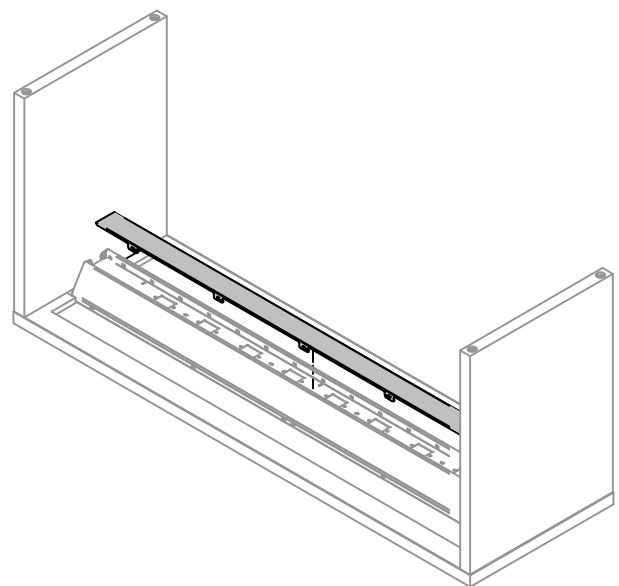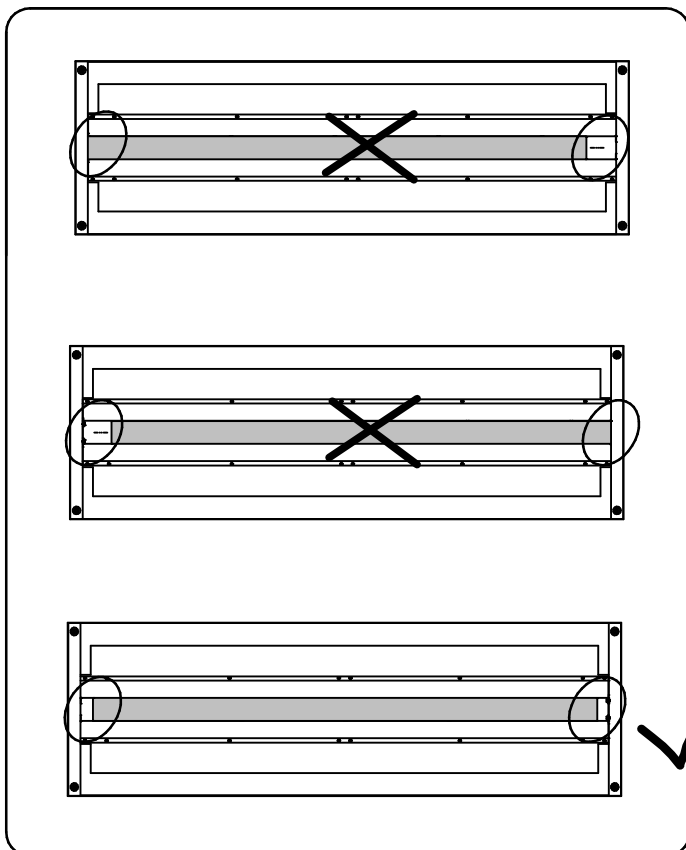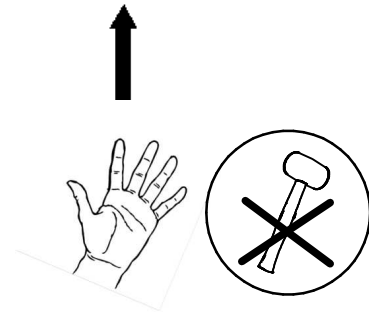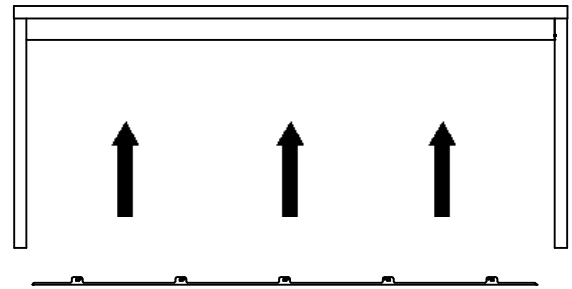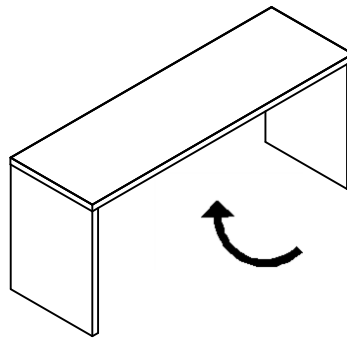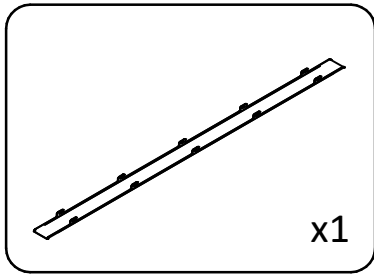


**Spec Furniture Inc.**

165 City View Drive, Toronto ON, M9W 5B1




**P:** 416.246.5540 | **F:** 416.246.5547

**E:** [specit@specfurniture.com](mailto:specit@specfurniture.com) | [specfurniture.com](http://specfurniture.com)

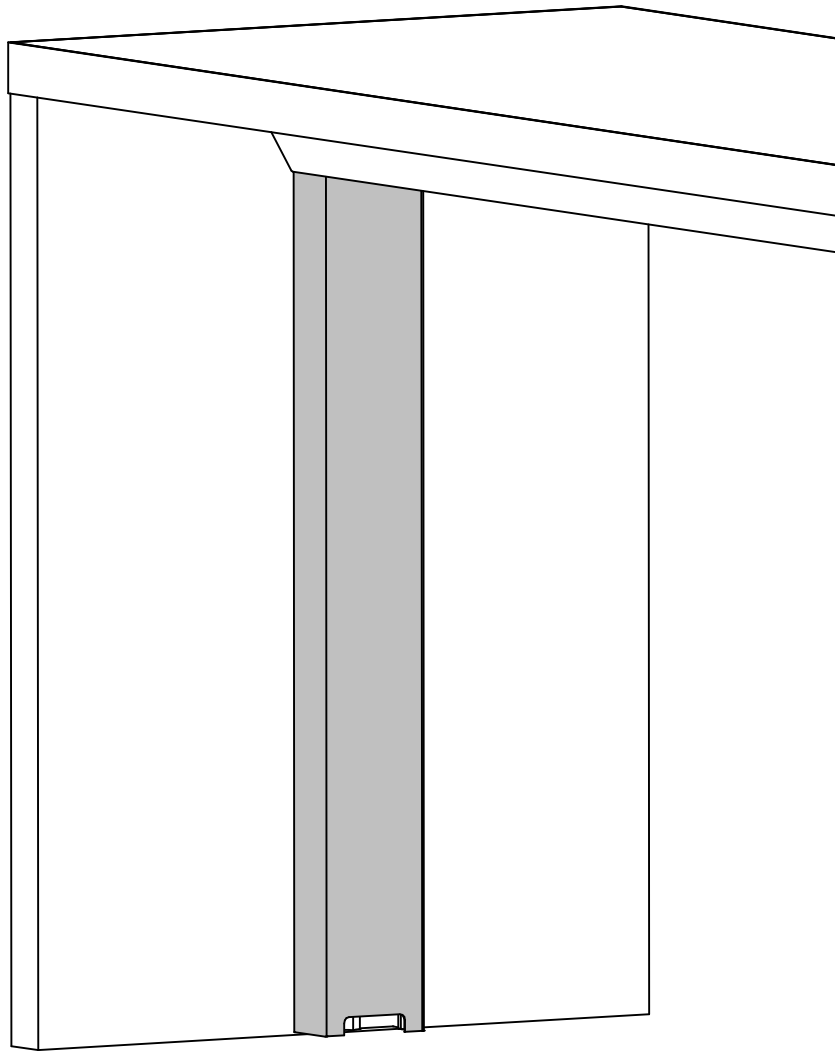

# ENDZONE

## Vertical Wire Manager

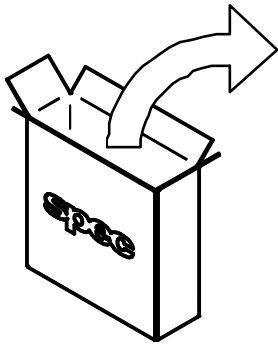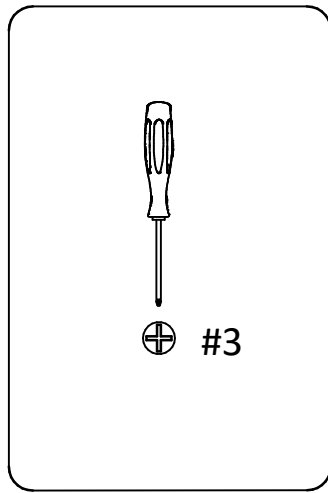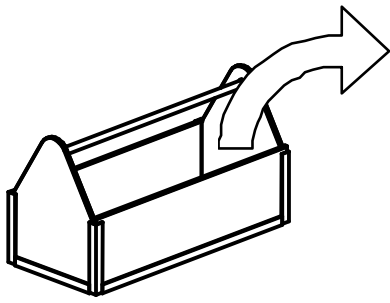

x1




x1

HDW-0028  
#12 x 7/8 Wood Screw






x6



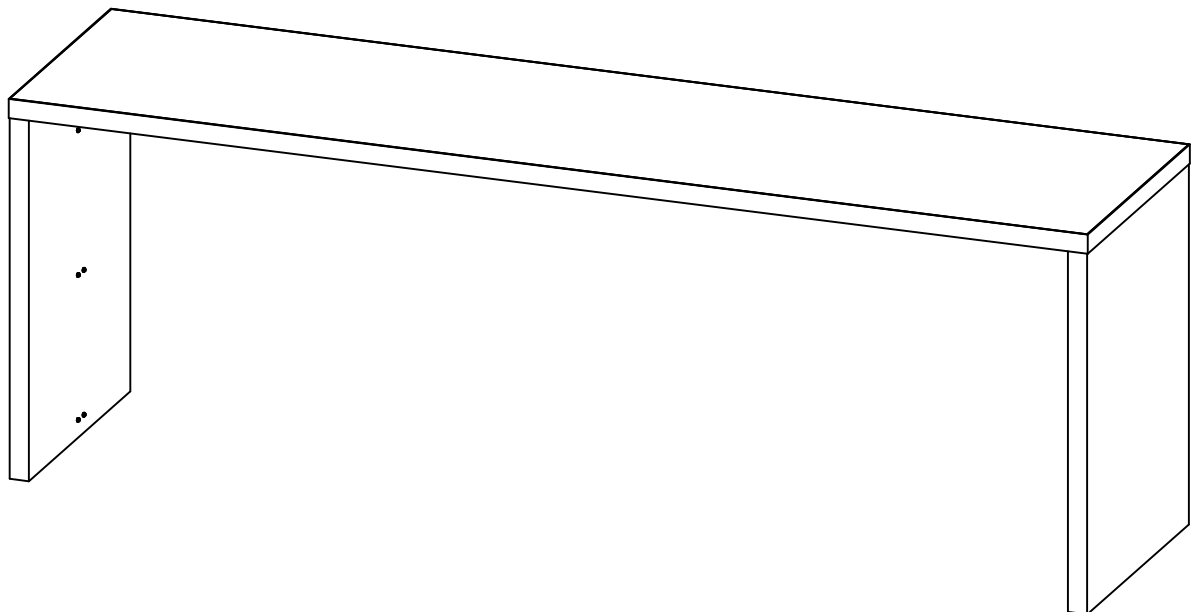







# 1

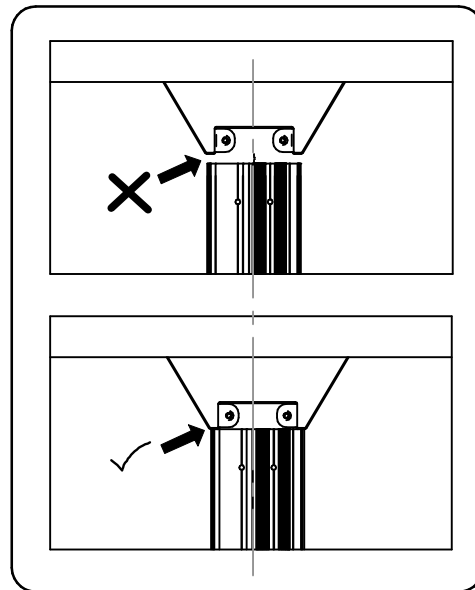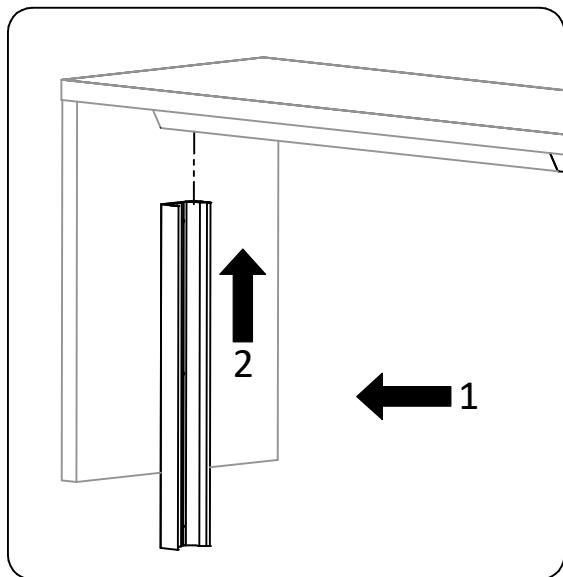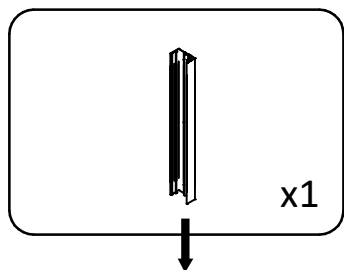

# 2

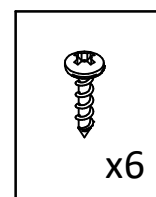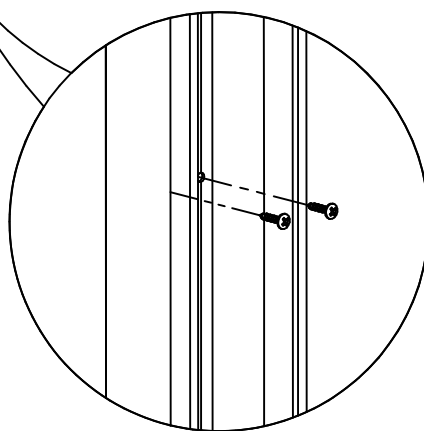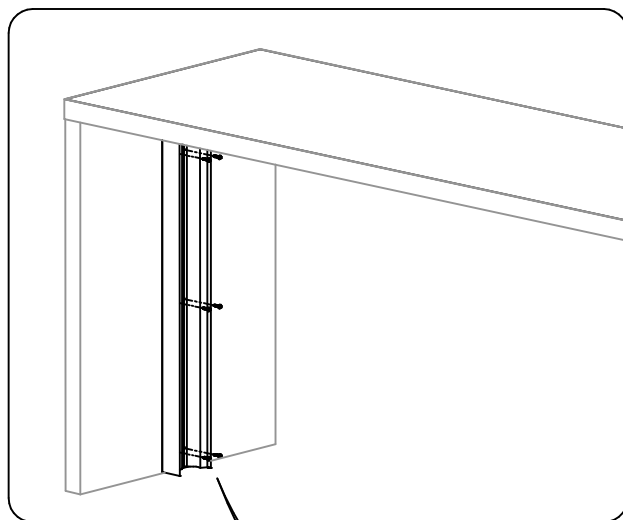

# 3

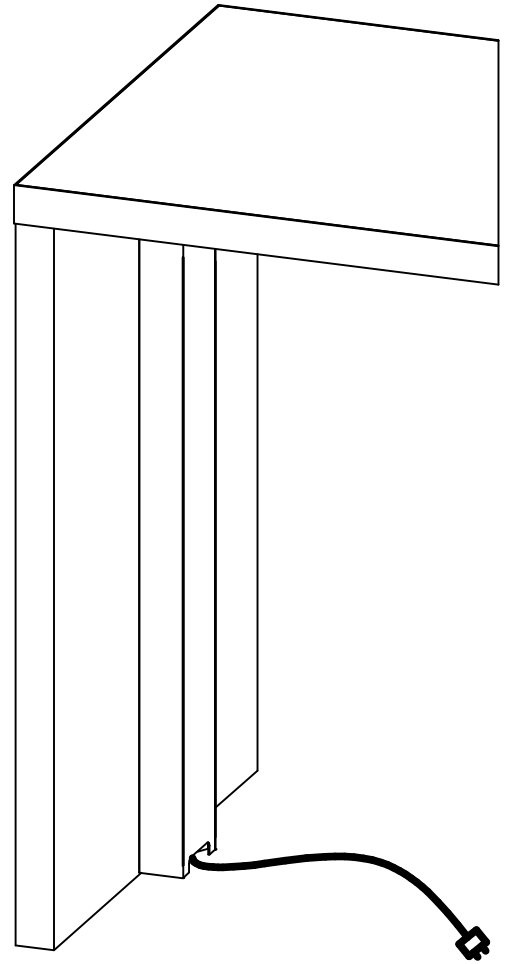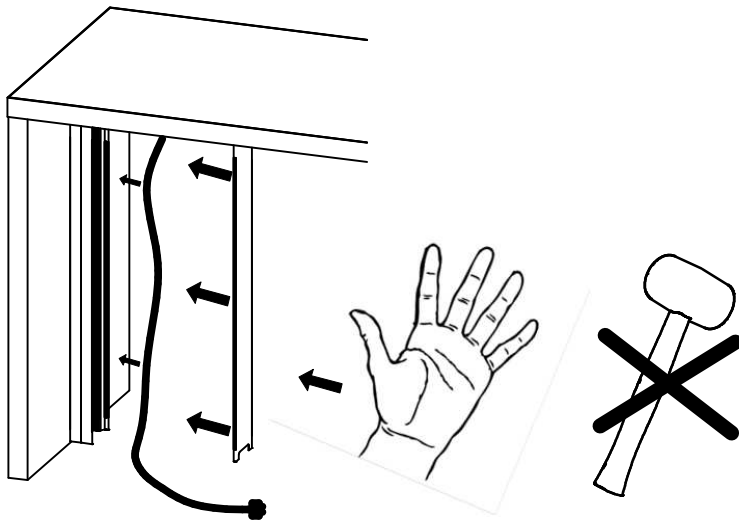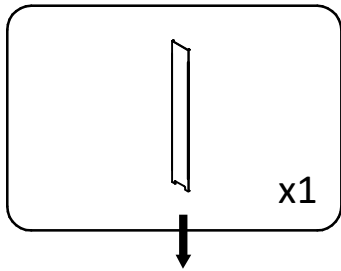



**Spec Furniture Inc.**

165 City View Drive, Toronto ON, M9W 5B1

**P:** 416.246.5540 | **F:** 416.246.5547


**E:** [specit@specfurniture.com](mailto:specit@specfurniture.com) | [specfurniture.com](http://specfurniture.com)

! PLEASE READ BEFORE INSTALLING TROUGH.

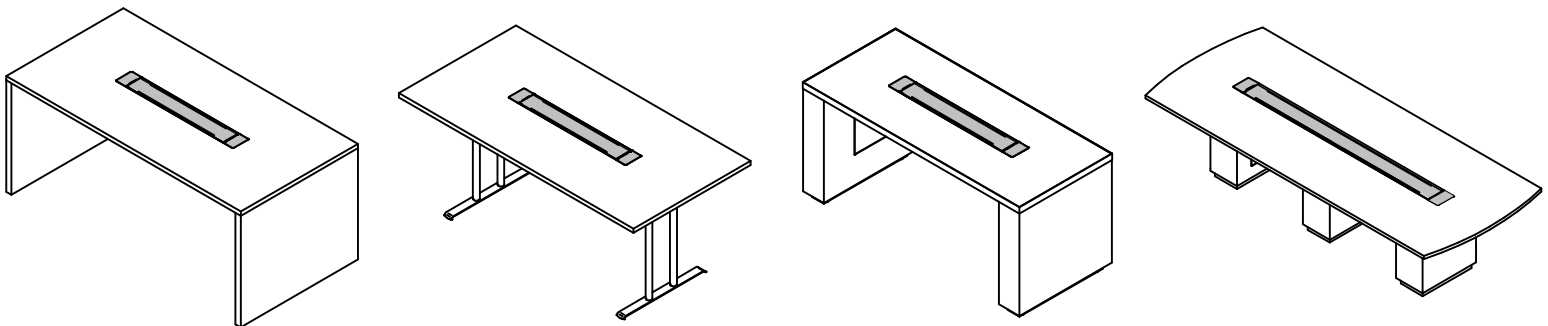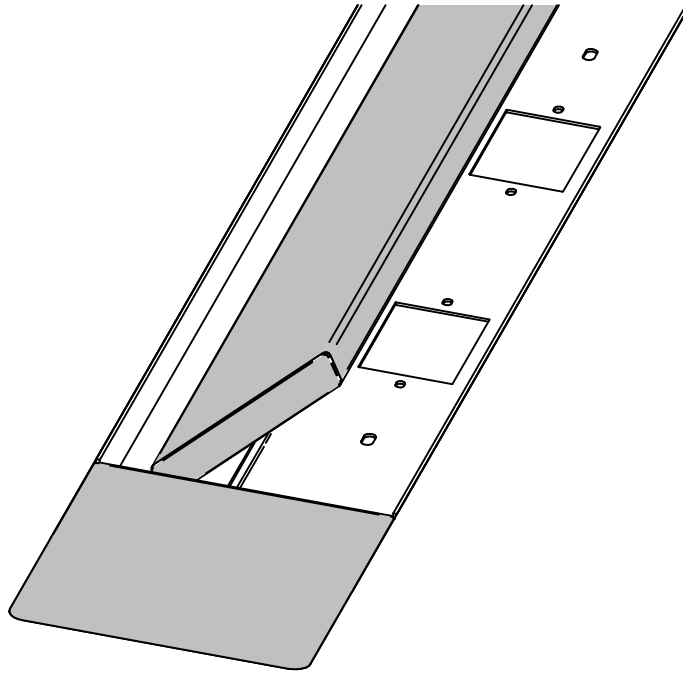


# ENDZONE/TAILGATE



## Power Access Door

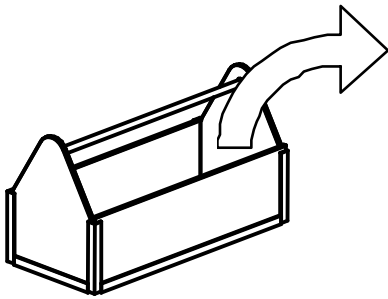


#3



7/16"

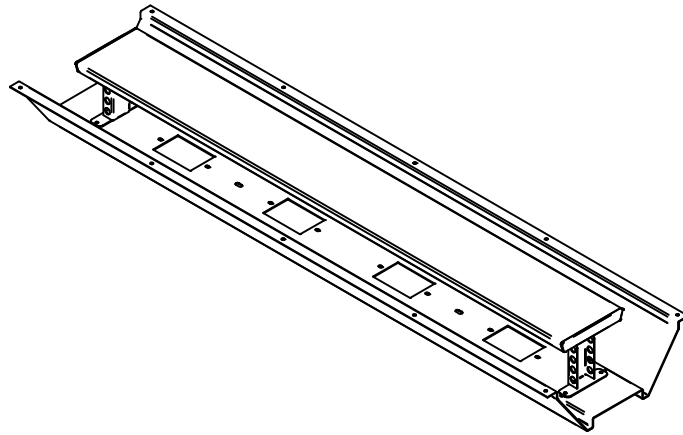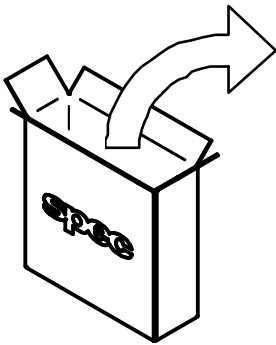

x1

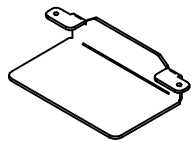

x2

HDW-0028  
#12 x 7/8" Wood Screw






x12

HDW-0009  
1/4-20 x 5/8" Bolt




x4


# 1

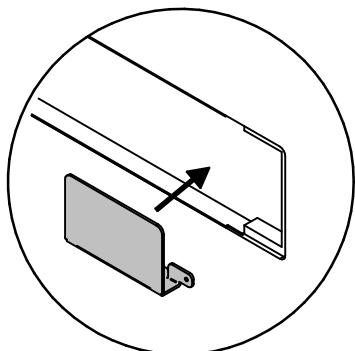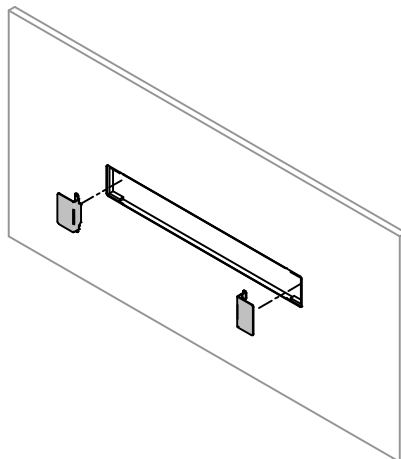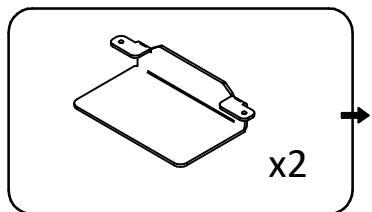

A




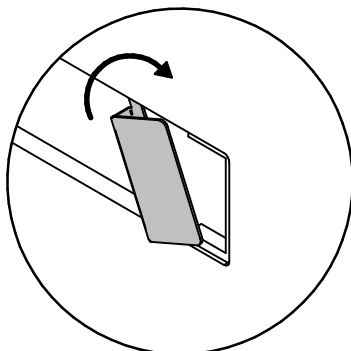


B

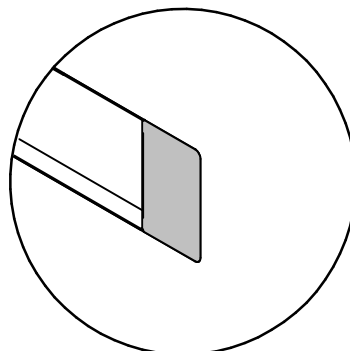




C

# 2

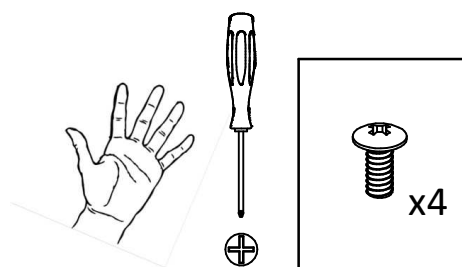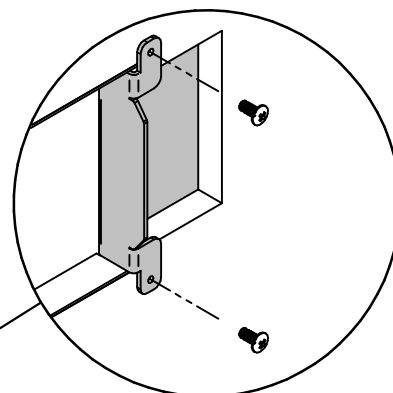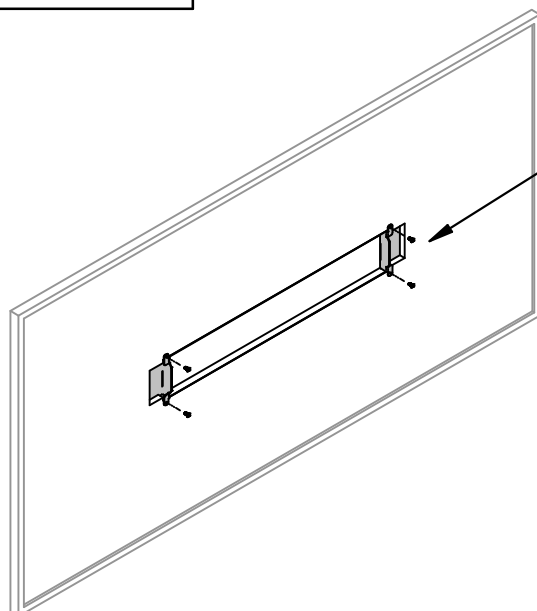
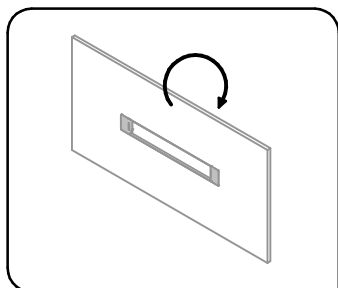


\*Do not over-tighten.


# 3

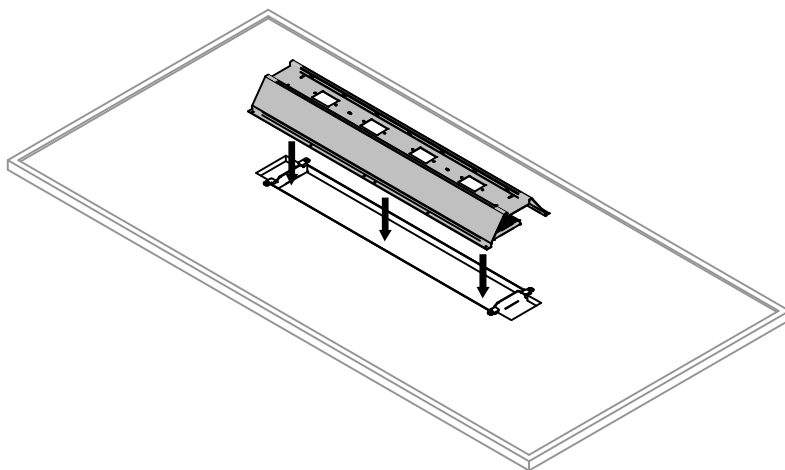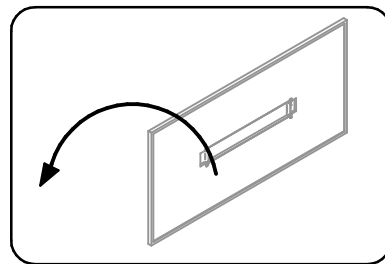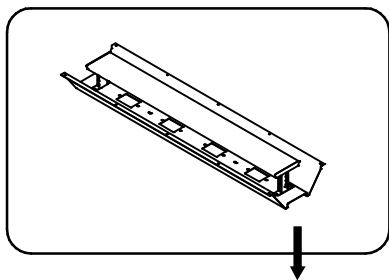


# 4

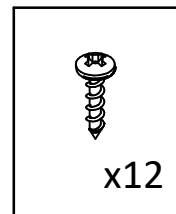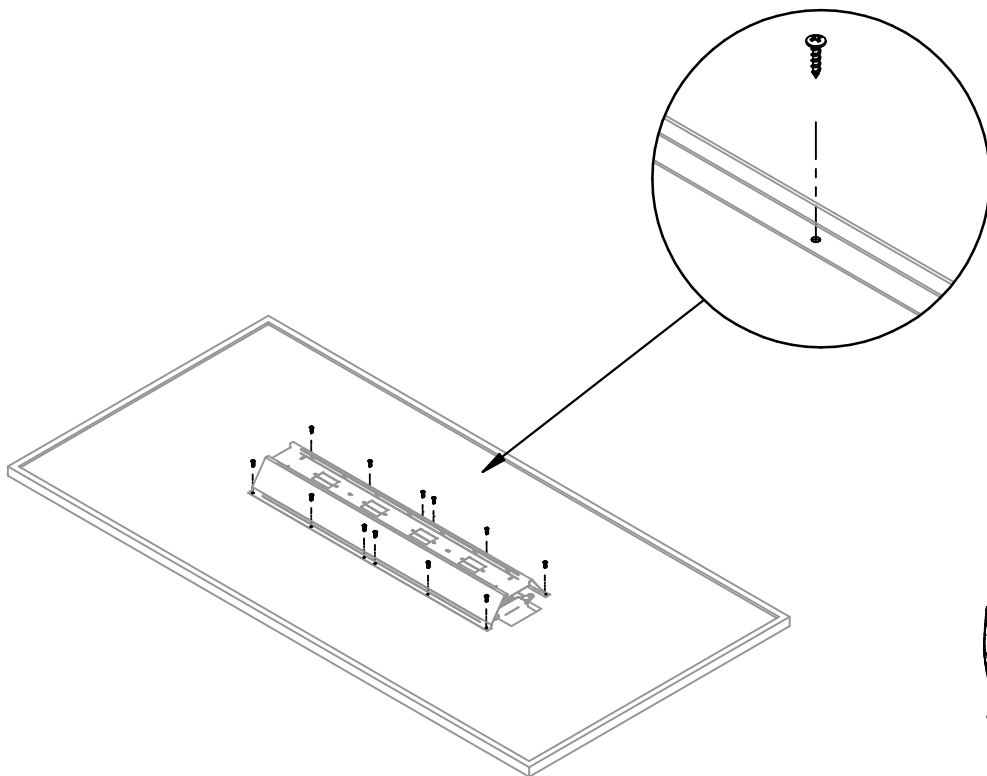

## VERTICAL FINE ADJUSTMENT

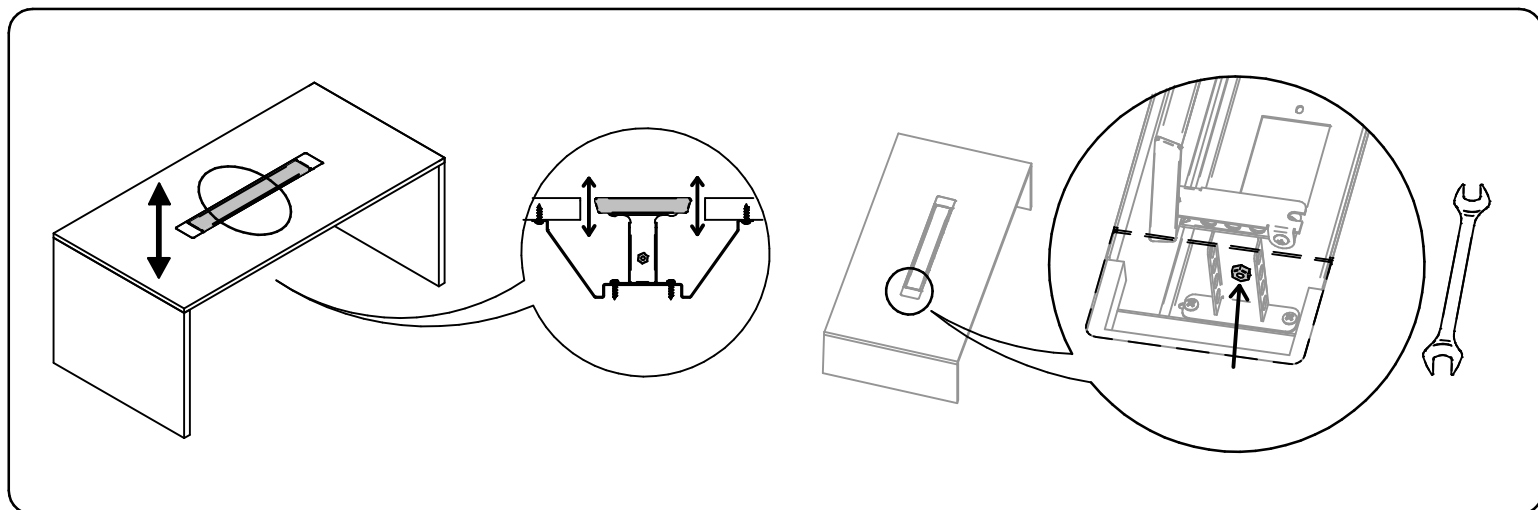

## HORIZONTAL FINE ADJUSTMENT

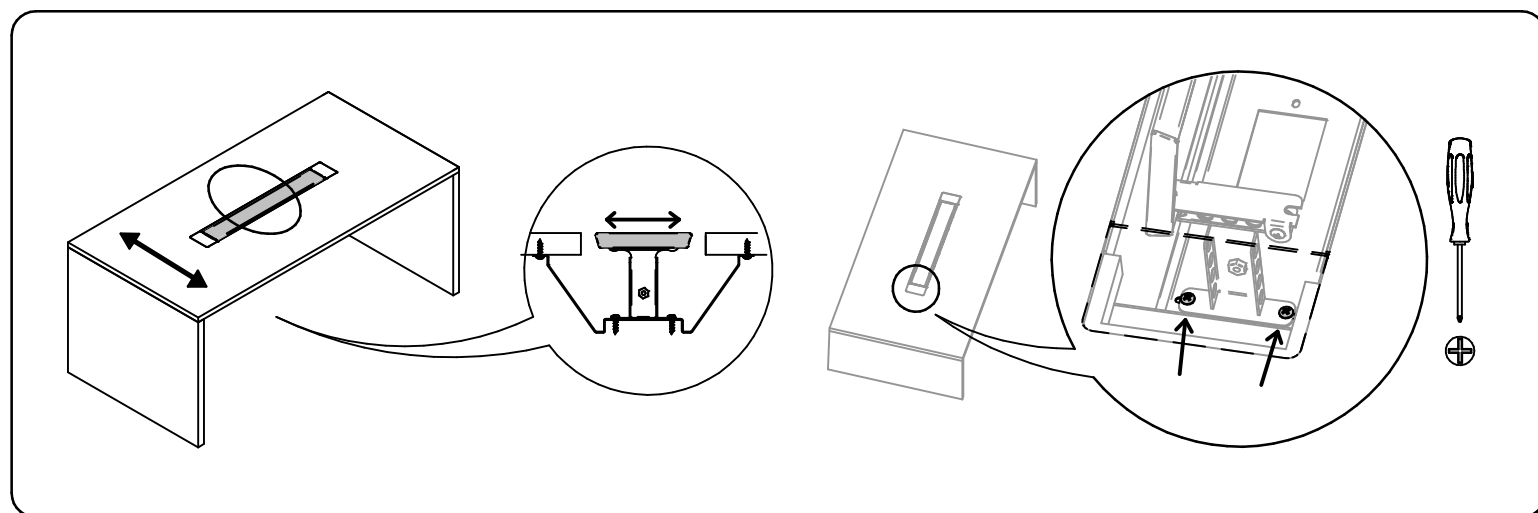

**Spec Furniture Inc.**

165 City View Drive, Toronto ON, M9W 5B1

**P:** 416.246.5540 | **F:** 416.246.5547

**E:** [specit@specfurniture.com](mailto:specit@specfurniture.com) | [specfurniture.com](http://specfurniture.com)