

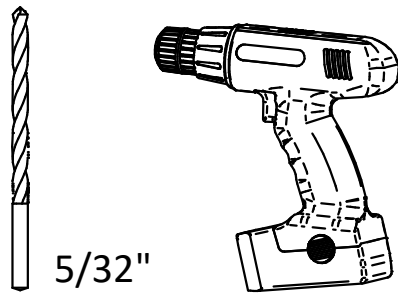


TAILOR HD


Bottom Inserts Field Installation
For Single Seat Chairs and Bariatric Seat Chairs

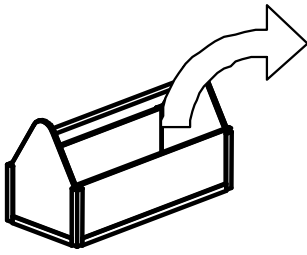



5/32"

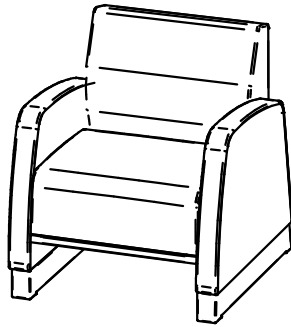


STANDARD SEAT CHAIR

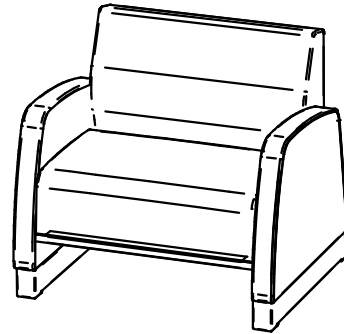

BARIATRIC SEAT CHAIR

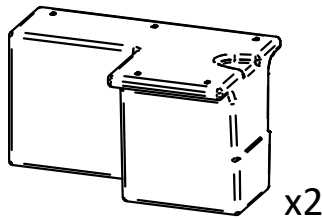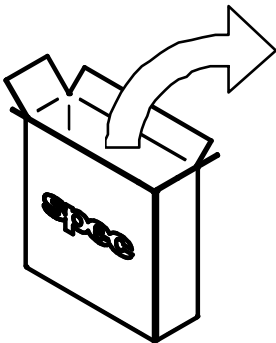

x2

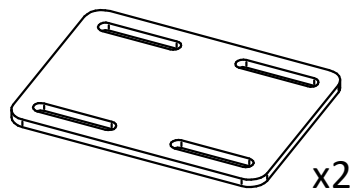

x2

HDW-0047
#10 x 1" T/P Sheet Metal Screw



x16

HDW-0153
1/4" Flat Washer




x16


HDW-0551
Tamperproof Bit




x1

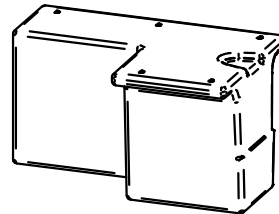

x2

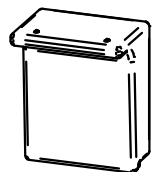

x2

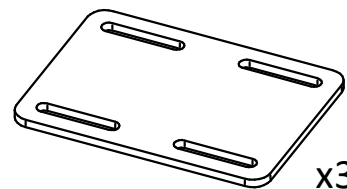

x3

HDW-0047
#10 x 1" T/P Sheet Metal Screw



x24

HDW-0153
1/4" Flat Washer



x24


HDW-0551
Tamperproof Bit



x1


Note: Do not over-tighten fasteners.

1

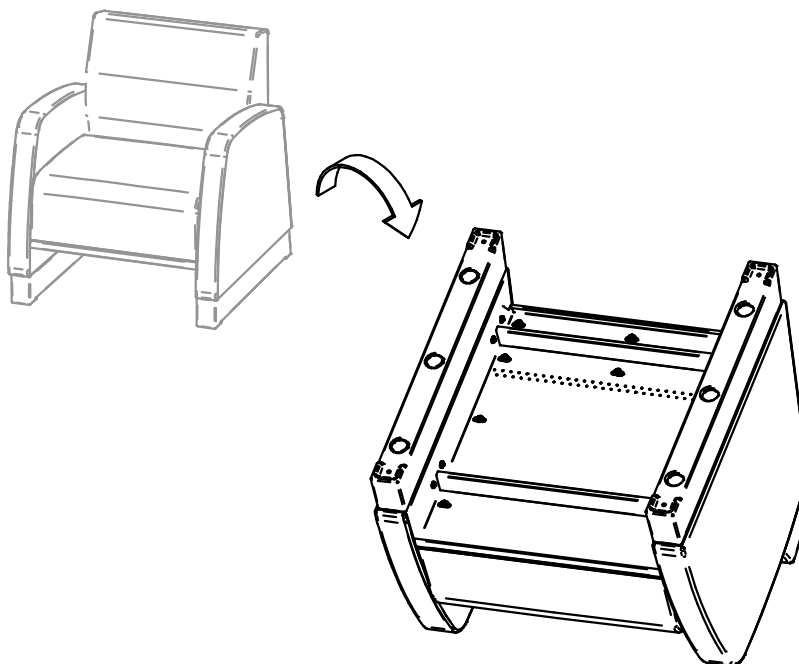


2

STANDARD CHAIR

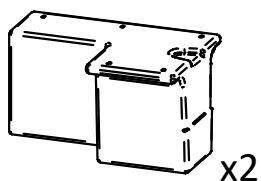


x2






BARIATRIC CHAIR

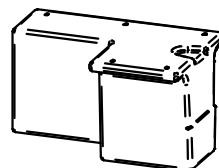

x2









x2

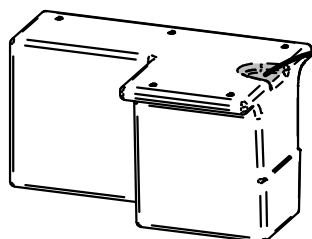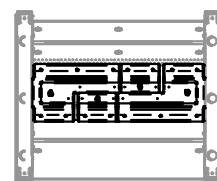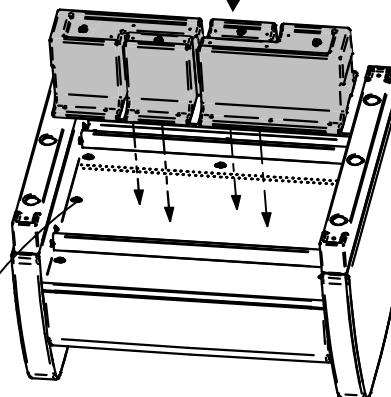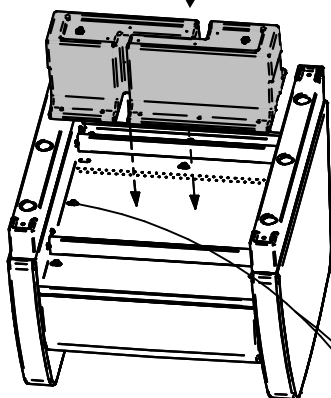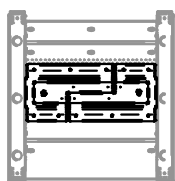


3

Slide inserts into place; ensure tight fit against chair feet.
Use diagram to ensure gaps are correct.

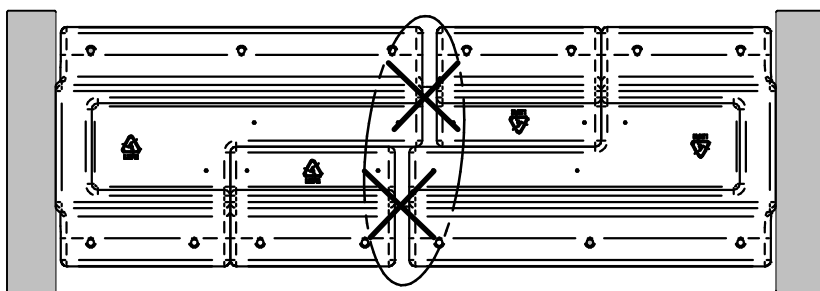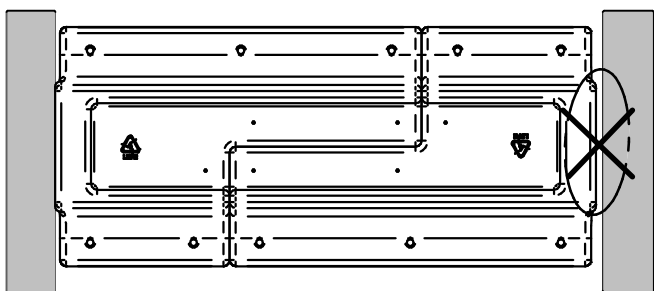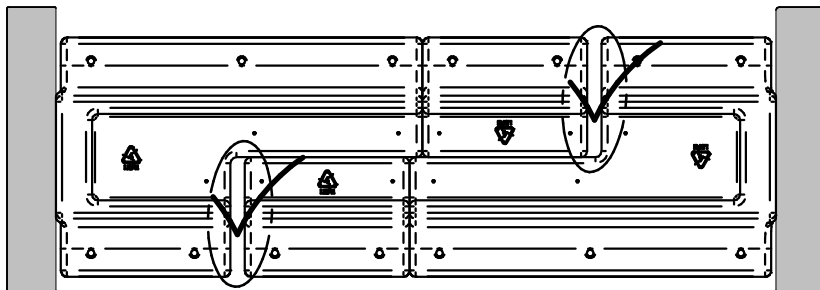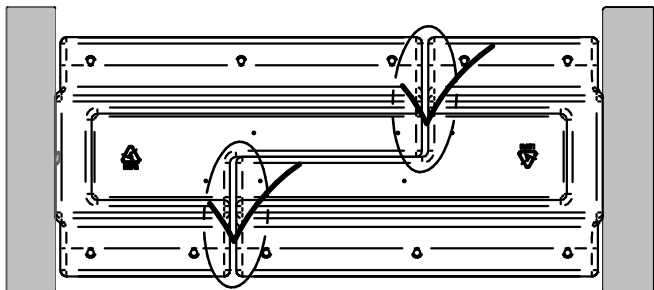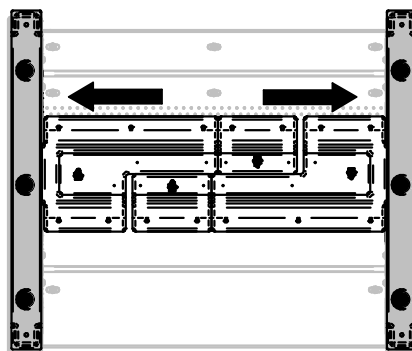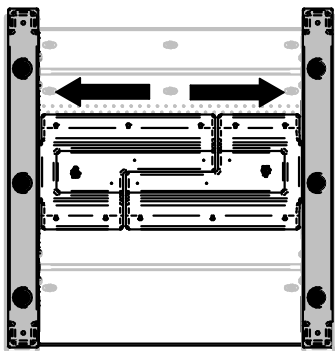


4




Drill pilot holes in steel frame, while ensuring tight and correct location of inserts.

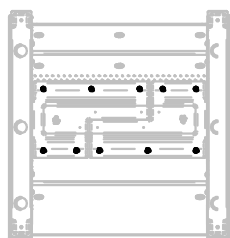




x10

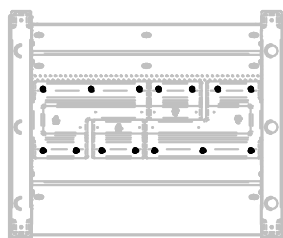




x14

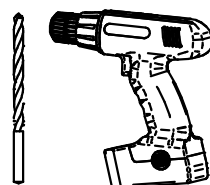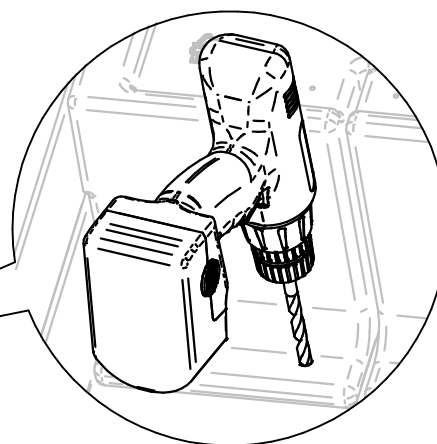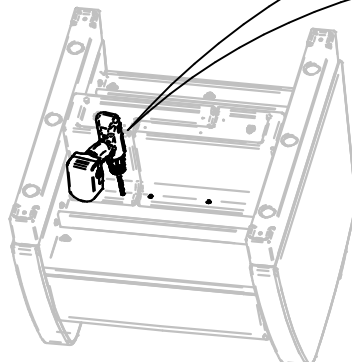



5

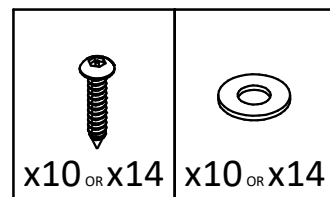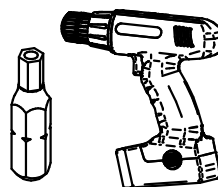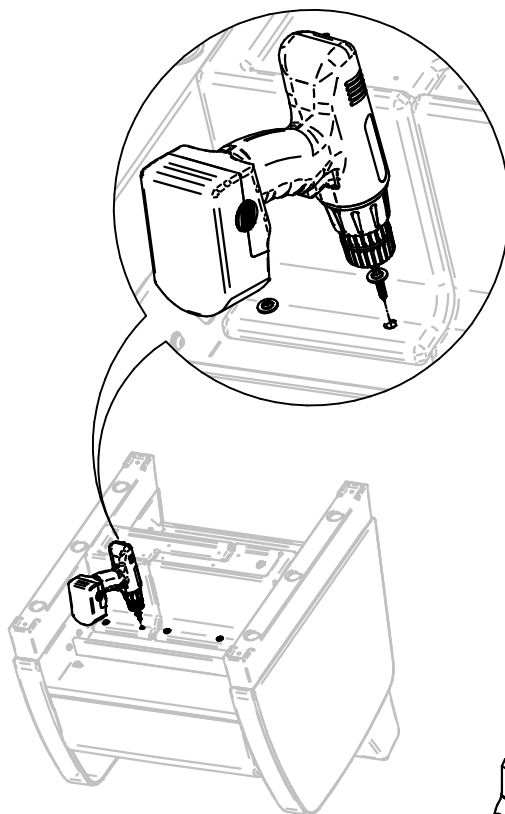

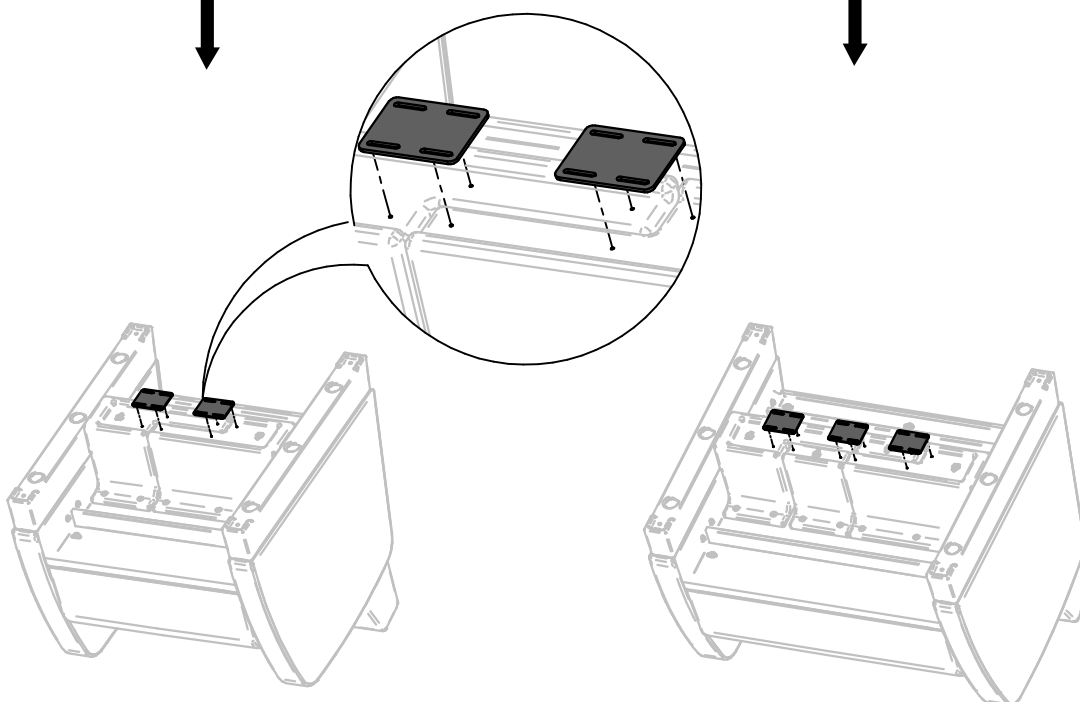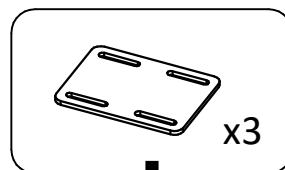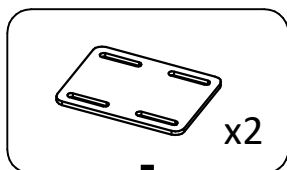

6

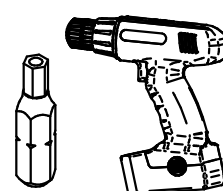
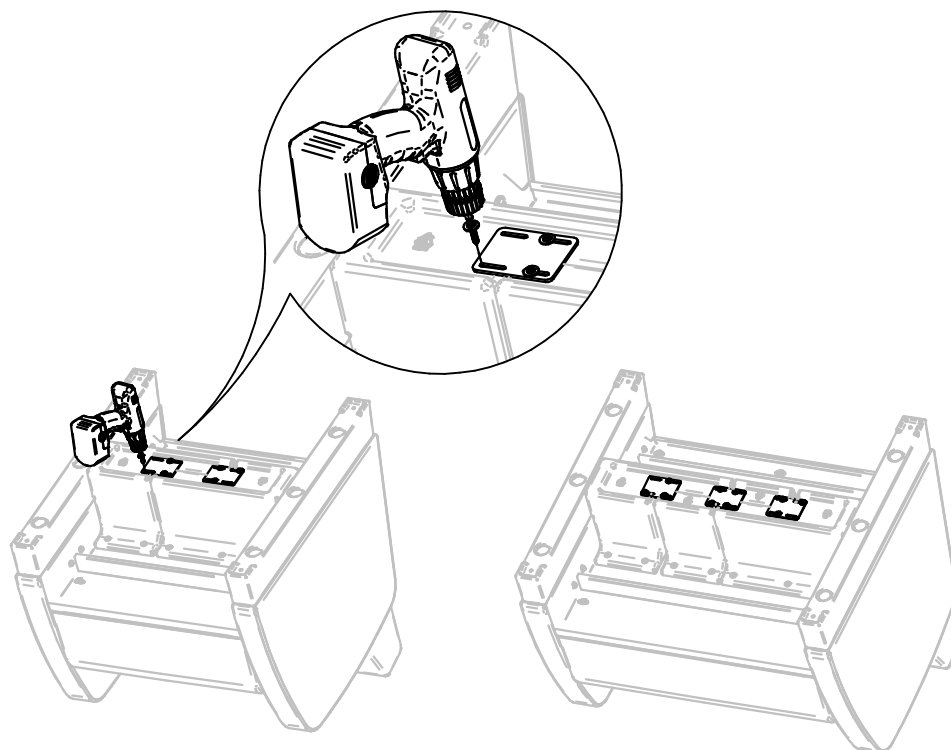


7



	
x6 OR x11	x6 OR x11

8

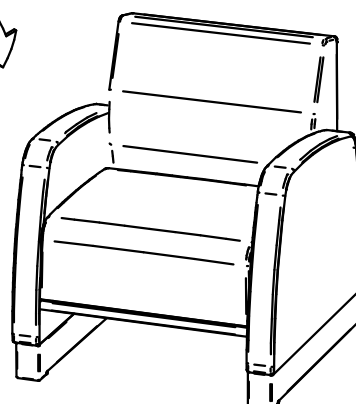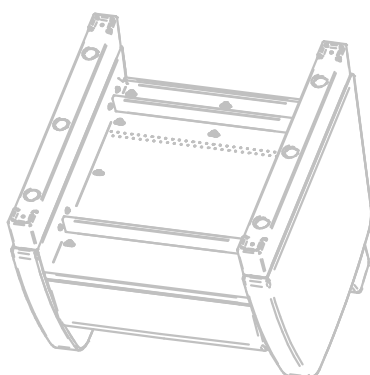

Spec Furniture Inc.

165 City View Drive, Toronto ON, M9W 5B1

P: 416.246.5540 | **F:** 416.246.5547

E: specit@specfurniture.com | specfurniture.com